



[Manuals.plus](#) /

> [Livoo](#) /

> Livoo DOH135 Robot Vacuum Cleaner User Manual

Livoo DOH135

Livoo DOH135 Robot Vacuum Cleaner User Manual

Model: DOH135

1. INTRODUCTION

Thank you for choosing the Livoo DOH135 Robot Vacuum Cleaner. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before operating the device and retain it for future reference.

The Livoo DOH135 is designed to simplify your cleaning routine, offering autonomous cleaning with an 800 Pa suction power, a rechargeable lithium-ion battery, and high-performance filtration. Its compact design allows it to reach difficult areas, adapting to various floor types.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances. This includes, but is not limited to:

- Read all instructions before use.
- Do not operate the vacuum cleaner near water or wet surfaces.
- Do not allow children to operate the vacuum cleaner. Supervise children and pets when the device is in operation.
- Do not vacuum flammable or combustible materials, or anything that is burning or smoking.
- Ensure the power adapter is compatible with your local power supply.
- Do not use the vacuum cleaner if it is damaged or malfunctioning. Contact customer support for assistance.
- Only use manufacturer-recommended attachments and accessories.
- Unplug the device before cleaning or performing maintenance.
- The battery is non-replaceable by the user. Do not attempt to open the battery compartment.

3. PACKAGE CONTENTS

Carefully unpack your Livoo DOH135 Robot Vacuum Cleaner and check that all items are present and in good condition. The package should contain:

- Livoo DOH135 Robot Vacuum Cleaner (White)
- Rechargeable Lithium-ion Battery (pre-installed or separate)

- Side Brushes (4 pieces, 2 for immediate use, 2 spares)
- Power Adapter / Charging Cable
- HEPA Filter (pre-installed)
- Cleaning Mop Pad
- User Manual



Figure 3.1: Included accessories for the Livoo DOH135 Robot Vacuum Cleaner.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Livoo DOH135 Robot Vacuum Cleaner.

4.1 Top View



Figure 4.1: Top view of the Livoo DOH135 Robot Vacuum Cleaner.

- **Start/Pause Button:** Press to begin or pause cleaning.
- **Dustbin Cover:** Lifts to access the dustbin.
- **Livoo Logo:** Brand identification.



Figure 4.2: Close-up of the Start button.



Figure 4.3: Dustbin access area.

4.2 Bottom View



Figure 4.4: Bottom view of the Livoo DOH135 Robot Vacuum Cleaner.

- **Side Brushes:** Collect dust and debris from edges and corners.
- **Driving Wheels:** Allow the robot to move across various surfaces.
- **Mop Pad Attachment:** Area for attaching the cleaning mop pad.
- **Sensors:** Detect cliffs and obstacles.

5. SETUP

5.1 Unpacking and Placement

1. Remove all packaging materials from the robot vacuum cleaner and its accessories.
2. Place the robot vacuum on a flat, open surface. Ensure there are no obstacles within 1 meter (3 feet) around the robot for optimal movement.

5.2 Installing Side Brushes

1. Turn the robot vacuum cleaner upside down.
2. Align the side brushes with the brush posts on the bottom of the robot.
3. Press down firmly until each brush clicks into place. Ensure they are securely attached.

5.3 Charging the Battery

1. Connect the power adapter to the charging port on the side of the robot vacuum cleaner.
2. Plug the other end of the adapter into a wall outlet.
3. Allow the robot to charge completely before its first use. The indicator light on the robot will change to indicate a full charge. A full charge typically takes several hours.

The Livoo DOH135 is equipped with a lithium-ion battery, providing up to 70 minutes of cleaning time on a single charge.

6. OPERATING INSTRUCTIONS

6.1 Starting a Cleaning Cycle

1. Ensure the robot is fully charged and the side brushes are installed.
2. Clear the area of any large obstacles, loose cables, or small items that could entangle the robot.
3. Press the 'START' button on the top of the robot. The robot will begin its cleaning cycle.

6.2 Pausing and Resuming

- To pause cleaning, press the 'START' button once during operation.
- To resume cleaning, press the 'START' button again.

6.3 Stopping a Cleaning Cycle

To stop the robot completely, press and hold the 'START' button until the robot powers off or returns to standby mode.

6.4 Cleaning Performance

- The robot operates with an 800 Pa suction power, effectively removing dirt, crumbs, and pet hair.
- It is designed to adapt to various floor types, including hard floors and carpets.
- The operating noise level is approximately 67 dB, ensuring quiet operation.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your robot vacuum cleaner.

7.1 Emptying the Dustbin

1. Lift the dustbin cover on the top of the robot.
2. Remove the dustbin from its compartment.
3. Open the dustbin and empty its contents into a trash bin. The dustbin has a capacity of 500 milliliters.
4. Close the dustbin and reinsert it into the robot.

7.2 Cleaning the HEPA Filter

1. After emptying the dustbin, remove the HEPA filter.
2. Tap the filter gently over a trash bin to remove loose dust and debris.
3. Do not wash the HEPA filter with water, as this can damage it.
4. Replace the filter back into the dustbin. Replace the HEPA filter every 3-6 months, depending on usage.

7.3 Cleaning Side Brushes

1. Periodically check the side brushes for tangled hair or debris.

2. Gently pull the brushes off their posts.
3. Remove any hair or debris. You may use a small brush or a pair of scissors to cut tangled hair.
4. Reattach the brushes, ensuring they click into place.

7.4 Cleaning Sensors and Wheels

- Wipe the cliff sensors and charging contacts on the bottom of the robot with a clean, dry cloth.
- Check the driving wheels for any trapped debris and clean as necessary.

8. TROUBLESHOOTING

If you encounter issues with your Livoo DOH135, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Robot does not start.	Low battery; Power switch off; Obstruction.	Charge the robot fully; Ensure the power switch is on; Remove any obstructions.
Poor cleaning performance.	Full dustbin; Clogged filter; Worn side brushes.	Empty the dustbin; Clean or replace the HEPA filter; Clean or replace side brushes.
Robot gets stuck frequently.	Too many obstacles; Cliff sensors dirty.	Clear the cleaning area of cables, rugs, or small items; Clean the cliff sensors.
Unusual noise during operation.	Debris in brushes or wheels; Loose parts.	Clean side brushes and wheels; Check for any loose components.

If the problem persists after trying these solutions, please contact Livoo customer support.

9. SPECIFICATIONS

Feature	Specification
Model Number	DOH135
Brand	Livoo
Product Dimensions (L x W x H)	30 x 8 x 30 cm
Item Weight	1.47 Kilograms
Suction Power	800 Pa
Battery Type	Lithium-ion
Battery Life	Up to 70 minutes
Dustbin Capacity	500 Milliliters
Filter Type	HEPA
Noise Level	67 Decibels
Control Method	Application (SmartThings)
Special Features	Cordless

Feature	Specification
Recommended Surface	All floor types, including carpets

10. WARRANTY AND SUPPORT

The Livoo DOH135 Robot Vacuum Cleaner comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or warranty claims, please contact Livoo customer service. You can typically find contact information on the Livoo official website or on the product packaging.

When contacting support, please have your product model number (DOH135) and proof of purchase readily available.

