

[Manuals.plus](#) /

> [Klipsch](#) /

> Klipsch Nashville Portable Bluetooth Speaker: User Manual

## Klipsch 1071975

# Klipsch Nashville Portable Bluetooth Speaker: User Manual

Model: Klipsch Nashville (1071975)

Brand: Klipsch

## 1. INTRODUCTION

Thank you for choosing the Klipsch Nashville Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure a premium audio experience. The Klipsch Nashville is designed to deliver powerful, 360-degree audio with exceptional durability and connectivity.



*Image: The Klipsch Nashville Portable Bluetooth Speaker, showcasing its compact and rugged design.*

## 2. SETUP

### 2.1 Initial Charging

Before first use, fully charge your Klipsch Nashville speaker. Use the provided USB-C cable and a compatible power adapter. A full charge takes approximately **1.5 hours**.

### 2.2 Bluetooth Pairing

1. Power on your Klipsch Nashville speaker by pressing the power button.
2. The Bluetooth indicator light will flash, indicating it's in pairing mode.
3. On your device (smartphone, tablet, etc.), go to Bluetooth settings and select "Klipsch Nashville" from the list of available devices.
4. Once connected, the Bluetooth indicator light will turn solid.

The speaker features **Bluetooth 5.3** true wireless technology, allowing seamless stereo playback and connectivity up to **40 feet** away.

### 2.3 Klipsch Connect App

Download the **Klipsch Connect app** (available for free in app stores) to unlock additional features:

- Customize EQ settings (bass, mid-range, treble).
- Receive over-the-air firmware updates.
- Access support and product information.



*Image: Screenshot of the Klipsch Connect App interface, showing equalizer settings for bass, mid, and treble.*

## 3. OPERATING INSTRUCTIONS

### 3.1 Power On/Off

Press and hold the power button on the speaker's control panel to turn it on or off.

### 3.2 Volume Control

Use the dedicated volume buttons (+/-) on the speaker or your connected device to adjust the audio level.

### 3.3 Music Playback

Control music playback (play/pause, skip tracks) directly from your connected Bluetooth device.

### 3.4 Call Handling


The built-in microphone allows you to take calls directly through the speaker. Press the play/pause button to answer or end a call.



*Image: Close-up of the Klipsch Nashville speaker's control panel, highlighting the built-in microphone for calls.*

### 3.5 Broadcast Mode

Amplify your sound by connecting multiple Klipsch speakers using Broadcast Mode. This feature allows playback on up to **10+ Klipsch speakers** simultaneously for an immersive audio experience.

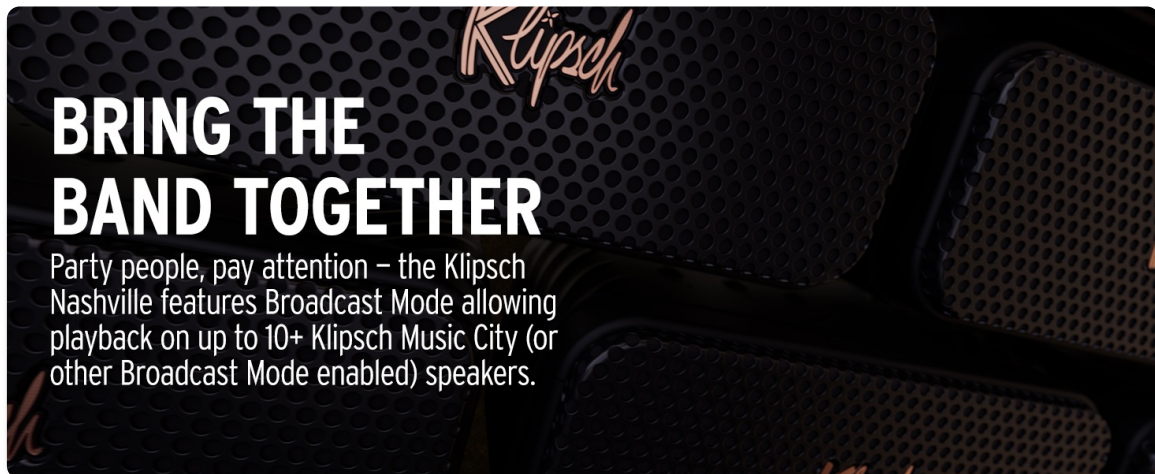

*Image: Illustration of multiple Klipsch speakers connected via Broadcast Mode, creating a wider sound field.*

### 3.6 Reverse USB-C Charging

The Klipsch Nashville offers **10W reverse USB-C functionality**, allowing you to use the speaker's battery to recharge your phone or other compatible devices in a pinch.



*Image: A smartphone connected to the Klipsch Nashville speaker via USB-C, indicating reverse charging in progress.*

## 4. MAINTENANCE

### 4.1 Cleaning

The Klipsch Nashville has an **IP67 dust and waterproof rating**, meaning it is completely protected from dust and can be submerged up to one meter for 30 minutes. To clean, wipe with a damp cloth. Do not use harsh chemicals or abrasive materials.



**IP67:**  
**WATER & DUST RESISTANT**

*Image: The Klipsch Nashville speaker being splashed with water and dust, illustrating its IP67 rating.*

## **4.2 Battery Care**

To maximize battery life, avoid fully discharging the speaker frequently. Recharge the speaker when the battery indicator is low. The speaker provides up to **24 hours of playtime** on a single charge.



*Image: A person holding the Klipsch Nashville speaker outdoors, with text indicating 24 hours of battery life.*

## 5. TROUBLESHOOTING

- **No Power:** Ensure the speaker is fully charged. Connect to a power source and check the battery indicator.
- **No Bluetooth Connection:** Make sure Bluetooth is enabled on your device and the speaker is in pairing mode. Try forgetting the device in your phone's Bluetooth settings and re-pairing. Ensure your device is within the 40-foot range.
- **Poor Sound Quality:** Check the EQ settings in the Klipsch Connect app. Ensure the speaker is not placed in an enclosed space that might muffle the sound.
- **Broadcast Mode Issues:** Ensure all speakers are the same model (e.g., Nashville to Nashville) for optimal performance in Broadcast Mode.

## 6. SPECIFICATIONS

Feature	Specification
Brand	Klipsch
Model Name	Klipsch Nashville
Model Number	1071975
Connectivity Technology	Bluetooth 5.3
Wireless Range	40 Feet (12 Meters)
Battery Life	24 Hours
Battery Charge Time	1.5 Hours
Water Resistance Level	IP67 (Dustproof & Waterproof)
Speaker Maximum Output Power	10 Watts
Audio Output Mode	Surround (360-degree audio)
Additional Features	Built-in Microphone, Reverse USB-C Charging (10W), Broadcast Mode
Item Dimensions (D x W x H)	3.19"D x 3.07"W x 7.01"H
Item Weight	0.8 Kilograms



*Image: The Klipsch Nashville speaker with its dimensions clearly labeled.*

## 7. WARRANTY AND SUPPORT

## 7.1 Warranty Information

The Klipsch Nashville Portable Bluetooth Speaker comes with a warranty of **one (1) year on electronics and three (3) years on woofer, cabinet, and non-electrical mechanics**, from the date of purchase.

## 7.2 Customer Support

For further assistance, technical support, or warranty claims, please visit the official Klipsch website or contact their customer service. You can also use the Klipsch Connect app for direct access to support resources.

## 8. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

*Video: Official Klipsch Nashville Portable Bluetooth Speaker overview, highlighting its features and design.*