

APEKX BE1043

APEKX True Wireless Bluetooth Earbuds User Manual

Model: BE1043

1. INTRODUCTION

Thank you for choosing APEKX True Wireless Bluetooth Earbuds. These earbuds are designed to provide a versatile and immersive audio experience, whether for daily use or active sports. With advanced Bluetooth technology, multiple EQ modes, and a comfortable, secure fit, they are compatible with both iPhone and Android devices, making them ideal for gym, sports, running, and gaming.

2. WHAT'S IN THE Box

Please verify that all items are present in your package:

- Earbuds (Left and Right)
- Charging Case
- Eartips (Multiple Sizes)
- Earhooks (Detachable)
- USB-C Charging Cable
- User Manual



Figure 2.1: Package Contents. The image displays all components included with the APEKX True Wireless Bluetooth Earbuds: the earbuds themselves, their charging case, various sizes of eartips, detachable earhooks, a USB-C charging cable, and the user manual.

3. PRODUCT OVERVIEW

The APEKX True Wireless Bluetooth Earbuds offer a sleek design with versatile wearing options and intuitive controls. Below are key visual aspects of the product.



Figure 3.1: APEKX Earbuds and Charging Case. This image shows the earbuds inside their open charging case, with one earbud also shown detached with its earhook, highlighting the product's design and components.

DUAL DIGITAL DISPLAY

Easily check the remaining
battery & charging status anytime.



Charging Display of Earbuds



Battery Display of Case

Figure 3.2: Versatile Wearing Modes. This diagram illustrates how the earbuds can be used in "Earhook-mode" for sports and "Alternative-mode" for daily wear by detaching the earhook.

4. CHARGING THE EARBUDS AND CASE

Before first use, ensure to remove any protective film covering the charging contacts on the earbuds. Fully charge the earbuds and the charging case for optimal performance.

1. Place the earbuds into the charging case. Ensure they are correctly seated to make contact with the charging pins.
2. Connect the USB-C charging cable to the charging port on the case and the other end to a USB power source (e.g., wall adapter, computer USB port).
3. The charging case features a dual digital display, showing the charging status of each earbud (L/R) and the overall battery percentage of the case.
4. A full charge for the earbuds takes approximately 1.5 hours. The charging case provides up to 4 additional charges, extending total playtime.

24H ULTRA LONG PLAYTIME

With up to 6 hours of play on a single charge and an additional 24 hours of battery life with the charging case, provides a comfortable and uninterrupted gaming and listening experience.



6 hrs

Single charge

24 hrs

With charging case

500 mAh

Battery capacity



Figure 4.1: Battery Life Overview. This image highlights the extended battery life: up to 6 hours on a single charge for earbuds and 24 hours total playtime with the charging case, which has a 500mAh capacity.

THREE EQ SOUND SETTING

The default EQ, delivers well-balanced sound, while Bass Booster enhances bass-heavy music, and Podcast makes voices stand out clearly.



SIGNATURE
SOUND



BASS MODE



POCAST MODE



Figure 4.2: Dual Digital Display. The charging case features a clear digital display indicating the individual charge levels of the left and right earbuds, as well as the total battery percentage of the charging case itself.

5. WEARING THE EARBUDS

The APEKX earbuds are designed for both daily comfort and secure fit during sports. They come with multiple sizes of ear tips to ensure a snug fit.

5.1. Sports Wearing (with Earhooks)

For activities like running, gym workouts, or any movement where extra security is desired, use the earbuds with the earhooks attached.

1. Choose the right ear tips for a comfortable seal.
2. Ensure the earhooks are securely attached to the earbuds.
3. Place the earbud into your ear canal and adjust the earhook over your ear until it feels comfortable and secure.



Figure 5.1: Sports Wearing Guide. This image provides a visual guide for wearing the earbuds with earhooks for sports activities, demonstrating proper fit for running and biking.

5.2. Daily Wearing (without Earhooks)

For casual listening, gaming, or music enjoyment, the earhooks can be detached for a more compact in-ear fit.

1. Gently detach the earhooks from the earbuds.
2. Select the appropriate ear tips for a snug and comfortable fit.
3. Insert the earbud into your ear canal and slightly twist to secure it in place.



Figure 5.2: Daily Wearing Guide. This image illustrates how to wear the earbuds for daily use without the earhooks, showing examples of use during gaming and casual listening.

6. PAIRING AND CONNECTIVITY

The APEKX earbuds offer seamless Bluetooth connectivity with your devices.

1. Initial Pairing:

- Open the charging case. The earbuds will automatically enter pairing mode.
- On your smartphone or Bluetooth-enabled device, go to Bluetooth settings.
- Search for "APEKX BE1043" (or similar name) in the list of available devices and select it to connect.
- Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.

- Automatic Reconnection:** After the initial pairing, the earbuds will automatically connect to the last paired device when taken out of the charging case, provided Bluetooth is enabled on your device.
- Single Earbud Use:** Either earbud can be used independently. Simply take one earbud out of the case, and it will connect.

7. CONTROLS AND FUNCTIONS

The earbuds feature intuitive touch controls for managing audio playback, calls, and EQ settings.



Figure 7.1: Smart Touch Control Guide. This diagram details the touch functions for both the left and right earbuds, including controls for volume, playback, calls, and EQ modes.

Earbud Touch Controls

| Action | Left Earbud | Right Earbud |
|--------------------------|-----------------|-----------------|
| Tap Once | Volume Down | Volume Up |
| Tap Twice | Play/Pause | Play/Pause |
| Tap Three Times | Cycle EQ Mode | Cycle EQ Mode |
| Tap Once (Call) | Answer/End Call | Answer/End Call |
| Long Press for 1S | Previous Track | Next Track |
| Long Press for 1S (Call) | Reject Call | Reject Call |

8. SOUND SETTINGS (EQ MODES)

The APEKX earbuds feature three distinct EQ modes to customize your listening experience:

- Signature Sound:** The default EQ setting, providing a well-balanced audio profile suitable for most music genres.
- Bass Mode:** Enhances bass frequencies, ideal for bass-heavy music and genres like hip-hop or electronic dance music.
- Podcast Mode:** Optimizes vocal clarity, making voices stand out clearly for podcasts, audiobooks, and calls.

To switch between EQ modes, tap either earbud three times.

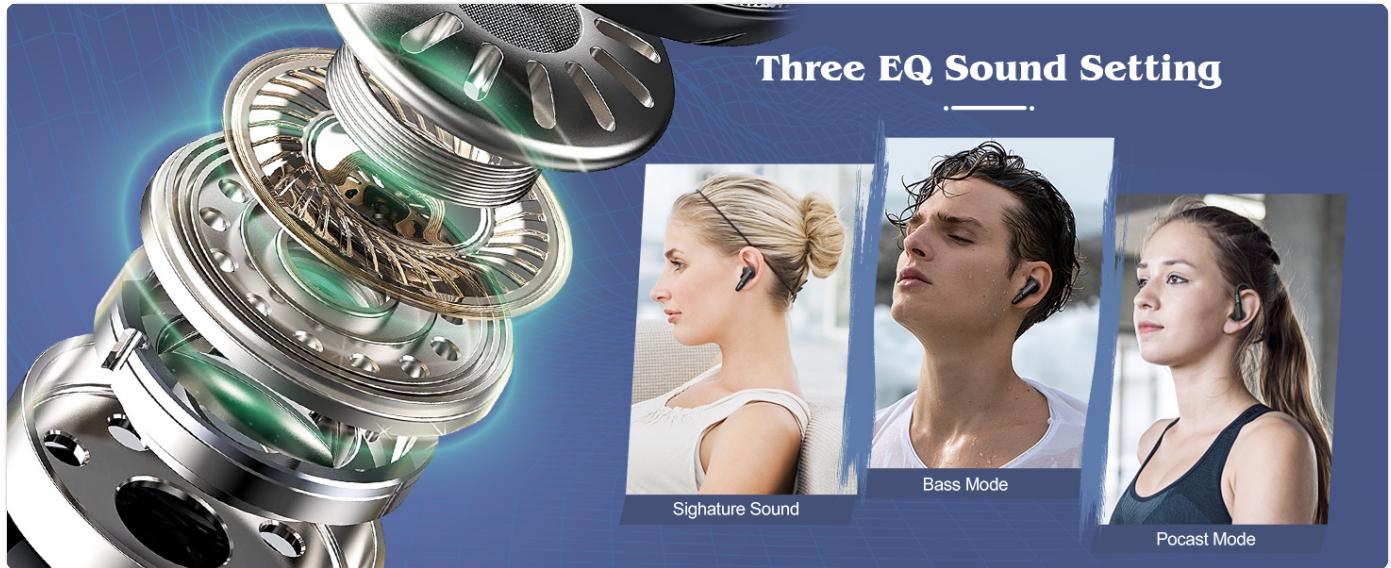


Figure 8.1: Three EQ Sound Settings. This visual demonstrates the three available sound modes and their intended use cases, allowing users to tailor their audio experience.

9. MAINTENANCE AND CARE

Proper care will extend the life and performance of your APEKX earbuds:

- **Cleaning:** Regularly clean the earbuds, ear tips, and charging contacts with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Water Resistance:** The earbuds are water-resistant. Avoid submerging them in water or exposing them to excessive moisture for prolonged periods. Dry them thoroughly if they get wet.
- **Storage:** When not in use, always store the earbuds in their charging case to protect them from dust, damage, and to keep them charged.
- **Temperature:** Avoid exposing the earbuds to extreme temperatures (hot or cold) or direct sunlight.

10. TROUBLESHOOTING

If you encounter issues with your APEKX earbuds, please refer to the following common solutions:

- **Earbuds not charging:**
 - Ensure the protective film on the earbud charging contacts has been removed.
 - Verify the earbuds are correctly seated in the charging case.
 - Check if the charging cable and power source are working correctly.
- **Earbuds not pairing/connecting:**
 - Make sure Bluetooth is enabled on your device.
 - Ensure the earbuds are fully charged.
 - Turn off Bluetooth on your device, then turn it back on.
 - Forget the device ("APEKX BE1043") from your device's Bluetooth list and attempt to re-pair.
 - Place both earbuds back into the charging case, close the lid, wait a few seconds, then open it again to reset.
- **No sound or low volume:**
 - Adjust the volume on both your earbuds and your connected device.
 - Ensure the earbuds are properly connected to your device.

- Clean any debris from the earbud speaker mesh.

- **One earbud not working:**

- Ensure both earbuds are charged.
- Place both earbuds back in the case, close the lid, and reopen to re-establish connection.
- Try resetting the earbuds (refer to the full user manual for specific reset instructions if needed).

11. SPECIFICATIONS

| Feature | Detail |
|--------------------------------|---|
| Model Name | BE1043 |
| Connectivity Technology | Wireless (Bluetooth) |
| Bluetooth Version | 5.3 |
| Bluetooth Range | 40 Feet |
| Battery Life (Earbuds) | Up to 8 hours (single charge) |
| Charging Case Battery Capacity | 500mAh (provides up to 4 additional charges) |
| Charging Time | 1.5 Hours |
| Audio Driver Type | Dynamic Driver |
| Audio Driver Size | 10 Millimeters |
| Frequency Range | 20 Hz - 20,000 Hz |
| Impedance | 16 Ohm |
| Water Resistance Level | Water Resistant |
| Control Type | Touch, Button |
| Material | Acrylonitrile Butadiene Styrene (ABS) |
| Item Weight | 1.9 Ounces |
| Product Dimensions | 3.1 x 2.4 x 1.45 inches |
| Compatible Devices | iOS (iPhone 4/4s to 14 Pro Max), Android (Samsung, Huawei, Xiaomi, etc. with Android 5.0+ and Bluetooth 4.0+) |

12. WARRANTY AND SUPPORT

APEKX products are manufactured to the highest quality standards. For warranty information or technical support, please contact APEKX US directly through their official channels or the retailer where the product was purchased. Please retain your proof of purchase for warranty claims.

For further assistance, visit the [APEKX Store on Amazon](#).

© 2024 APEKX. All rights reserved.