

Dyson V15DetectEXTRA2

Dyson V15 Detect Total Clean Extra Cordless Vacuum Instruction Manual

Model: V15DetectEXTRA2

INTRODUCTION

The Dyson V15 Detect Total Clean Extra Cordless Vacuum is engineered for powerful, intelligent, and versatile cleaning across your entire home. This manual provides essential information for setting up, operating, and maintaining your vacuum to ensure optimal performance.

Key features include Dyson illumination technology to reveal invisible dust on hard floors, a piezo sensor for intelligent power optimization based on debris, and a de-tangling Digital Motorbar cleaner head for deep cleaning carpets and hard floors without hair tangles. Its versatile cordless design easily transforms into a handheld vacuum for comprehensive cleaning.

SETUP

Assembly

Unpack all components from the box. Connect the wand to the main body of the vacuum until it clicks securely. Attach your desired cleaner head to the end of the wand. Ensure all connections are firm before use.

Initial Charging

Before first use, fully charge the vacuum. The Dyson V15 Detect features a rechargeable lithium-ion battery that provides up to 60 minutes of run time. A full charge typically takes approximately 4.5 hours. Plug the charger into a wall outlet and connect it to the charging port on the vacuum's main body. The LCD screen will display charging status.

OPERATING YOUR VACUUM

Power Modes

The vacuum offers multiple power modes to suit different cleaning tasks:

- **Eco Mode:** Provides maximum run time for lighter cleaning tasks.
- **Auto Mode:** Intelligently optimizes power and run time based on the debris detected by the piezo sensor, adapting suction to floor type.
- **Boost Mode:** Delivers maximum suction for intensive spot cleaning.

Switch between modes using the control button on the top of the main body.

Cleaner Heads and Attachments

The Dyson V15 Detect comes with various cleaner heads and tools for different surfaces and cleaning needs:

- **Digital Motorbar Cleaner Head:** Designed for deep cleaning carpets and hard floors, featuring de-tangling technology.
- **Fluffy Optic Cleaner Head:** Equipped with illumination to reveal invisible dust on hard floors, ensuring thorough cleaning.
- **Additional Tools:** Includes various brushes and crevice tools for upholstery, tight spaces, and high-reach areas.

To change attachments, press the red release button on the wand or main body and swap the tool.

Handheld Conversion

The main body detaches from the wand with a single click, transforming the unit into a powerful handheld vacuum for cleaning stairs, cars, and furniture.



The Dyson V15 Detect in handheld configuration, demonstrating its use with a brush attachment to clean a car seat.

MAINTENANCE

Emptying the Bin

To empty the dust bin, hold the vacuum over a trash receptacle. Push the red lever forward to release the bin's contents. Close the bin lid securely after emptying.

Filter Cleaning

The Dyson V15 Detect is equipped with a HEPA filter. For optimal performance, regularly clean the filter by twisting it counter-clockwise to remove it from the main body. Tap it gently to remove loose dust, then wash it under cold running water until the water runs clear. Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum.

SPECIFICATIONS

Feature	Detail
Brand	Dyson
Model Number	V15DetectEXTRA2
Special Feature	High Precision Sensors
Filter Type	HEPA Filter
Is Cordless?	Yes
Charging Time	Approximately 4.5 hours
Battery Life	Up to 60 minutes
Noise Level	78 Decibels
Motor Horsepower	3.04 horsepower
Product Dimensions	10.4 x 9.84 x 49.6 inches
Item Weight	14.92 pounds
Surface Recommendation	Carpet, Hard Floor

WARRANTY AND SUPPORT

The Dyson V15 Detect Total Clean Extra Cordless Vacuum comes with a 2-year warranty. For any support needs, please refer to Dyson's official customer service channels for lifetime support.