

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Proctor Silex](#) /

› [Proctor Silex Compact Travel Iron & Garment Steamer User Manual \(Model 11585\)](#)

## Proctor Silex 11585

# Proctor Silex Compact Travel Iron & Garment Steamer User Manual

Model: 11585

## INTRODUCTION

---

This manual provides essential instructions for the safe and effective operation, maintenance, and troubleshooting of your Proctor Silex Compact 2-in-1 Steamer/Iron, Model 11585. Please read all instructions carefully before first use and retain for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions before using the product.
- Do not immerse the appliance in water or other liquids.
- Always unplug the appliance from the electrical outlet when filling with water, emptying, or when not in use.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Close supervision is necessary for any appliance used by or near children.
- Use the appliance only for its intended household use.
- Never direct steam at people or pets.
- The ironing plate and steam nozzle become hot during use. Allow to cool completely before handling or storing.
- Use distilled or demineralized water to prevent mineral buildup.

## PRODUCT OVERVIEW

---

The Proctor Silex Compact 2-in-1 Steamer/Iron is designed for portable and efficient wrinkle removal. It functions as both a garment steamer and a compact iron.



*Image: The Proctor Silex Compact Travel Iron and Garment Steamer, showing its main body and detachable fabric brush.*

### **Components:**

- Steam Nozzle / Ironing Plate
- Steam Button
- Water Tank (removable, 120 ml capacity)
- Power Cord (10 ft)
- Fabric Brush Attachment

### **SETUP**

1. **Fill the Water Tank:** Ensure the appliance is unplugged. Remove the 120 ml water tank from the base. Open the water inlet cap and fill the tank with distilled or demineralized water up to the MAX fill line. Close the cap securely and reattach the tank to the steamer base.



## Fewer refills

Removable 120 ml water tank lets you steam up to 7 minutes without stopping

*Image: Close-up view of the removable 120 ml water tank, showing the fill opening.*

2. **Attach Fabric Brush (Optional):** For steaming thicker fabrics or removing lint, align the fabric brush attachment with the steam nozzle and press firmly until it clicks into place.



## Work steam deep into fibers with fabric brush

Perfect for releasing stubborn wrinkles from thick, heavy clothing, curtains & more

*Image: A hand attaching the fabric brush accessory to the steamer head.*

3. **Power Connection:** Plug the 10-foot power cord into a standard electrical outlet. The indicator light will illuminate, signaling that the steamer is heating up.

### OPERATING INSTRUCTIONS

---

#### Steaming Garments:

1. **Heat Up:** The steamer will be ready to use in approximately 45 seconds. The indicator light may change or turn off when ready, depending on the model.



## Less waiting

Steam pump & 1200 watts deliver fast, powerful wrinkle removal with 45 second heat-up

*Image: Graphic illustrating the steamer heating up in 45 seconds, with steam emanating from the nozzle.*

2. **Prepare Garment:** Hang the garment on a hanger. Gently pull the fabric taut with one hand.
3. **Apply Steam:** Hold the steamer upright, pressing the steam button to release continuous steam. Move the steam nozzle slowly over the fabric, from top to bottom. The 120 ml water tank provides up to 7 minutes of continuous steaming.

## Easy to use & plenty of reach

Simply press the steam button to release powerful steam — extra-long 10 ft. cord provides plenty of reach



*Image: A person holding the steamer and applying steam to a hanging curtain, demonstrating ease of use and reach.*

4. **Finish:** Release the steam button to stop steaming. Allow the garment to cool and dry before wearing.

### Using as an Iron:

1. **Prepare Surface:** Place the garment on a heat-resistant surface, such as an ironing board.
2. **Ironing:** With the steamer heated, gently press the nonstick ironing plate directly onto the fabric. Move the steamer across the fabric to smooth out wrinkles. The steam button can be pressed for an extra burst of steam if needed.

## Doubles as an iron


Nonstick ironing plate heats up quickly to let you press out stubborn wrinkles, crease pants, iron shirts & more



*Image: A person using the steamer's hot plate to iron a garment on a flat surface, with steam visible.*

### **Portability:**

The compact and lightweight design makes this appliance suitable for travel. Ensure the water tank is empty and the unit is cool before packing.

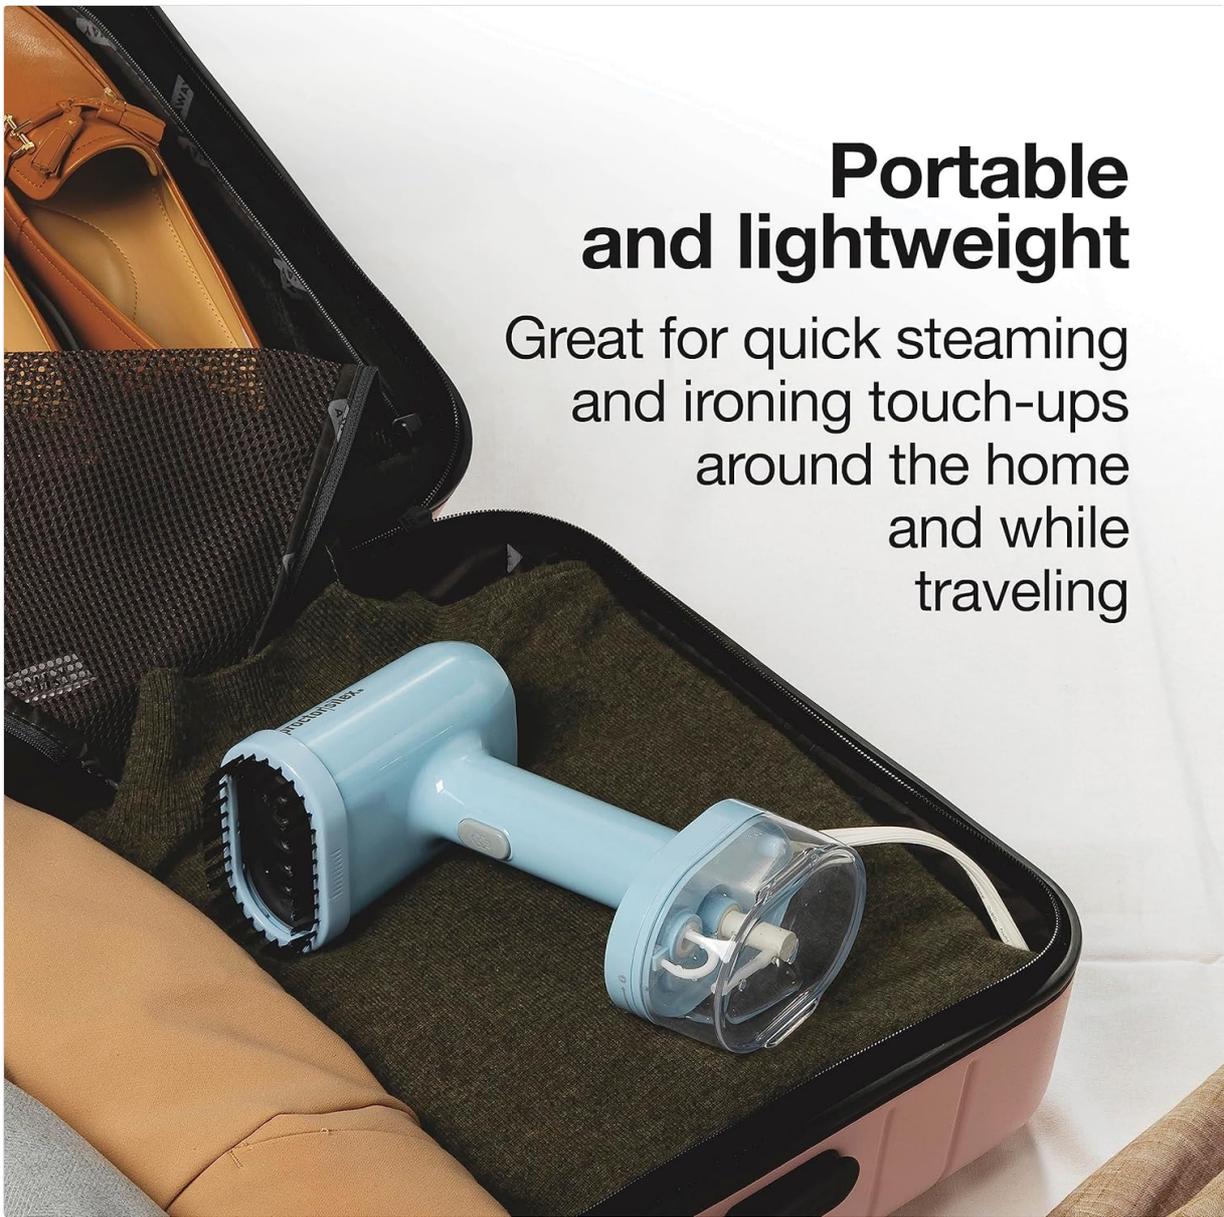

## Portable and lightweight

Great for quick steaming  
and ironing touch-ups  
around the home  
and while  
traveling

*Image: The compact steamer placed inside an open suitcase, demonstrating its portability for travel.*

### MAINTENANCE

- 1. Emptying the Water Tank:** After each use, unplug the steamer and allow it to cool completely. Remove the water tank and carefully empty any remaining water. Due to the design, completely drying the interior may require allowing it to air dry upside down or using a thin cloth to absorb residual water.
- 2. Cleaning the Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners.
- 3. Cleaning the Ironing Plate:** If mineral deposits accumulate on the ironing plate, wipe it with a damp cloth and a mild, non-abrasive cleaner.
- 4. Storage:** Store the cooled and empty steamer in a dry place. Do not wrap the cord tightly around the appliance.

### TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                        | Possible Cause  | Solution  |
|--------------------------------|---|---|
| No steam produced.             | Water tank is empty or not properly seated. Appliance not plugged in or not heated. | Fill water tank and ensure it is securely in place. Check power connection. Allow 45 seconds for heating.                             |
| Water leaking from nozzle.     | Overfilled water tank. Steamer not fully heated.                                    | Do not overfill the water tank. Ensure the steamer is fully heated before pressing the steam button.                                  |
| Steam is weak or inconsistent. | Mineral buildup in the steamer. Water tank low.                                     | Use distilled water. Descal the steamer if necessary (refer to manufacturer's website for descaling instructions). Refill water tank. |

## SPECIFICATIONS

**Brand:** Proctor Silex

**Model Number:** 11585

**Wattage:** 1200 watts

**Water Tank Capacity:** 120 ml

**Heat-up Time:** Approximately 45 seconds

**Continuous Steam Time:** Up to 7 minutes

**Cord Length:** 10 feet

**Product Dimensions:** 3.5 x 4.5 x 8.8 inches

**Item Weight:** 1.63 pounds

proctorsilex®



## Compact 2-in-1 Steamer/Iron

*Image: Diagram showing the dimensions of the Proctor Silex Compact 2-in-1 Steamer/Iron.*

### WARRANTY AND SUPPORT

This Proctor Silex product is backed by a limited warranty. For specific warranty details, registration, or customer support, please visit the official Proctor Silex website or contact their customer service department.

**Manufacturer:** Hamilton Beach Brands

For further assistance, please refer to the contact information provided with your purchase documentation or visit [www.proctorsilex.com](http://www.proctorsilex.com).