

Glynzak WH207A

Glynzak WH207A Wireless Bluetooth Over-Ear Headphones User Manual

Model: WH207A | Brand: Glynzak

INTRODUCTION

Thank you for choosing the Glynzak WH207A Wireless Bluetooth Over-Ear Headphones. This manual provides essential information for the proper setup, operation, and maintenance of your headphones. Please read it thoroughly before use to ensure optimal performance and longevity of your device.

WHAT'S IN THE BOX

- 1 x Glynzak WH207A Bluetooth Headphones
- 1 x 3.5mm Audio Cable
- 1 x Charging Cable (Type-C)
- 1 x User Manual

PRODUCT OVERVIEW

Key Features

- **Excellent Sound & 6 EQ Modes:** Equipped with 40mm dynamic drivers for HiFi stereo sound, balanced bass, and environmental noise reduction. Features 6 preset EQ modes (Bass, Pop, Rock, Classic, Jazz, Vocal) for customized listening.
- **Extended Playtime:** Up to 65 hours of continuous playback on a single charge in wireless mode.
- **Comfortable & Portable Design:** Soft PU leather ear cups ensure a comfortable fit. Adjustable headband and foldable design for easy storage and travel.
- **Advanced Bluetooth V5.3:** Ensures stable connection, faster transmission speed, and wider transmission range.
- **Versatile Connectivity:** Compatible with smartphones, iPhones, Android devices, MP3/MP4 players,

laptops, iPads, iPods, and other Bluetooth-enabled devices. Supports wired mode via a 3.5mm audio jack.

Component Diagram



Image: Detailed view of the Glynzak WH207A headphone controls, including volume buttons, power button, Type-C charging interface, LED indicator, 3.5mm audio interface, and built-in microphone.

The headphones feature intuitive button controls for managing audio playback, volume, and calls. The Type-C port is for charging, and a 3.5mm audio jack allows for wired listening.

SETUP

1. Charging the Headphones

Before initial use, fully charge your headphones. The charging time is approximately 2.5 hours for a full charge. An upgraded Type-C charging cable is included.

- Connect the Type-C end of the charging cable to the headphone's charging port.
- Connect the USB-A end to a compatible USB power adapter (not included) or a computer's USB port.
- The LED indicator will show charging status (e.g., red for charging, off or blue for fully charged).

2. Powering On/Off

- **To Power On:** Press and hold the Power button for approximately 2 seconds until the LED indicator flashes.
- **To Power Off:** Press and hold the Power button for approximately 4 seconds until the LED indicator turns off.

3. Bluetooth Pairing

The headphones utilize Bluetooth V5.3 technology for wireless connection.



Image: Glynzak headphones positioned next to a smartphone displaying its Bluetooth settings, illustrating the pairing process.

1. Ensure the headphones are powered off.
2. Press and hold the Power button for about 5-7 seconds until the LED indicator flashes blue and red alternately, indicating pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "WH207A" from the list of available devices.
5. Once connected, the LED indicator will typically flash blue slowly.
6. The headphones support connecting to two devices simultaneously.

4. Wired Connection (3.5mm Audio Cable)

For situations where Bluetooth is not available or preferred, you can use the included 3.5mm audio cable.

- Plug one end of the 3.5mm audio cable into the audio jack on the headphones.
- Plug the other end into the 3.5mm audio output of your device.
- The headphones will automatically switch to wired mode.

OPERATING INSTRUCTIONS

Button Functions



Image: A visual guide detailing the controls on the Glynzak WH207A headphones, including power, volume, track skip, and EQ mode buttons.

Button	Action	Function
Power Button	Click Once	Play/Pause, Answer/Hang up Call
	Hold for 1s	Reject Call
	Hold for 2s	Power ON
	Hold for 4s	Power OFF
	Double Click	Activate Voice Assistant
Volume Up (+)	Click Once	Next Song
	Hold for 1-2s	Increase Volume
Volume Down (-)	Click Once	Previous Song
	Hold for 1-2s	Decrease Volume
EQ Button	Click Once	Switch EQ Mode (Pop, Rock, Vocal, Jazz, Bass, Classic)
Volume Up (+) & Down (-)	Hold for 3s	Clear Paired Device

EQ Modes

The Glynzak WH207A headphones offer 6 preset equalizer modes to enhance your listening experience based on music genre:



Image: A visual representation of the six EQ modes available on the headphones: Bass Boost, Pop Vibes, Rock Energy, Classical Clarity, Jazz Warmth, and Vocal Focus.

- **Bass:** Enhances low-frequency sounds for a deeper bass.
- **Pop:** Optimized for popular music genres.
- **Rock:** Tailored for rock music with emphasized drums and guitars.
- **Classic:** Balanced sound for classical music.
- **Jazz:** Provides a warm and smooth sound for jazz.
- **Vocal:** Highlights vocal frequencies for clear speech and singing.

Press the EQ button to cycle through these modes.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the headphones in a cool, dry place. The foldable design allows for compact storage.
- **Battery Care:** To prolong battery life, avoid fully discharging the headphones frequently. Charge them regularly, even if not in constant use.
- **Moisture Resistance:** The headphones are moisture resistant. However, avoid prolonged exposure to water or high humidity.

TROUBLESHOOTING

- **No Power:** Ensure the headphones are fully charged. Connect them to the charging cable and check the LED indicator.
- **Cannot Pair:** Make sure the headphones are in pairing mode (LED flashing blue and red). Turn off and on your device's Bluetooth, then try re-pairing. Ensure the headphones are not connected to another device.
- **No Sound:** Check the volume levels on both the headphones and your connected device. Ensure the headphones are properly paired or the 3.5mm cable is securely connected.
- **Poor Sound Quality:** Try switching between the different EQ modes. Ensure there are no obstructions between the headphones and your Bluetooth device.
- **Intermittent Connection:** Move closer to your Bluetooth device. Avoid environments with strong electromagnetic interference.

SPECIFICATIONS

Feature	Detail
Model Name	WH207A
Brand	Glynzak
Connectivity Technology	Bluetooth, Wireless
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.3
Bluetooth Range	10 Meters
Audio Driver Size	40 Millimeters
Audio Driver Type	Dynamic Driver
Battery Life	65 Hours
Charging Time	2.5 Hours
Earpiece Shape	Over Ear
Material	Polyurethane (PU)
Control Type	Button Control
Headphones Jack	3.5 mm Jack
Included Components	Cable, User Manual
Item Weight	0.31 Kilograms (10.9 ounces)
Water Resistance Level	Moisture Resistant

WARRANTY & SUPPORT

Glynzak offers after-sales service for your product. If you have any questions regarding the operation, maintenance, or troubleshooting of your WH207A headphones, please refer to the contact information provided with your purchase or visit the official Glynzak support website for assistance.