

Glynzak WH207A

Glynzak WH207A Wireless Bluetooth Headphones User Manual

Model: WH207A

1. INTRODUCTION

Thank you for choosing Glynzak WH207A Wireless Bluetooth Headphones. This manual provides detailed instructions on how to set up, operate, and maintain your headphones to ensure optimal performance and longevity. Please read this manual carefully before using the product and retain it for future reference.

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Glynzak WH207A Wireless Bluetooth Headphones
- 1 x 3.5mm Audio Cable
- 1 x USB Type-C Charging Cable
- 1 x User Manual

3. PRODUCT OVERVIEW

The Glynzak WH207A headphones feature a foldable design for portability and comfortable over-ear cushions. Below is a diagram illustrating the main components and controls of your headphones.



Image 3.1: Headphone Controls and Ports. This image displays a close-up of the right ear cup and headband, highlighting the various buttons and ports. Labels indicate the Volume Up/Next Track button, Power On/Off/Play/Pause/Answer/Hang Up button, Volume Down/Previous Track button, Type-C Charging Interface, LED Indicator, 3.5mm Audio Interface, and Built-in Mic. The left ear cup shows the 6EQ Button.

The headphones are equipped with 40mm dynamic drivers for high-fidelity stereo sound and a built-in microphone for calls.

4. SETUP

4.1. Charging the Headphones

Before first use, fully charge your headphones. Use the provided USB Type-C charging cable to connect the headphones to a USB power source (e.g., computer, wall adapter).

- A full charge takes approximately 2.5 hours.
- A 10-minute quick charge provides up to 4 hours of playtime.
- The LED indicator will show charging status (e.g., red while charging, off when fully charged).

4.2. Powering On and Off

- **To Power On:** Press and hold the Power button (refer to Image 3.1) for approximately 3 seconds until the LED indicator flashes.
- **To Power Off:** Press and hold the Power button for approximately 3 seconds until the LED indicator turns off.

4.3. Bluetooth Pairing

The headphones utilize Bluetooth V5.3 technology for stable and fast connections.

1. Ensure the headphones are powered off.
2. Press and hold the Power button for approximately 5 seconds until the LED indicator flashes blue and red alternately, indicating pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "WH207A" from the list of found devices.
5. Once connected, the LED indicator will flash blue slowly.



Image 4.1: Bluetooth Pairing Process. This image shows the Glynzak WH207A headphones positioned next to a smartphone displaying its Bluetooth settings menu. The phone screen clearly lists "WH207A" as an available device for connection, illustrating the final step of the pairing process.

The headphones support automatic re-connection to the last paired device when powered on and within

range.

5. OPERATING INSTRUCTIONS

5.1. Basic Controls

Refer to Image 3.1 for button locations.

- **Power Button:**
 - Press and hold for 3 seconds: Power On/Off.
 - Short press: Play/Pause music, Answer/End call.
 - Double press: Redial last number.
- **Volume Up / Next Track Button (+):**
 - Short press: Increase volume.
 - Long press: Next track.
- **Volume Down / Previous Track Button (-):**
 - Short press: Decrease volume.
 - Long press: Previous track.

5.2. EQ Modes

The headphones offer 6 equalizer (EQ) modes to customize your listening experience. Press the **6EQ Button** (located on the left ear cup, refer to Image 3.1) to cycle through the following modes:

- Bass
- Pop
- Rock
- Classic
- Jazz
- Vocal

5.3. Wired Mode Operation

You can use the headphones in wired mode when the battery is low or with non-Bluetooth devices. Connect one end of the provided 3.5mm audio cable to the 3.5mm Audio Interface on the headphones and the other end to your audio source. In wired mode, the headphone's controls will be inactive, and audio control will be managed by your connected device.

6. MAINTENANCE AND CARE

- Keep the headphones dry. Do not expose them to rain or moisture.
- Clean the ear cushions and headband with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the headphones in a cool, dry place, away from extreme temperatures. The foldable design allows for compact storage.
- Avoid dropping or subjecting the headphones to strong impacts.

- Do not attempt to disassemble or modify the headphones, as this will void the warranty.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair with device.	Headphones not in pairing mode; Bluetooth off on device; device too far.	Ensure headphones are in pairing mode (flashing blue/red). Turn on Bluetooth on your device. Move device closer to headphones.
No sound.	Volume too low; headphones not connected; incorrect audio source.	Increase volume on headphones and device. Re-pair headphones. Check audio output settings on your device.
Poor sound quality.	Weak Bluetooth signal; interference.	Move closer to your device. Avoid sources of strong electromagnetic interference.

8. SPECIFICATIONS

Feature	Specification
Brand	Glynzak
Model	WH207A
Bluetooth Version	V5.3
Driver Size	40mm Dynamic
Playtime	Up to 65 hours
Charging Time	Approx. 2.5 hours (Type-C)
EQ Modes	6 (Bass, Pop, Rock, Classic, Jazz, Vocal)
Ear Placement	Over Ear
Form Factor	Bi-fold (Foldable)
Impedance	32 Ohm

9. WARRANTY AND SUPPORT

Glynzak provides a **12-month warranty** for these headphones from the date of purchase. Additionally, lifetime technical support is available.

If you encounter any issues with the operation of your Glynzak WH207A headphones or require technical assistance, please contact Glynzak customer service through the retailer's platform or the official Glynzak

website. Please have your purchase details ready when contacting support.