

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [CHARGEWORX](#) /
- › [CHARGEWORX CX5278 4-in-1 Wireless Charging Alarm Clock User Manual](#)

CHARGEWORX CX5278

CHARGEWORX CX5278 4-in-1 Wireless Charging Alarm Clock User Manual

Model: CX5278 | Brand: CHARGEWORX

INTRODUCTION

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your CHARGEWORX CX5278 4-in-1 Wireless Charging Alarm Clock. This device is designed to charge up to three devices simultaneously, including a smartphone, smartwatch, and earbuds, while also functioning as a digital alarm clock with a reflective display.

Key features include:

- Simultaneous charging for smartwatch, smartphone, and earbuds.
- Fast 15W wireless charging capability.
- Three customizable alarm settings.
- Built-in charging indicator.
- Reflective screen that also functions as a mirror.

1. SETUP

1.1 Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that the following items are present:

- CHARGEWORX CX5278 4-in-1 Wireless Charging Alarm Clock unit
- USB-C charging cable
- User Manual (this document)

Inspect the unit for any visible damage. If any components are missing or damaged, contact customer support.



Image: The CHARGEWORX CX5278 unit shown with its retail packaging and included USB-C charging cable.

1.2 Power Connection

1. Connect the provided USB-C cable to the power input port on the back of the alarm clock.
2. Connect the other end of the USB-C cable to a compatible USB power adapter (not included). A 15W or higher power adapter is recommended for optimal charging performance.
3. Plug the power adapter into a wall outlet. The digital display will illuminate, indicating the device is powered on.



Image: The charging alarm clock placed on a nightstand, connected to a wall outlet via its power adapter and cable.

1.3 Setting the Time

Refer to the control buttons located on the top of the unit.

1. Press and hold the **Time Set** button (often indicated by a clock icon) until the hour digits begin to flash.
2. Use the **+** and **-** buttons to adjust the hour. Pay attention to the AM/PM indicator.
3. Press the **Time Set** button again to move to the minute digits.
4. Use the **+** and **-** buttons to adjust the minutes.
5. Press the **Time Set** button one more time to confirm the time and exit time setting mode.

2. OPERATING INSTRUCTIONS

2.1 Setting Alarms

The device supports up to three independent alarms (Alarm 1, Alarm 2, Alarm 3).

1. Press the **Alarm Set** button (often indicated by an alarm clock icon) once to select Alarm 1. The alarm icon and hour digits for Alarm 1 will flash.
2. Use the **+** and **-** buttons to adjust the hour for Alarm 1.
3. Press the **Alarm Set** button again to move to the minute digits for Alarm 1.
4. Use the **+** and **-** buttons to adjust the minutes for Alarm 1.
5. Press the **Alarm Set** button a third time to confirm Alarm 1 and move to Alarm 2 setting, or press the **Time Set** button to exit.
6. Repeat steps 1-5 for Alarm 2 and Alarm 3 as needed.
7. To activate or deactivate an alarm, press the **Alarm On/Off** button (or the **Alarm Set** button briefly after setting) until the corresponding alarm indicator appears or disappears on the display.

When an alarm sounds, press any button to snooze for 9 minutes, or press and hold the **Alarm On/Off** button to turn off the alarm for the day.

2.2 Wireless Charging

The CX5278 features dedicated wireless charging areas for your smartphone, smartwatch, and earbuds.

- **Smartphone Charging:** Place your Qi-compatible smartphone horizontally on the elevated charging pad. Ensure the phone is centered on the pad for optimal charging. The charging indicator on the device will illuminate to confirm charging.
- **Smartwatch Charging:** Place your compatible smartwatch on the dedicated magnetic charging stand on the left side of the unit. The watch should snap into place and begin charging.
- **Earbuds Charging:** Place your wireless charging compatible earbuds case on the flat charging area on the right side of the unit. Ensure the case is centered.

The device provides up to 15W fast charging for compatible smartphones. Charging indicators will confirm when a device is actively charging.



Image: The charging station actively charging a smartphone on the main pad, a smartwatch on the side stand, and wireless earbuds on the flat pad.

2.3 Reflective Display

The digital display features a reflective surface. In addition to showing the time and alarm status, it can be used as a mirror for quick checks.

3. MAINTENANCE

3.1 Cleaning

To clean the device, ensure it is unplugged from the power source. Use a soft, dry, lint-free cloth to wipe the surfaces. For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth. Avoid using abrasive cleaners, solvents, or aerosol sprays, as these can damage the finish or internal components.

3.2 Storage

When not in use for extended periods, store the device in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to keep the original packaging for storage.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not powering on / Display is off.	No power connection or faulty adapter/cable.	Ensure the USB-C cable is securely connected to both the unit and a working power adapter. Try a different power outlet or adapter.
Wireless charging not working for a device.	Device not Qi-compatible, not properly aligned, or foreign objects present.	<ul style="list-style-type: none">• Verify your device supports wireless charging.• Ensure the device is centered on the charging pad.• Remove any thick cases or metallic objects from the device.• Check if the charging indicator illuminates.
Smartwatch not charging.	Smartwatch not properly seated or incompatible.	Ensure the smartwatch is correctly placed on the magnetic stand. Some smartwatches may require specific charging modules not integrated into this unit.
Alarm not sounding or difficult to set.	Alarm not activated or incorrect setting procedure.	Review Section 2.1 "Setting Alarms" to ensure the alarm is correctly set and activated (alarm icon visible on display).
Display is dim or difficult to read.	Brightness setting or environmental lighting.	Check if there's a brightness adjustment button (refer to device controls). Ensure the room lighting is not too bright, overpowering the display.

5. SPECIFICATIONS

Feature	Detail
Model Number	CX5278
Brand	CHARGEWORX
Color	White
Display Type	Digital
Special Features	Alarm, Charging Indicator, Wireless Charging
Product Dimensions	7.37"W x 2.44"H
Power Source	Electrical (via USB-C)
Material	Acrylonitrile Butadiene Styrene (Plastic)
Item Weight	6.9 ounces
Wireless Charging Output	Up to 15W (for compatible devices)

6. WARRANTY INFORMATION

CHARGEWORX products are designed and manufactured to the highest quality standards. This product is covered by a limited warranty from the date of purchase. For specific warranty terms and conditions, please refer to the warranty card included with

your product or visit the official CHARGEWORX website. Keep your proof of purchase for warranty claims.

7. CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your CHARGEWORX CX5278 4-in-1 Wireless Charging Alarm Clock that are not addressed in this manual, please contact CHARGEWORX customer support. You can typically find contact information on the product packaging, the official CHARGEWORX website, or through your retailer.

For more information, visit the [CHARGEWORX Store on Amazon](#).