

[Manuals.plus](#) /

› [SoBuy](#) /

› SoBuy Slim Shoe Cabinet FSR151-W Instruction Manual

SoBuy FSR151-W

SoBuy Slim Shoe Cabinet FSR151-W Instruction Manual

Model: FSR151-W | Brand: SoBuy

INTRODUCTION

Thank you for purchasing the SoBuy Slim Shoe Cabinet FSR151-W. This manual provides essential information for the safe assembly, operation, and maintenance of your new shoe cabinet. Please read these instructions carefully before beginning assembly and retain them for future reference.

IMPORTANT SAFETY INFORMATION

To prevent serious injury, always follow these safety guidelines:

- **Wall Mount with Safety Fittings:** This furniture must be secured to the wall with the provided anti-tip device to prevent tipping. Children have died from furniture tip-over.
- **Child Safety:** NEVER allow children to stand, climb, or hang on drawers, doors, or shelves.
- **Drawer Usage:** NEVER open more than one drawer at a time to maintain stability.
- **Weight Distribution:** Place heavier items in the lower compartments to improve stability.
- **Television Placement:** NEVER place a television or other heavy objects on top of this furniture.



Image: Safety warning regarding furniture tip-over, showing proper wall anchoring and prohibited actions like climbing or placing a TV on the unit.

SETUP AND ASSEMBLY

The SoBuy Slim Shoe Cabinet FSR151-W is delivered flat-packed and requires assembly. A detailed assembly instruction manual with diagrams is included in the packaging. Please ensure all parts are present before beginning assembly.

General Assembly Steps:

1. Unpack all components and verify against the parts list in the included manual.
2. Assemble the main frame of the cabinet according to the step-by-step diagrams.
3. Attach the flip-drawer mechanisms and install the drawers.
4. Install the base legs.
5. Secure the anti-tip device to the back of the cabinet and to a wall stud using appropriate hardware.

Your browser does not support the video tag.

Video: Official SoBuy video demonstrating the assembly and features of the FSR151 shoe cabinet.



Image: The assembled SoBuy FSR151-W Slim Shoe Cabinet positioned in an entryway, illustrating its narrow profile and two flip drawers.

OPERATING INSTRUCTIONS

The SoBuy Slim Shoe Cabinet FSR151-W is designed for efficient shoe storage in compact spaces.

Using the Flip Drawers:

- Gently pull the integrated handle on the front of each drawer to open it. The drawer will tilt forward, revealing two compartments for shoes.

- Place shoes into the compartments. The cabinet is designed to hold approximately 4-6 pairs of shoes, depending on shoe size and style.
- Push the drawer back into the cabinet until it is fully closed. Ensure it latches securely.



Image: A close-up of an open flip drawer, showing shoes placed within the two internal compartments.



Image: An illustration demonstrating the compatibility of the shoe cabinet with various shoe types, including sandals, slippers, leather shoes, sneakers, canvas shoes, and high heels.

Your browser does not support the video tag.

Video: Official SoBuy video showcasing the functionality of the shoe cabinet's flip drawers and its overall design.

CARE AND MAINTENANCE

To ensure the longevity and appearance of your SoBuy Slim Shoe Cabinet FSR151-W, follow these simple care instructions:

- **Cleaning:** Wipe the surfaces with a damp cloth. Avoid using harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Promptly wipe up any spills to prevent staining or damage to the engineered wood.
- **Dusting:** Regularly dust with a soft, dry cloth.
- **Stability Check:** Periodically check the wall anchor and all assembly hardware to ensure they remain tight and secure.



Image: The raised base of the shoe cabinet, indicating a 10cm clearance for convenient cleaning underneath with a mop or robot vacuum.

TROUBLESHOOTING

If you encounter any issues with your shoe cabinet, refer to the following common solutions:

Problem	Possible Cause	Solution
Drawers do not close smoothly.	Obstruction or misaligned mechanism.	Check for shoes blocking the drawer. Ensure the flip mechanism is correctly installed and not damaged.
Cabinet feels unstable.	Not properly anchored or uneven floor.	Verify the anti-tip device is securely fastened to the wall. Ensure the cabinet is on a level surface. Adjust any leveling feet if present.
Missing parts during assembly.	Packaging error.	Contact SoBuy customer support with your purchase details and the specific missing parts.

PRODUCT SPECIFICATIONS

Model: FSR151-W

Brand: SoBuy

Color: White

Material: Engineered Wood (MDF E1)

Product Dimensions (D x W x H): 7.5" x 19.7" x 35.8" (19 cm x 50 cm x 91 cm)

Item Weight: 12 kg (26.4 lbs)

Number of Drawers: 2

Number of Compartments: 2 per drawer

Weight Capacity Maximum: 16 kg (35.2 lbs)

Mounting Type: Freestanding with Wall Anchor (Anti-Tip)

Additional Features: Adjustable Shelves (within drawers), 10cm Raised Base



Image: A detailed diagram illustrating the height, width, and depth measurements of the SoBuy FSR151-W shoe cabinet.

Designed for Small Spaces

Only 19cm deep, perfect for compact entryways and narrow hallways



Image: The slim shoe cabinet positioned in a narrow hallway, highlighting its minimal depth and suitability for compact entryways.

WARRANTY INFORMATION

SoBuy products are manufactured to high-quality standards. For specific warranty details regarding your FSR151-W shoe cabinet, please refer to the warranty card included in your product packaging or contact SoBuy customer support directly. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact SoBuy customer service. Refer to the contact information provided in your product packaging or visit the official SoBuy website for support options.