



Manuals.plus /

› **Blushaweu** /

› Blushaweu Compatible IOWODO W13 Smartwatch Stainless Steel Rhinestone Band Instruction Manual

Blushaweu IOWODO W13 Smartwatch Band

Blushaweu Compatible IOWODO W13 Smartwatch Band Instruction Manual

Model: IOWODO W13 Smartwatch Band | Brand: Blushaweu

1. PRODUCT OVERVIEW

This document provides instructions for the Blushaweu stainless steel rhinestone replacement band, designed for compatibility with the IOWODO W13 Smartwatch. The band features a durable 316L stainless steel construction with a polished finish and inlaid rhinestones, offering both elegance and comfort.

The band is equipped with an upgraded integrated lug design and a double-folding buckle for secure attachment and easy wearing.



Image 1.1: The Blueshaweu compatible IOWODO W13 Smartwatch band in rose gold with rhinestone detailing.

2. SETUP AND INSTALLATION

2.1 Attaching the Band to Your Smartwatch

The band features quick-release pins for easy attachment. Locate the spring bars on each end of the band. Align one end of the spring bar with the lug hole on your IOWODO W13 Smartwatch. Push the other end of the spring bar inward, then align it with the opposite lug hole and release. Ensure both ends are securely seated.



Image 2.1: Detail of the band's quick-release pins for attachment.

2.2 Adjusting the Band Length

The band is adjustable to fit wrists from 155 mm to 225 mm (6.1 to 8.9 inches). An adjustment tool is included in the packaging to remove or add links. Each removable link measures approximately 8 mm.

1. Place the band on the adjustment tool, aligning the pin of the tool with the pin on the link you wish to remove.
2. Gently push the tool's pin to push out the link pin.
3. Remove the desired number of links. It is recommended to remove an equal number of links from each side of the clasp for balanced wear.
4. Reassemble the band by inserting the link pins back into place. Ensure they are fully seated.

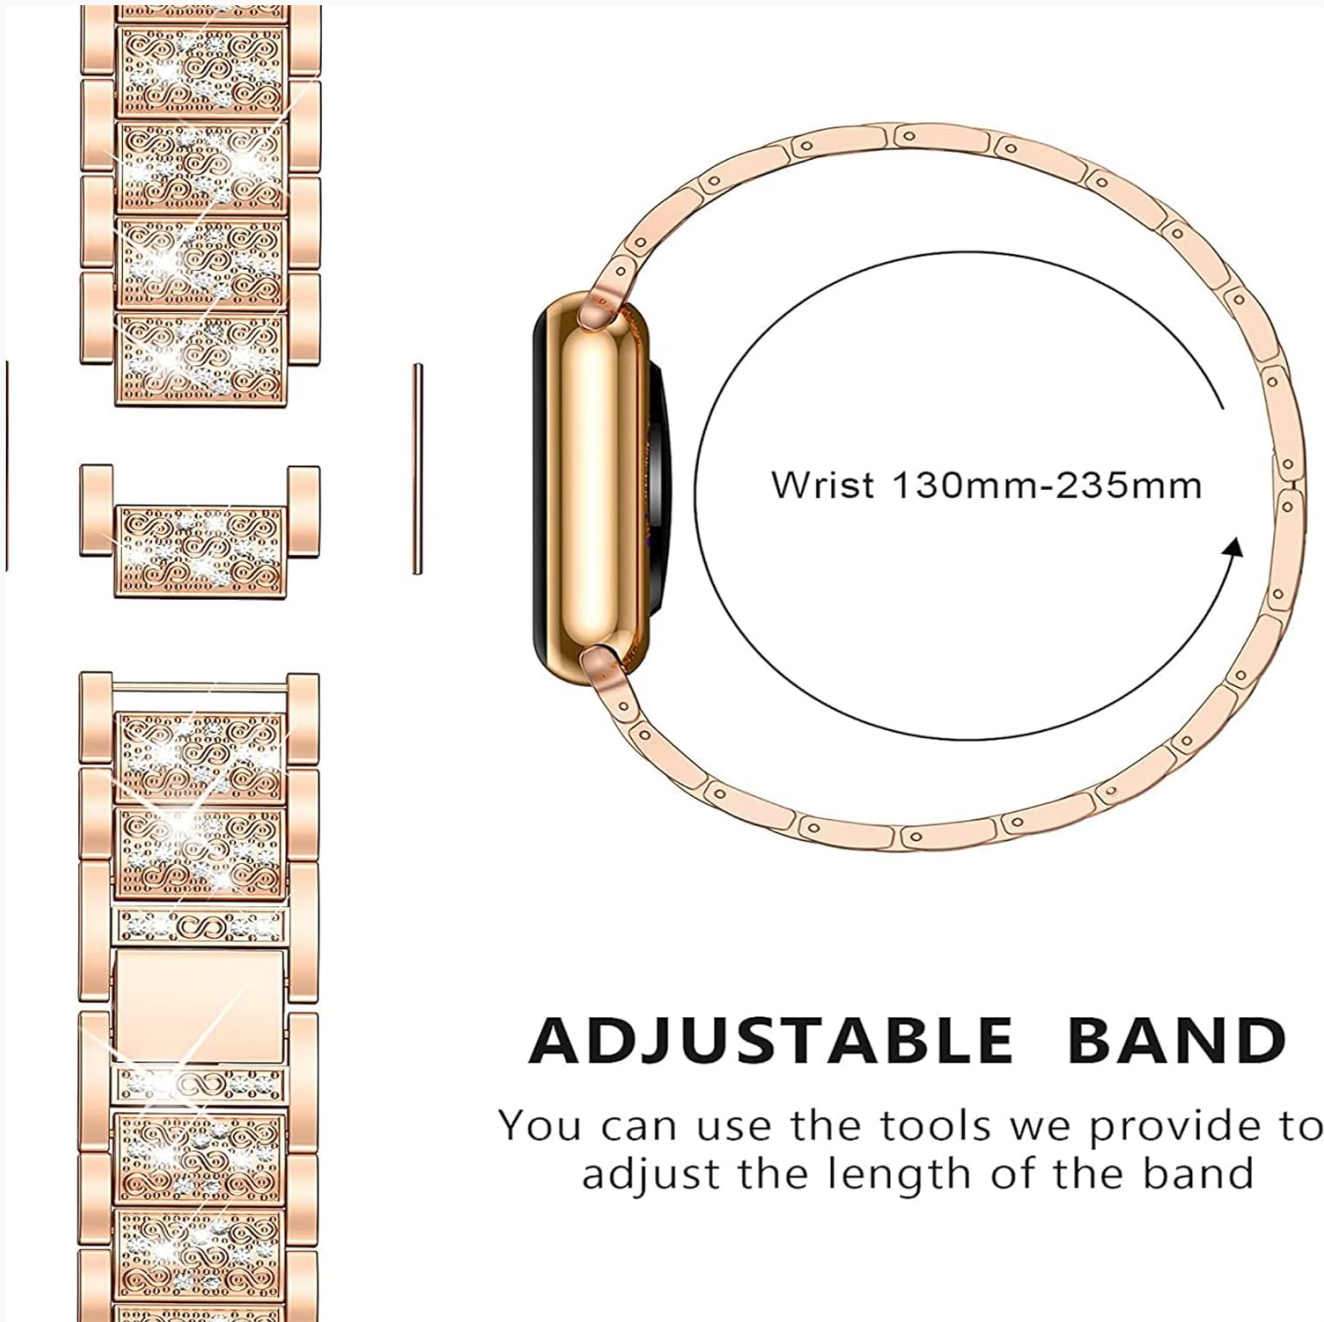


Image 2.2: Visual guide for adjusting the band length using the provided tool.

3. OPERATING THE BAND

3.1 Wearing Your Smartwatch

Once the band is attached and adjusted to your wrist size, simply open the double-folding buckle, place the watch on your wrist, and close the buckle until it clicks securely. The secure clasp design ensures the watch remains firmly on your wrist during daily activities.



Image 3.1: The band securely attached to the IOWODO W13 Smartwatch.

4. MAINTENANCE

4.1 Cleaning Instructions

To maintain the appearance and longevity of your stainless steel rhinestone band, follow these cleaning guidelines:

- Wipe the band regularly with a soft, damp cloth to remove dirt and oils.
- For deeper cleaning, use a mild soap solution and a soft brush (like a toothbrush) to gently clean the stainless steel and around the rhinestones.
- Rinse thoroughly with clean water and dry immediately with a soft, lint-free cloth to prevent water spots.
- Avoid harsh chemicals, abrasive cleaners, or ultrasonic cleaners, as these can damage the finish or dislodge rhinestones.

4.2 Care Tips

- While the band is water-resistant, prolonged exposure to water, especially chlorinated or saltwater, should be avoided. Always dry the band thoroughly after exposure to moisture.

- Store the band in a dry place when not in use to prevent tarnishing or damage.
- Avoid direct impact or scratching against hard surfaces to protect the rhinestones and the metal finish.

5. TROUBLESHOOTING

5.1 Band Not Attaching Securely

- **Issue:** The quick-release pins do not fully engage with the smartwatch lugs.
- **Solution:** Ensure the spring bars are correctly aligned with the lug holes. Sometimes, a slight jiggle or gentle pressure is needed to seat them properly. Verify that the spring bars are not bent or damaged.

5.2 Clasp Not Closing Properly

- **Issue:** The double-folding buckle does not click shut or feels loose.
- **Solution:** Check for any debris or obstructions in the clasp mechanism. Clean the clasp area with a soft brush. Ensure the band is not overly tight or loose on your wrist, which can affect clasp alignment.

5.3 Rhinestones Appearing Dull or Loose

- **Issue:** Rhinestones lose their sparkle or feel loose.
- **Solution:** Dullness is often due to dirt or residue. Follow the cleaning instructions in Section 4.1. If a rhinestone is loose, avoid further wear that might cause it to fall out and consider professional repair if necessary.

6. SPECIFICATIONS

Feature	Specification
Compatibility	IOWODO W13 Smartwatch
Material	316L Stainless Steel
Wrist Size Range	155 mm - 225 mm (6.1 - 8.9 inches)
Adjustable Links	4 removable links per side (approx. 8 mm each)
Clasp Type	Double-folding buckle
Water Resistance	Waterproof (refer to smartwatch's specific rating)
Color	Rose Gold (for this variant)

7. WARRANTY AND SUPPORT

For warranty information or customer support regarding your Blueshawe compatible IOWODO W13 Smartwatch band, please refer to the seller's contact information provided at the point of purchase. Specific warranty details are not provided within this manual.