



Manuals.plus /

› whall /

› WHALL Touch Screen Toaster 2 Slice Instruction Manual

whall KST075AU

WHALL Touch Screen Toaster 2 Slice Instruction Manual

Model: KST075AU | Brand: WHALL

INTRODUCTION AND OVERVIEW

Welcome to the WHALL Touch Screen Toaster 2 Slice user manual. This appliance is designed to provide a convenient and efficient toasting experience with its advanced touch screen interface and multiple functions. It features a sleek stainless steel design, digital timer, and various settings to perfectly toast different bread types.



Image: Front view of the WHALL Touch Screen Toaster 2 Slice, highlighting its digital display with bread type and shade settings.

Key features include a touch screen with a digital timer, 6 bread types and 6 shade settings, and dedicated defrost, bagel, and cancel functions. It also offers sound alerts that can be muted for quiet operation. The toaster is designed for easy cleaning and storage.

SETUP

Before first use, ensure the toaster is placed on a stable, heat-resistant surface. Unpack all components and remove any packaging materials from inside the toasting slots and crumb tray. It is recommended to run the toaster empty for two minutes on a medium setting to burn off any manufacturing residues and odors. This process is known as "curing" the toaster.

EASY TO OPERATION



01

Put breads into slots.



02

Press icon bread type to choose bread type and icon « » to choose shade level, press icon defrost or reheat if needed.



03

Press the lever down to the bottom.



04

Enjoy delicious bread every day.

Image: A visual guide demonstrating the simple four-step operation of the toaster, from loading bread to enjoying the finished toast.

1. **Placement:** Place the toaster on a flat, stable, and heat-resistant countertop, away from curtains or other flammable materials.
2. **Power Connection:** Plug the power cord into a grounded electrical outlet.
3. **Initial Cleaning (Curing):** For the first use, without any bread, select a medium shade setting (e.g., Shade 3) and

press the lever down. Allow the cycle to complete. This helps eliminate any new appliance odors.

OPERATING INSTRUCTIONS

The WHALL Touch Screen Toaster offers intuitive controls for a customized toasting experience.

Touch Screen & Digital Timer

The toaster features a responsive touch screen display that shows the remaining toasting time. This eliminates guesswork, allowing you to monitor the progress of your toast.



Image: The toaster's dual independent control panels are shown, illustrating the touch screen interface for selecting bread type, shade, and displaying the countdown timer.

6 Bread Types & 6 Shade Settings

Customize your toast to perfection by selecting from six different bread types and six browning shade settings. The extra-wide slots accommodate various bread sizes, from standard slices to bagels.

- **Bread Types:** Bread, Bagel, Pastry, Waffle, English Muffin, Grain.
- **Shade Settings:** Choose from 1 (lightest) to 6 (darkest) to achieve your desired crispiness. The display provides a visual representation of each shade.



Image: The toaster's display shows icons for different bread types and shade levels, accompanied by examples of various toasted items like bread, bagels, pastries, waffles, English muffins, and grain bread.

To select a bread type, press the "BREAD TYPE" button until the desired icon blinks. Use the arrow buttons to adjust the shade level. The selected shade will be displayed numerically and visually.

Defrost, Bagel, & Cancel Functions

The toaster includes specialized functions for common toasting needs:

- **Defrost:** Press the "DEFROST" button to add approximately 20% longer browning time, ideal for toasting frozen bread items.
- **Bagel:** Activate "BAGEL" mode to toast only one side of your bagel (the cut side) while gently warming the other.
- **Cancel:** Press the "CANCEL" button at any time to stop the toasting cycle and eject the bread.

4 BASIC FUNCTIONS



Image: The toaster's display highlights the Defrost, Bread Type, Reheat, and Cancel functions, with brief explanations of their purpose.

Sound Alerts & Mute

The toaster provides audible alerts when functions are selected, toasting begins, and when the cycle is complete. To mute these sounds, press and hold the "CANCEL" button for 2 seconds.

Official Product Video: WHALL Touchscreen Toaster Features

Your browser does not support the video tag.

Video: This official video demonstrates the WHALL Touchscreen Toaster's defrost, reheat, and 6 shade settings, providing a comprehensive overview of its key features and functionality.

MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your toaster.

Easy to Clean & Storage

- **Removable Crumb Tray:** To clean, allow the toaster to cool completely. Then, simply remove the crumb tray located at the back of the toaster and discard accumulated crumbs. Wipe the tray clean with a damp cloth and dry thoroughly before reinserting.
- **Exterior Cleaning:** Wipe the stainless steel exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
- **Storage:** The toaster features a built-in cord wrap in its base for neat storage when not in use.



FULL STAINLESS STEEL & TOUCH SCREEN INTEGRATION

Nutritious breakfast, homemade delicious.



Image: Close-up views of the toaster's stainless steel body and integrated touch screen, emphasizing its durable construction and modern interface.

TROUBLESHOOTING

This section provides solutions to common issues you might encounter with your WHALL toaster.

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet not working; circuit breaker tripped.	Ensure the toaster is securely plugged into a working outlet. Check your home's circuit breaker.
Bread is not toasting evenly.	Uneven bread thickness; crumb tray full; internal elements dirty.	Ensure bread slices are of uniform thickness. Clean the crumb tray. If issue persists, contact customer support.
Toaster smokes excessively.	Food lodged inside; crumb tray full; first use (curing).	Unplug and allow to cool. Remove any lodged food. Clean crumb tray. Some smoke is normal during first use.
Buttons/Touch Screen unresponsive.	Temporary electronic glitch; power interruption.	Unplug the toaster for 1-2 minutes, then plug it back in to reset the electronics.

SPECIFICATIONS

Feature	Detail
Brand	WHALL
Model Number	KST075AU
Color	Silver
Material	Stainless Steel
Product Dimensions	12.02"D x 9.25"W x 7.72"H
Wattage	850 watts
Number of Slices	2
Special Feature	LED Indicator
Display Type	LCD
Item Weight	4.6 Pounds
Voltage	120V
Number of Settings	6 (Shade)
Number of Programs	3 (Defrost, Bagel, Reheat)
UPC	810118482908
Country of Origin	China

WARRANTY & SUPPORT

WHALL provides a **12-month Guarantee** for this product. If you receive defective products or are not satisfied, please contact customer support for assistance.

For further assistance, you may refer to the official User Manual (PDF) available online: [WHALL Toaster User Manual PDF](#).

