

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Fockety](#) /
- > [Fockety X7 HD 1080P WiFi Wireless Mini Spy Camera User Manual](#)

Fockety X7

Fockety X7 HD 1080P WiFi Wireless Mini Spy Camera User Manual

Model: X7

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Fockety X7 HD 1080P WiFi Wireless Mini Spy Camera. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize its performance. This camera is designed for indoor video surveillance, offering features such as HD recording, motion detection, and remote viewing via WiFi.

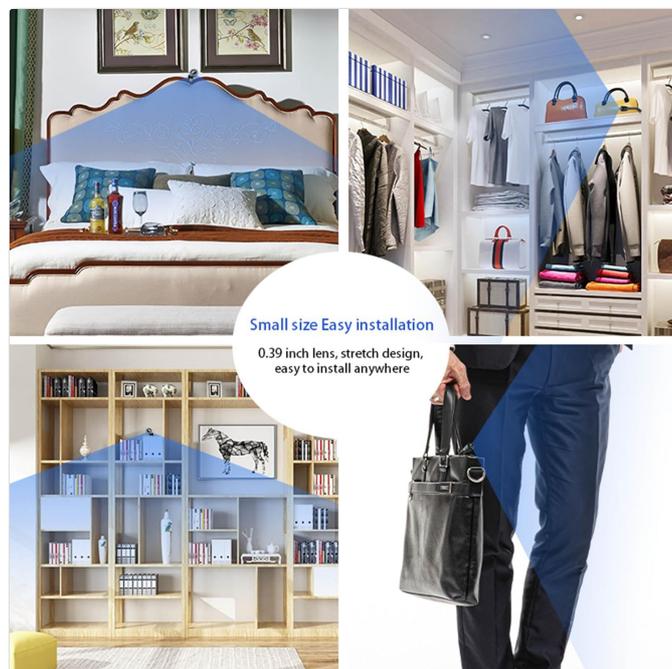


Figure 1.1: Examples of discreet camera placement in various indoor environments.

2. SAFETY INFORMATION

- Do not expose the camera to extreme temperatures, humidity, or dust.
- Avoid dropping or subjecting the camera to strong impacts.
- Keep the camera away from water and other liquids.
- Do not attempt to disassemble or modify the camera. This will void the warranty.

- Use only the provided USB cable for charging.
- Ensure the camera is used in compliance with all local laws and regulations regarding surveillance.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Fockety X7 Mini WiFi Camera
- 1 x USB Charging Cable
- 1 x User Manual (this document)

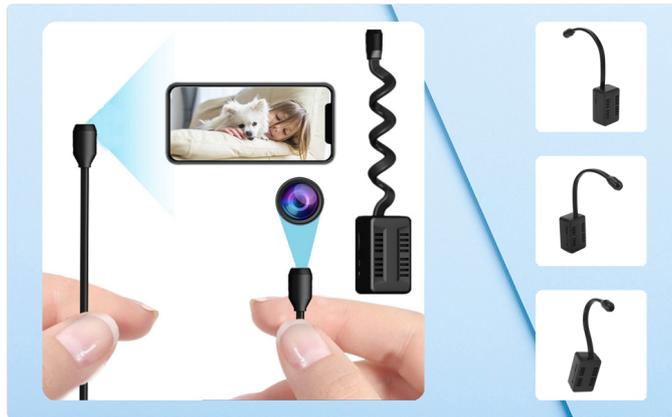


Figure 3.1: Camera and USB cable.

4. PRODUCT OVERVIEW

The Fockety X7 is a compact and versatile mini camera featuring a flexible lens for adjustable viewing angles. It integrates WiFi connectivity for remote monitoring and supports various recording modes.





Figure 4.1: Fockety X7 Mini WiFi Camera.



Figure 4.2: Product details and dimensions.



Figure 4.3: Close-up of the camera lens.

5. SETUP

5.1 Charging the Camera

Before first use, fully charge the camera. Connect the provided USB cable to the camera's charging port and to a USB power source (e.g., computer, laptop, power bank, or wall charger). The camera has a built-in 3000 mAh lithium battery.

5.2 Micro SD Card Installation

The camera supports Micro SD cards for local storage (card not included). Locate the Micro SD card slot on the camera body. Gently insert the Micro SD card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.

5.3 App Installation and WiFi Connection

To enable remote viewing and advanced features, install the dedicated mobile application on your smartphone and connect the camera to your WiFi network.

1. **Download the App:** Scan the QR code provided in the quick start guide (if available) or search for the recommended app name in your smartphone's app store.
2. **Power On:** Turn on the camera. It will start broadcasting a WiFi hotspot.
3. **Connect to Camera Hotspot:** On your smartphone, go to WiFi settings and connect to the camera's WiFi hotspot (usually named something like 'IPC-XXXXXX').
4. **Add Device in App:** Open the app, follow the on-screen instructions to add a new device. The app will guide you through connecting the camera to your home or office WiFi network.
5. **Remote Access:** Once connected to your WiFi, you can view live streams and recordings from anywhere with an internet connection.



Figure 5.1: Key features including WiFi connectivity.

6. OPERATING INSTRUCTIONS

6.1 Recording Modes

The camera supports multiple recording modes, both with and without WiFi connectivity:

- **Working with WiFi:**
 - **Phone Recording Mode:** Click the record button in the app to save video directly to your phone.
 - **Alarm Recording Mode:** The camera records automatically when motion is detected and sends an alert to your phone.
- **Working Without WiFi (Requires Micro SD card):**
 - **Full-time Recording Mode:** The camera records continuously, overwriting older footage when the card is full.
 - **Timed Recording Mode:** Set specific time periods for the camera to record.



Figure 6.1: Four available recording modes.

6.2 Motion Detection

The camera features intelligent motion detection. When movement is detected, the camera will automatically begin recording and send an alarm notification to your connected mobile phone. This helps conserve storage space by only recording relevant events.



Figure 6.2: Motion detection alarm and notifications.

6.3 Night Vision

The camera is equipped with night vision capabilities, allowing it to capture clear images and videos in low-light conditions up to approximately 10 meters.

6.4 Remote Viewing and Playback

Through the mobile application, you can remotely view live footage from the camera. Additionally, recorded videos stored on the Micro SD card can be played back and downloaded directly to your smartphone.

6.5 Adjusting Monitoring Angle

The camera features a flexible metal tube lens, allowing you to bend and adjust the monitoring angle 360 degrees as needed for optimal coverage.

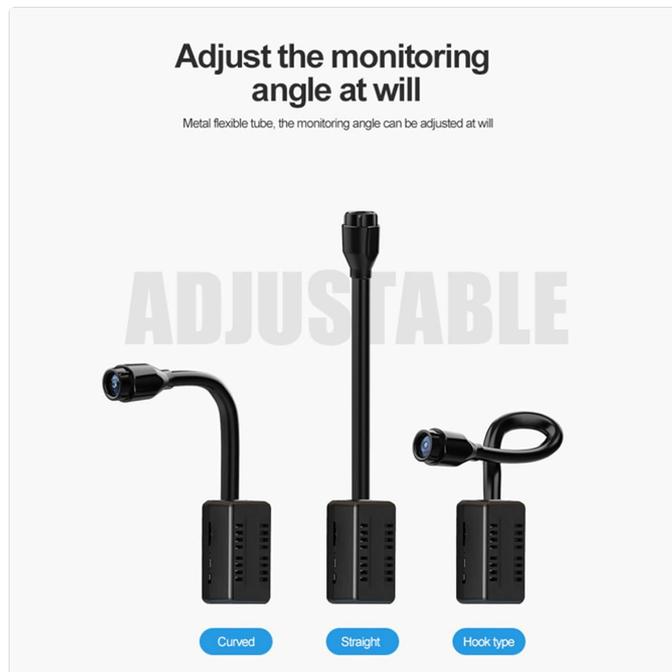


Figure 6.3: Adjustable monitoring angles.

7. MAINTENANCE

- Clean the camera lens regularly with a soft, dry cloth to ensure clear image quality.
- Avoid using harsh chemicals or abrasive cleaners on the camera.
- Periodically check for firmware updates through the mobile application to ensure optimal performance and security.
- If storing the camera for an extended period, ensure it is fully charged and stored in a cool, dry place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera not turning on.	Low battery.	Charge the camera fully using the provided USB cable.
Cannot connect to WiFi.	Incorrect WiFi password; Camera too far from router; 5GHz WiFi network.	Ensure correct password. Move camera closer to router. Ensure your router is broadcasting a 2.4GHz network, as the camera only supports 2.4G WiFi.
No recording to Micro SD card.	Micro SD card not inserted correctly; Card full or corrupted; Incorrect recording mode.	Reinsert the card. Format the card (via app or computer). Check recording mode settings.
Poor image quality.	Dirty lens; Low light conditions; Network bandwidth issues.	Clean the lens. Ensure adequate lighting or rely on night vision. Check your internet connection speed.
App not responding.	App crash; Outdated app version.	Close and restart the app. Check for app updates in your app store.

9. SPECIFICATIONS

Feature	Detail
Model	X7
Material	ABS Plastic
Resolution	1920 x 1080p (Full HD)
Image Sensor	CMOS
WiFi Connectivity	2.4G WiFi (WLAN)
Battery Capacity	Built-in 3000 mAh Lithium Battery
Motion Detection	Supported
Night Vision Distance	Approx. 10 meters
Storage	Micro SD Card (not included)
Camera Lens Diameter	Approx. 0.3 inches (Φ0.3in)
Main Body Dimensions	Approx. 2.52in (Height) x 1.42in (Width) x 1.06in (Depth)
Flexible Neck Length	Approx. 7.49in / 9.8in (depending on configuration)

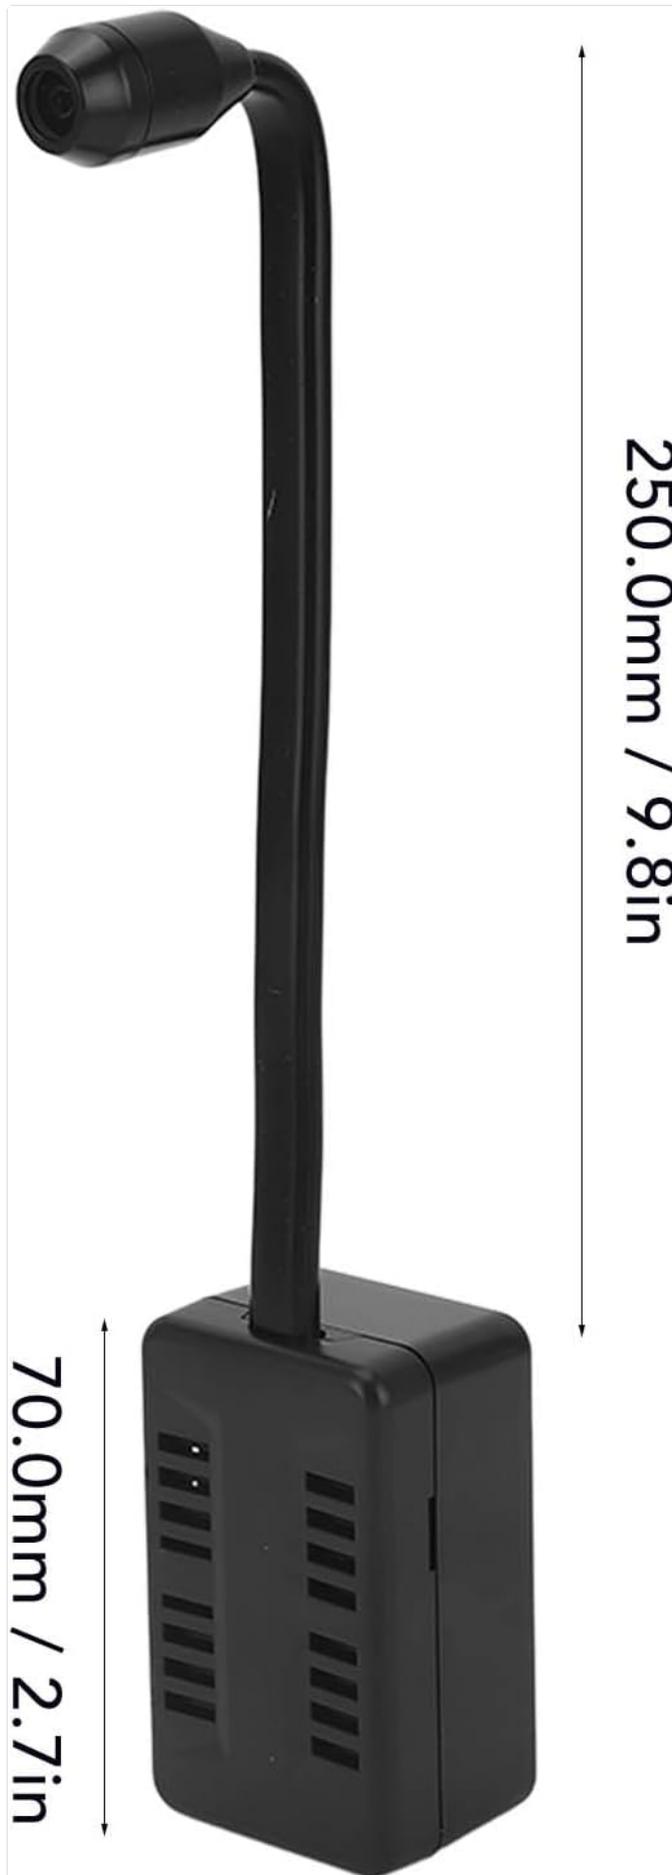


Figure 9.1: Detailed product dimensions.

10. WARRANTY AND SUPPORT

The Fockety X7 Mini WiFi Camera comes with a 12-month warranty. If you encounter any issues or have questions regarding your purchase, please do not hesitate to contact our customer support. We are committed to resolving your concerns within 24 hours.

For support, please refer to the contact information provided with your purchase or visit the official Fockety website.