

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [TELEFUNKEN](#) /

› [Telefunken 55" QLED Android Smart TV 4K UHD Instruction Manual \(Model QU55AN900M\)](#)

## TELEFUNKEN QU55AN900M

# Telefunken 55" QLED Android Smart TV 4K UHD Instruction Manual

Model: QU55AN900M

## 1. INTRODUCTION

Thank you for choosing the Telefunken 55" QLED Android Smart TV. This manual provides essential information for the safe and efficient use of your television. Please read it thoroughly before operating the device and retain it for future reference.

Your new television features a stunning 4K Ultra HD QLED display, enhanced with Dolby Vision and HDR 10 for vibrant colors and impressive detail. Powered by Android TV, it offers access to a wide range of streaming services and applications. Enjoy immersive audio with Dolby Atmos and convenient control through Google Assistant.

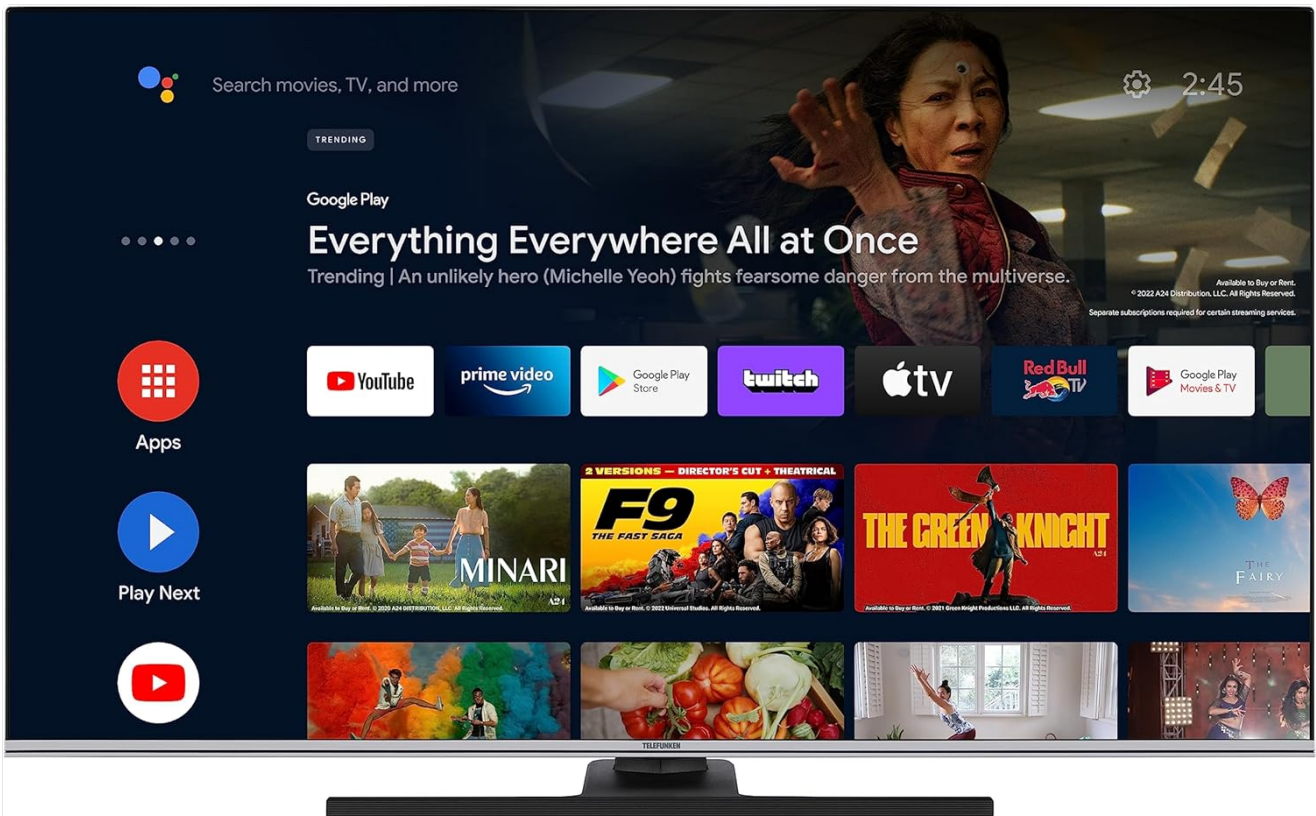


Image 1.1: The Telefunken 55" QLED Android Smart TV showcasing its Android TV interface with popular streaming applications.

## 2. SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following safety precautions:

- **Power Supply:** Connect the TV only to an AC power source within the specified voltage range.
- **Ventilation:** Ensure adequate space around the TV for proper ventilation. Do not block ventilation openings.
- **Placement:** Place the TV on a stable, level surface to prevent it from falling. Avoid direct sunlight, heat sources, and excessive dust.
- **Moisture:** Do not expose the TV to rain or moisture. Keep liquids away from the device.
- **Cleaning:** Disconnect the power cord before cleaning. Use a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Servicing:** Do not attempt to service the TV yourself. Refer all servicing to qualified personnel.

## 3. PACKAGE CONTENTS

Verify that all items are present in the packaging:

- Telefunken 55" QLED Android Smart TV
- Remote Control
- AAA Batteries (x2)
- Power Cord
- TV Stand Components (Base and Screws)
- Quick Start Guide (this document serves as the detailed manual)

## 4. SETUP

### 4.1 Unpacking and Placement

Carefully remove the TV from its packaging. It is recommended to have two people for this process due to the size and weight of the unit. Place the TV on a flat, stable surface or prepare for wall mounting.

### 4.2 Stand Installation

If using the included stand:

1. Place the TV face down on a soft, clean cloth to protect the screen.
2. Align the stand components with the mounting holes on the bottom of the TV.
3. Secure the stand using the provided screws. Ensure they are tightened firmly.

### 4.3 Wall Mounting

The TV is compatible with VESA M6 200x200 wall mounts. Follow the instructions provided with your wall mount kit. Ensure the wall can support the weight of the TV and the mount.

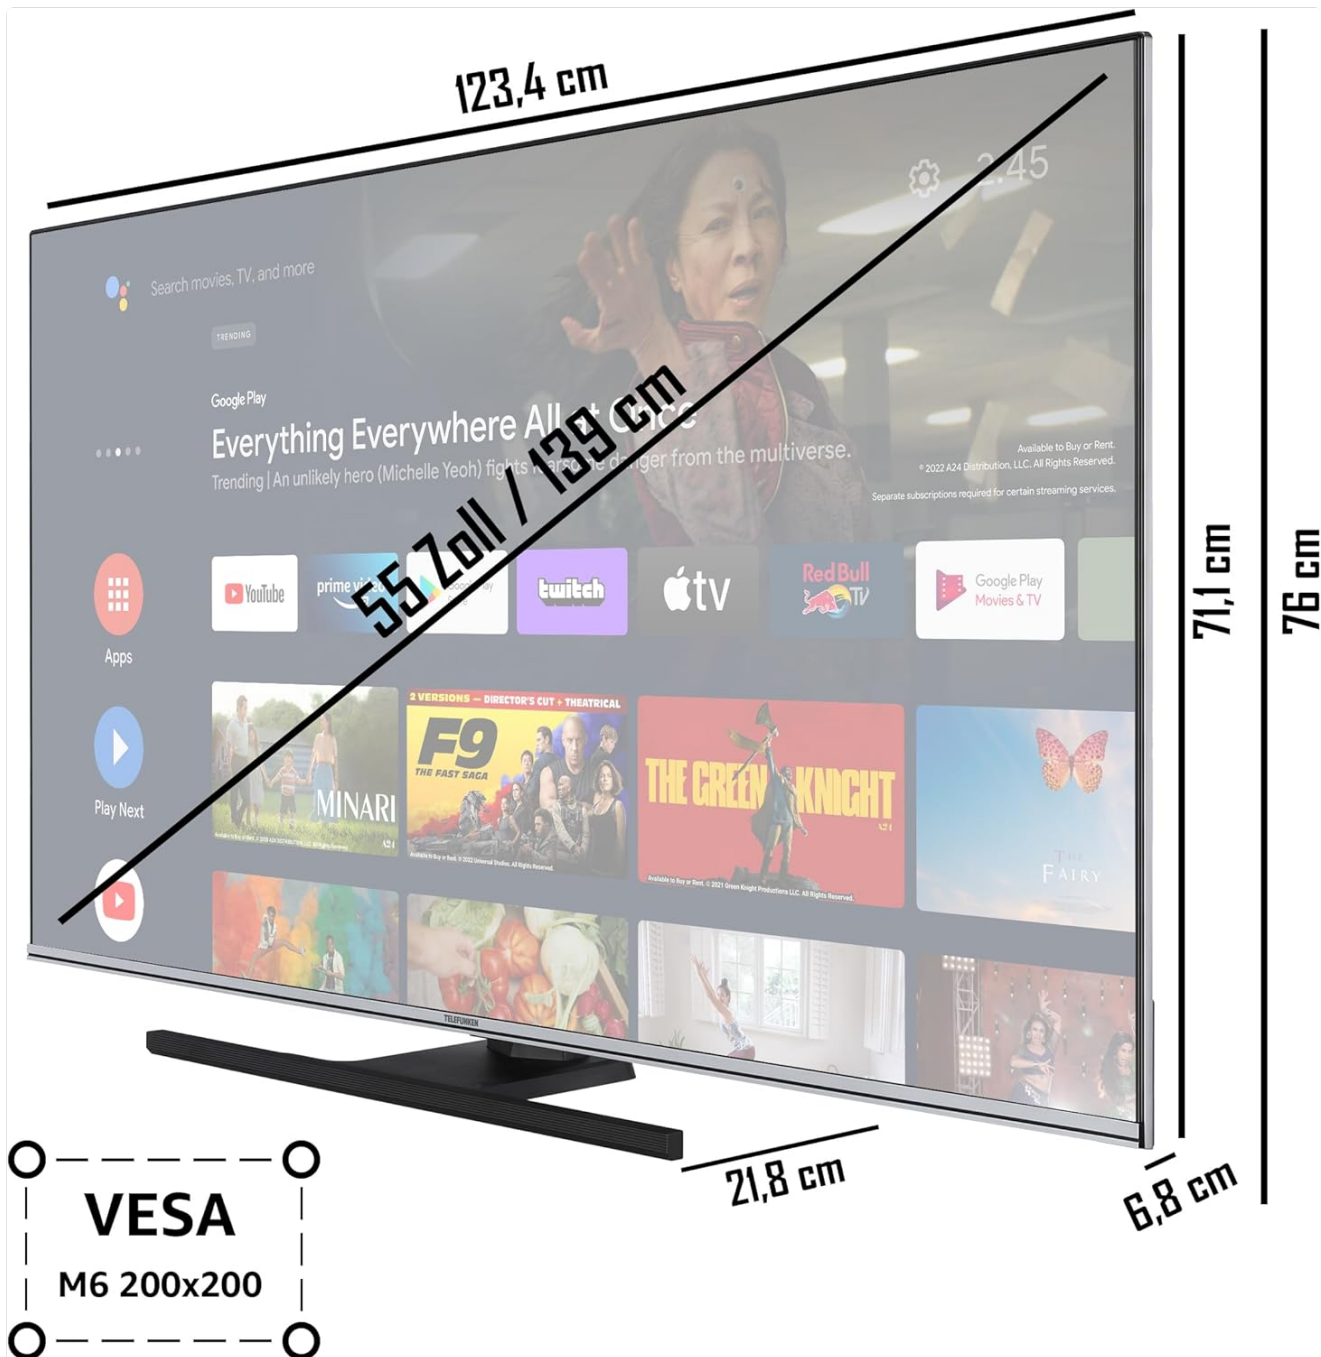


Image 4.1: TV dimensions and VESA mounting specifications (M6 200x200).

#### 4.4 Connecting Peripherals

Connect your external devices to the TV's ports. The TV features:

- 3x HDMI ports (CEC+ARC compatible)
- 2x USB ports
- CI+ Slot
- Headphone Output
- Optical Audio Output
- Ethernet port
- Antenna (RF/F) input



**3x HDMI**  
(CEC+ARC)

**2x USB**

**CI+ Slot**

**Kopfhörerausgang**

**Optischer Audio  
Ausgang**

**Ethernet**

**Antenne**  
(RF/F)



Image 4.2: Overview of the TV's connectivity options.

## 4.5 First Power On and Initial Setup

After connecting the power cord, press the power button on the remote control or the TV. The TV will guide you through the initial setup process, including:

1. Language selection.
2. Network connection (Wi-Fi or Ethernet).
3. Google account sign-in (optional, but recommended for full Android TV features).
4. Channel scanning for DVB-T2, DVB-C, or DVB-S2.

## 5. OPERATING THE TV

### 5.1 Remote Control Functions

The included Bluetooth remote control provides easy access to all TV functions. Insert the two AAA batteries into the remote control before use.



Image 5.1: Remote control with Google Assistant and quick access buttons.

- **Power Button:** Turns the TV on or off.
- **Google Assistant Button:** Activates voice control.
- **Navigation Pad (OK button):** Navigates menus and confirms selections.
- **Volume +/-:** Adjusts the volume level.
- **Channel P+/P-:** Changes TV channels.
- **Netflix, Prime Video, YouTube Buttons:** Direct access to these streaming applications.

## 5.2 Android TV Interface

The Android TV home screen provides access to installed applications, recommended content, and settings. Navigate using the remote control's directional pad.

# Erleben Sie die Vielfalt von



**NETFLIX**

prime video

Disney+

twitch

DA  
ZN

YouTube

uvm.

Image 5.2: Access a wide range of applications through Google Play.

## 5.3 Smart Features

- **Google Assistant:** Use your voice to control the TV, search for content, or get information. Simply press the Google Assistant button on your remote and speak your command.



Image 5.3: Google Assistant integration for voice control.

- **Google Chromecast:** Cast content from your compatible mobile devices (smartphone, tablet) directly to your TV screen.

#### 5.4 Picture and Sound Settings

Your TV supports advanced picture and sound technologies:

- **Dolby Vision / HDR 10:** Provides enhanced contrast, brightness, and color depth for a more realistic viewing experience.
- **Super Resolution:** Optimizes image clarity and detail.
- **Micro Dimming:** Improves contrast by analyzing and adjusting brightness in different zones of the screen.



Image 5.4: Visual technologies for enhanced picture quality.

- **Dolby Atmos:** Delivers immersive, multi-dimensional audio that moves around you.

# Dolby ATMOS



Image 5.5: Dolby Atmos for an enhanced audio experience.

## 5.5 Triple Tuner Operation

The integrated triple tuner allows you to receive television signals directly without an external receiver:

- **DVB-T2:** Digital Terrestrial Television (Antenna).
- **DVB-C:** Digital Cable Television.
- **DVB-S2:** Digital Satellite Television.

Access channel lists and program guides through the TV's menu.

## 6. MAINTENANCE

### 6.1 Cleaning

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner (never spray directly onto the screen).

- **Cabinet:** Wipe the TV cabinet with a soft, dry cloth. Avoid using abrasive cleaners or solvents.

## 6.2 Software Updates

The TV may receive software updates to improve performance and add new features. Ensure your TV is connected to the internet to receive these updates automatically or check for them manually in the settings menu.

## 7. TROUBLESHOOTING

If you encounter issues, try the following solutions before contacting support:

Problem	Possible Solution
No power	Check if the power cord is securely plugged into the TV and the wall outlet. Try a different outlet.
No picture, but sound is present	Ensure the correct input source is selected. Check external device connections.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Verify audio cable connections for external devices.
Remote control not working	Replace the batteries. Ensure there are no obstructions between the remote and the TV. Repair the Bluetooth remote if necessary.
Network connection issues	Restart your router. Check Wi-Fi password. Try connecting via Ethernet cable.
Slow performance / Apps crashing	Close unused applications. Clear cache for problematic apps. Restart the TV. Consider a factory reset as a last resort (this will erase all personal data and settings).

## 8. SPECIFICATIONS

Feature	Specification
Brand	TELEFUNKEN
Model Number	QU55AN900M
Screen Size	55 Inches (139 cm)
Display Technology	QLED
Resolution	4K UHD (3840 x 2160)
Refresh Rate	50 Hz
Operating System	Android TV
Special Features	Android TV, Chromecast, Dolby Atmos, Google Play Store, Dolby Vision, HDR10, Super Resolution, Micro Dimming

Feature	Specification
Connectivity	Bluetooth, HDMI (x3), USB (x2), Wi-Fi, Ethernet, Optical Audio Out, Headphone Out, Antenna (RF/F)
Total USB Ports	2
Power Consumption (SDR)	64.0 W
Power Consumption (HDR)	123 W
Energy Efficiency Class	E (SDR), G (HDR)
Product Dimensions (DxWxH)	21.8 x 123.4 x 75.9 cm
VESA Compatibility	M6 200x200
Included Components	TV, Remote Control with 2 AAA batteries

For detailed product information and energy label data, refer to the EU Product Data Sheet and EPREL database:

- EPREL QR Code Number: 50684814
- EPREL Database Link: <https://eprel.ec.europa.eu/qr/1606037>

EU-Produktdatenblatt gemäß der Delegierten Verordnung (EU) Nr. 2019/2013

Fernsehgeräte	Parameter-Wert	Einheit
NAME ODER HANDELSMARKE DES LIEFERANTEN	TELEFUNKEN	
ANSCHRIFT DES LIEFERANTEN	PARKRING 6, 85748 GARCHING	
MODELLKENNUNG	QU55AN900M	
ENERGIEEFFIZIENZKLASSE BEI STANDARD-DYNAMIKUMFANG (SDR)	E	
LEISTUNGS-AUFNAHME IM EIN-ZUSTAND BEI STANDARD-DYNAMIKUMFANG (SDR)	64,0	W
ENERGIEEFFIZIENZKLASSE (HDR)	G	
LEISTUNGS-AUFNAHME IM EIN-ZUSTAND BEI HOHEM DYNAMIKUMFANG (HDR), FALLS VORHANDEN	123	W
LEISTUNGS-AUFNAHME IM AUS-ZUSTAND, FALLS ZUTREFFEND	N/A	W
LEISTUNGS-AUFNAHME IM BEREITSCHAFTSZUSTAND, FALLS ZUTREFFEND	0,5	W
LEISTUNGS-AUFNAHME IM VERNETZTEN BEREITSCHAFTSBETRIEB, FALLS ZUTREFFEND	2,0	W
ART DES ELEKTRONISCHEN DISPLAYS	Fernsehgerät	
SEITENVERHÄLTNIS	16:9	
BILDSCHIRMAUFLÖSUNG	3840x2160	Pixel
BILDSCHIRMDIAGONALE	139,0	cm
BILDSCHIRMDIAGONALE	55	Zoll

SICHTBARE BILDSCHIRMFLÄCHE	82.3	dm <sup>2</sup>
VERWENDETE PANEL-TECHNOLOGIE	QLED LCD	
AUTOMATISCHE HELLIGKEITSREGELUNG (ABC) VORHANDEN	Nein	
SPRACHERKENNUNGSSENSOR VORHANDEN	Nein	
ANWESENHEITSSENSOR VORHANDEN	Nein	
BILDWIEDERHOLFREQUENZ (STANDARD)	50	Hz
MINDESTENS GARANTIERTE VERFÜGBARKEIT VON SOFTWARE- UND FIRMWARE- AKTUALISIERUNGEN (AB DEM ZEITPUNKT DER BEENDIGUNG DES INVERKEHRBRINGENS)	8	Jahre
MINDESTENS GARANTIERTE VERFÜGBARKEIT VON ERSATZTEILEN (AB DEM ZEITPUNKT DER BEENDIGUNG DES INVERKEHRBRINGENS)	7	Jahre
MINDESTENS GARANTIERTE PRODUKTUNTERSTÜTZUNG	7	Jahre
MINDESTLAUFZEIT DER VOM LIEFERANTEN ANGEBOTENEN ALLGEMEINEN GARANTIE	0	Jahre
ART DER STROMVERSORGUNG (NETZTEIL)	INTERN	
EXTERNER NETZTEIL (NICHT GENORMT, IN DER VERKAUFSPACKUNG ENTHALTEN)	-	
EINGANGSSPANNUNG	-	V
AUSGANGSSPANNUNG	-	V
GENORMTES EXTERNES NETZTEIL (ODER GEEIGNETES NETZTEIL, FALLS NICHT IN DER VERKAUFSPACKUNG ENTHALTEN)	-	
BENÖTIGTE AUSGANGSSPANNUNG	-	V
BENÖTIGTE STROMSTÄRKE (MINDESTWERT)	-	A
BENÖTIGTE STROMFREQUENZ	-	Hz

Image 8.1: EU Product Data Sheet.



# ENERG



---

**TELEFUNKEN**

**QU55AN900M**






**64** kWh/1000h

ABCDEF **G**



**123** kWh/1000h

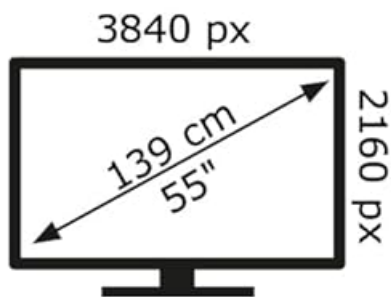

2019/2013



50684814

Image 8.2: EU Energy Label.

## 9. WARRANTY AND SUPPORT

Telefunken ensures the availability of spare parts for this product for **7 years** from the date of market launch. For warranty claims, technical support, or service inquiries, please refer to the contact information provided with your

purchase documentation or visit the official Telefunken website for your region.

© 2023 Telefunken. All rights reserved.