

ADN-306

Instruction Manual

GENERIC AUTO STEREO REMOTE CONTROL

For Pioneer AVH-X1600DVD / AVH-X1650DVD Multimedia DVD Receiver

Introduction

This manual provides instructions for the operation and maintenance of your new Generic Auto Stereo Remote Control, model ADN-306. This remote is designed for use with Pioneer AVH-X1600DVD and AVH-X1650DVD Multimedia DVD Receivers, offering convenient control over your car stereo system.



Image: Front view of the Generic Auto Stereo Remote Control, model ADN-306. The remote is silver and black, featuring various control buttons for functions such as power, play/pause, navigation, volume, and specific Pioneer functions like ATT and DISCIP.CH. The text "For use with PIONEER" is visible at the top, and "ADN-306" is at the bottom.

Product Features

- **Battery Included:** Ready for immediate use upon arrival.

- **High Quality Construction:** Designed for durability and reliable performance.
- **100% Brand New:** Ensures optimal functionality and longevity.
- **Ergonomic Design:** Comfortable to hold and easy to operate.
- **Button Control:** Intuitive button layout for precise command.

Setup

Your remote control comes with a battery already included. Follow these steps to prepare it for use:

1. **Unpack the Remote:** Carefully remove the remote control from its packaging.
2. **Battery Activation (if applicable):** Some remotes may have a plastic tab in the battery compartment to prevent discharge during shipping. If present, gently pull and remove this tab.
3. **Point and Use:** Point the remote control directly at your Pioneer AVH-X1600DVD or AVH-X1650DVD Multimedia DVD Receiver. Ensure there are no obstructions between the remote and the receiver.

No pairing or complex setup is typically required for this type of replacement remote control.

Operating Instructions

Familiarize yourself with the buttons on your remote control to effectively manage your Pioneer car stereo system. The remote features a standard layout with dedicated buttons for various functions:

Power Button (): Located at the top right. Press to turn the receiver on or off.

Play/Pause Button (): Located at the top left. Controls playback (play/pause) for media.

Navigation Pad (Arrows & SELECT):

- **Up Arrow (▲):** Navigates up in menus or lists.
- **Down Arrow (▼):** Navigates down in menus or lists.
- **Left Arrow (◀):** Navigates left, or performs a reverse/seek backward function.
- **Right Arrow (▶):** Navigates right, or performs a forward/seek forward function.
- **SELECT Button:** Located in the center of the navigation pad. Confirms selections or enters menus.

B (ESCAPE) Button: Located below the Play/Pause button. Used to go back, exit a menu, or cancel an action.

ATT (Attention/Mute) Button: Located below the Power button. Mutes or unmutes the audio output.

F (FUNCTION) Button: Located on the left side, below the navigation pad. Accesses various function modes or settings.

DISCIP.CH (Discipline Channel) Button: Located below the down arrow. Likely used for channel selection or specific audio discipline settings.

A Button: Located on the right side, below the ATT button. Its specific function may vary depending on the receiver's mode or menu.

Volume Buttons (VOL - / VOL +): Located at the bottom center.

- **VOL - (◀):** Decreases the audio volume.
- **VOL + (▶):** Increases the audio volume.

For detailed functionality of each button in specific modes (e.g., radio, CD/DVD, USB), refer to your Pioneer AVH-X1600DVD or AVH-X1650DVD Multimedia DVD Receiver's original instruction manual.

Maintenance

To ensure the longevity and proper functioning of your remote control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** If the remote's range decreases or buttons become unresponsive, it may be time to replace the battery. Open the battery compartment (usually on the back), remove the old battery, and insert a new one, ensuring correct polarity.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical shocks and drops, which can damage internal circuitry.

Troubleshooting

If you experience issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Ensure the remote is pointed directly at the Pioneer receiver.
 - Check for any obstructions between the remote and the receiver's IR sensor.
 - Replace the battery, even if it's new, to rule out a faulty battery.
- **Limited Range:**
 - The battery may be low. Replace it.
 - Ensure the remote's IR emitter (usually at the front tip) is clean and unobstructed.
- **Specific Buttons Not Working:**
 - Clean the remote, especially around the unresponsive buttons, to remove any dirt or debris.
 - If only certain buttons fail, the remote may be damaged.

If these steps do not resolve the issue, the remote control may require replacement.

Specifications

Model Number	ADN-306
Compatibility	Pioneer AVH-X1600DVD, Pioneer AVH-X1650DVD Multimedia DVD Receivers
Brand	Generic
Manufacturer	StreamUSA
Controller Type	Button Control
Special Feature	Ergonomic
ASIN	B0CC6CRCG8
Date First Available	November 20, 2016

Warranty Information

This Generic Auto Stereo Remote Control comes with a **60-day warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the product is free from defects in material and workmanship under normal use. Please retain your proof of purchase for any warranty claims.

Support

For further assistance or if you have questions not covered in this manual, please refer to the original instruction manual for your Pioneer AVH-X1600DVD or AVH-X1650DVD Multimedia DVD Receiver. For issues specifically related to the remote control, please contact the seller or manufacturer through the platform where the purchase was made.