

adidas MDH25

Adidas MC80 Spikeless Golf Shoes User Manual

INTRODUCTION

This manual provides essential information for the proper use, care, and maintenance of your Adidas MC80 Spikeless Golf Shoes. Designed for performance and comfort, these shoes blend traditional aesthetics with modern golf technology. Please read this manual thoroughly to ensure optimal performance and longevity of your product.



Image: Side view of the Adidas MC80 Spikeless Golf Shoe, showcasing its classic design and spikeless sole.

KEY FEATURES

- **BOOST Midsole:** Provides responsive cushioning and energy return for comfort throughout your round.
- **Full Grain Leather Upper:** Offers durability, a premium feel, and classic styling.
- **INSITE Sockliner:** Designed for enhanced fit and comfort.
- **Spikeless Outsole with Torsion Bar:** Ensures stable footing on the course and allows for seamless transition to off-course activities without changing shoes.



Image: Top-down view of a pair of Adidas MC80 Spikeless Golf Shoes, highlighting the lacing system and overall shape.

INITIAL SETUP AND FIT

Proper fit is crucial for comfort and performance. Follow these steps to ensure your shoes are correctly set up:

1. **Sizing:** Refer to the Adidas size guide to confirm you have the correct size. Ensure there is a small gap (about a thumb's width) between your longest toe and the end of the shoe.
2. **Lacing:** Lace your shoes securely but not overly tight. The lacing should provide a snug fit around the midfoot without causing pressure points.
3. **First Wear:** Wear the shoes for a short period indoors to assess comfort before using them on the golf course. This allows the materials to begin conforming to your foot shape.



Image: Close-up view of the toe box and lacing area, showing the detailed stitching and eyelets.

USAGE GUIDELINES

The Adidas MC80 Spikeless Golf Shoes are designed for optimal performance on the golf course and versatility off it.

- **On the Course:** The spikeless outsole provides reliable grip and stability during your swing. The Torsion bar reinforcement further enhances stability.
- **Off the Course:** The spikeless design allows for comfortable wear in the clubhouse or during travel without the need to change shoes.
- **Weather Conditions:** While the leather upper offers some protection, these shoes are not fully waterproof. Avoid prolonged exposure to heavy rain or standing water to maintain their condition.



Image: Bottom view of the spikeless outsoles, showing the traction pattern and Torsion bar.

CARE AND MAINTENANCE

Proper care will extend the life and appearance of your Adidas MC80 Golf Shoes:

- **Cleaning the Leather Upper:** After each use, wipe down the leather with a soft, damp cloth to remove dirt and debris. For tougher stains, use a mild leather cleaner specifically designed for golf shoes. Avoid harsh chemicals.
- **Drying:** If the shoes become wet, stuff them with newspaper or shoe trees to absorb moisture and help maintain their shape. Allow them to air dry naturally at room temperature, away from direct heat sources or sunlight.
- **Sole Cleaning:** Use a brush to remove any grass, mud, or dirt from the spikeless outsole.
- **Storage:** Store your shoes in a cool, dry place. Using shoe trees can help prevent creasing and maintain the shoe's form.



Image: Detailed close-up of the spikeless sole, showing the individual traction elements.

TROUBLESHOOTING COMMON ISSUES

If you encounter any issues with your golf shoes, consider the following:

- **Discomfort/Rubbing:** Ensure your shoes are properly laced and that you are wearing appropriate golf socks. If discomfort persists, re-evaluate your shoe size or consider breaking them in further.
- **Reduced Grip:** Clean the outsoles thoroughly to remove any accumulated debris that might be affecting traction.
- **Leather Wear:** Regular cleaning and conditioning of the leather can prevent premature wear and cracking.

PRODUCT SPECIFICATIONS

Specification	Detail
Model Number	MDH25

Department	Mens
Manufacturer	Adidas
Sole Material	Rubber
Outer Material	Leather
Closure Type	Lace-Up
Date First Available	August 2, 2023
Package Dimensions	14.63 x 10.75 x 6 inches; 1 Pounds

WARRANTY AND SUPPORT

Your Adidas MC80 Spikeless Golf Shoes are covered by Adidas' standard manufacturer warranty against defects in materials and workmanship. For specific warranty details, duration, and terms, please refer to the warranty information provided at the time of purchase or visit the official Adidas website.

For product support, inquiries, or to report a warranty claim, please contact Adidas customer service through their official website or the retailer from whom you purchased the product. Please have your proof of purchase and product model number (MDH25) available when contacting support.

For additional information, you may visit the [Adidas Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question