

Timex TW2W159009J

Timex Women's Easy Reader Watch (Model TW2W159009J) - Instruction Manual

INTRODUCTION

This manual provides instructions for the Timex Women's Easy Reader Watch, Model TW2W159009J. This timepiece is designed for clear readability and features a durable construction suitable for daily wear.

Key Features:

- **Easy to Read Dial:** A clear and legible dial design ensures effortless time reading, combining functionality with simplicity.
- **Natural Leather Strap:** Easily adjustable and positioned comfortably on your wrist.
- **INDIGLO Backlight:** INDIGLO night light allows you to tell the time in the dark with the push of a button.
- **Simplicity and Effortless Style:** Features a Mother-of-Pearl dial and polished silver-tone case; full Arabic numerals; mineral glass crystal.
- **Water Resistant:** Water resistant to 50 meters.





Front view of the Timex Women's Easy Reader Watch, highlighting the clear dial and elegant design.

SETUP

1. Setting the Time

Locate the crown on the right side of the watch case. Gently pull the crown outwards to the time-setting position. Rotate the crown clockwise or counter-clockwise to adjust the hour and minute hands to the correct time. Once the

correct time is set, push the crown back in fully to start the watch movement.



Side view of the watch, illustrating the crown for time adjustment.

2. Adjusting the Strap

The natural leather strap features a traditional buckle clasp. To adjust the fit, thread the end of the strap through the buckle and secure the pin into one of the strap holes that provides a comfortable and secure fit on your wrist.





Rear view of the watch, showing the leather strap and buckle.

3. Battery Information

The watch comes with one pre-installed Lithium Metal battery. No initial battery installation is required for operation.

OPERATING INSTRUCTIONS

1. Using the INDIGLO Night-Light

To activate the INDIGLO backlight, press and hold the crown. The dial will illuminate, allowing for easy time reading in low-light conditions. Release the crown to turn off the light.

2. Water Resistance

This watch is water-resistant up to 50 meters (164 feet). This rating indicates suitability for short periods of recreational swimming or showering. It is **not** suitable for diving, snorkeling, or high-impact water sports. To maintain water resistance, ensure the crown is fully pushed in before any contact with water. Avoid operating the crown while the watch is wet or submerged.



MAINTENANCE

1. Cleaning

Regularly clean the watch case and strap with a soft, slightly damp cloth. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the watch's finish or strap material.

2. Battery Replacement

When the watch stops running, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician. This ensures the correct battery type is used and the watch's water resistance is properly resealed after the procedure.

3. Storage

Store your watch in a dry environment, away from direct sunlight, extreme temperatures, and strong magnetic fields. When not in use for extended periods, consider storing it in its original packaging or a watch box.

TROUBLESHOOTING

1. Watch Not Running

- Ensure the crown is fully pushed in against the watch case. If the crown is pulled out, the watch will not operate.
- The battery may be depleted. Refer to the "Battery Replacement" section under Maintenance.

2. Inaccurate Time

- Verify that the time was set correctly.
- If the watch consistently loses or gains time significantly, it may require inspection and servicing by a professional watch repair technician.

3. Moisture Inside the Watch

If you observe condensation or moisture inside the watch crystal, have the watch inspected by a qualified technician immediately. This can indicate a breach in water resistance and can lead to internal damage if not addressed promptly.

SPECIFICATIONS

Feature	Detail
Model Number	TW2W159009J
Display Type	Analog
Watch Movement Type	Quartz
Case Material	Brass
Case Diameter	32 Millimeters
Case Thickness	8.5 Millimeters
Crystal	Mineral Glass

Band Material Type	Leather
Band Color	Black
Band Width	16 Millimeters
Band Length	7.5 Inches
Dial Color	Mother-of-Pearl
Water Resistance Depth	50 Meters
Power Source	Battery Powered (1 Lithium Metal battery included)
Additional Features	Luminous (INDIGLO backlight)
Clasp Type	Buckle



Detailed back view of the watch, displaying water resistance and model markings.

WARRANTY AND SUPPORT

Warranty Information

This Timex watch is covered by a Limited Warranty. For specific terms, conditions, and duration of the warranty, please refer to the warranty information card included in your watch packaging. Retain your proof of purchase for warranty claims.

Customer Support

For further assistance, service, or repair inquiries, please visit the official Timex website or contact Timex customer support directly. Contact details can typically be found on the Timex website or in the documentation provided with your watch.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question