

[Manuals.plus](#) /

› [Skullcandy](#) /

› Skullcandy Crusher ANC XT 2 User Manual

Skullcandy S6CAW-Q740

Skullcandy Crusher ANC XT 2 User Manual

Model: S6CAW-Q740

INTRODUCTION

The Skullcandy Crusher ANC XT 2 headphones are designed to deliver an immersive audio experience with powerful bass and advanced noise-canceling capabilities. This manual provides comprehensive instructions for setting up, operating, and maintaining your headphones to ensure optimal performance.



Figure 1: Skullcandy Crusher ANC XT 2 Headphones

What's in the Box

Please check the package contents to ensure all items are present:

- Crusher ANC 2 Headphones
- Backup AUX Cable
- USB-C Charging Cable

- Protective Case
- User Manual (this document)

SETUP GUIDE

1. Charging Your Headphones

Before first use, fully charge your Skullcandy Crusher ANC XT 2 headphones. A full charge takes approximately 2.5 hours.

1. Connect the supplied USB-C charging cable to the charging port on the headphone (typically on the right earcup).
2. Connect the other end of the USB-C cable to a compatible USB power source (e.g., wall adapter, computer USB port).
3. The LED indicator will show charging status and turn off or change color when fully charged.

The headphones feature a **Rapid Charge** function, providing hours of playback with just a few minutes of charging.

2. Bluetooth Pairing

Your headphones use Bluetooth 5.2 for wireless connectivity.

1. Ensure your headphones are powered off.
2. Press and hold the Power button for 5 seconds until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "Skullcandy Crusher ANC XT 2" from the list.
5. Once connected, the LED indicator will turn solid blue or off, depending on the model.

The headphones support **Multipoint Pairing**, allowing connection to two devices simultaneously.

OPERATING YOUR HEADPHONES

Controls Overview

CRUSHER[®] ANC 2



**50 HOURS
BATTERY +
RAPID CHARGE**



**MULTIPOINT
PAIRING**



**ADJUSTABLE
4-MIC ACTIVE
NOISE CANCELING**



Figure 2: Headphone Controls and Features

Common Controls

Function	Action
Power On/Off	Press and hold Power button
Play/Pause	Single press Multi-function button
Volume Up	Press Volume Up button
Volume Down	Press Volume Down button
Next Track	Press and hold Volume Up button (2 seconds)
Previous Track	Press and hold Volume Down button (2 seconds)
Answer/End Call	Single press Multi-function button

Function	Action
Activate Voice Assistant	Double press Multi-function button

Key Features

Crusher Adjustable Sensory Bass

Experience deep, vibrating bass that you can feel. Use the dedicated bass slider on the earcup to adjust the intensity of the sensory bass to your preference. Holding the wheel for a few seconds can turn the Crusher bass feature off.



Figure 3: Adjustable Sensory Bass Control

Adjustable 5-Mic Active Noise Cancelling (ANC)

The advanced 5-mic ANC system effectively reduces ambient noise, allowing you to focus on your audio. Activate or adjust the ANC level using the dedicated button or through the Skull-iQ App.

Personal Sound by Mimi via Skull-iQ App

Customize your audio profile to match your unique hearing. Download the Skull-iQ App and perform the Mimi hearing test to create a personalized sound profile that optimizes the audio output specifically for you.



Figure 4: Personal Sound Feature

MAINTENANCE

Proper care will extend the life of your headphones.

- **Cleaning:** Use a soft, dry cloth to clean the earcups and headband. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the headphones in their protective case to prevent damage.
- **Water Resistance:** These headphones are **Not Water Resistant**. Avoid exposure to liquids, moisture, or extreme humidity.
- **Battery Care:** For optimal battery life, avoid fully discharging the headphones frequently. Charge them regularly.

TROUBLESHOOTING

If you encounter issues with your headphones, try the following solutions:

Common Issues and Solutions

Problem	Solution
Headphones not powering on	Ensure the headphones are charged. Connect to a power source using the USB-C cable.
Cannot pair via Bluetooth	Make sure headphones are in pairing mode (flashing blue/red LED). Turn off and on Bluetooth on your device. Forget the device in your Bluetooth settings and try pairing again.
No sound or low volume	Check volume levels on both headphones and connected device. Ensure headphones are properly paired. Try playing different audio sources.
Active Noise Cancelling (ANC) not working effectively	Ensure ANC is activated. Adjust the ANC level via the Skull-iQ App. Ensure earcups form a good seal around your ears.
Bass rattling at max volume	Reduce the Sensory Bass level using the slider. This can occur with very high bass settings on some audio tracks.

SPECIFICATIONS

Feature	Detail
Model Name	Crusher ANC XT 2
Model Number	S6CAW-Q740
Connectivity Technology	Wireless (Bluetooth 5.2)
Headphones Jack	3.5 mm Jack (for wired connection)
Battery Life	Up to 49 Hours
Charging Time	Approx. 2.5 Hours
Frequency Range	20 Hz - 20,000 Hz
Noise Control	Active Noise Cancellation (5-mic adjustable)
Item Weight	14.4 ounces
Product Dimensions	10.43 x 8.5 x 2.72 inches
Water Resistance Level	Not Water Resistant
Earpiece Shape	Oval (Over Ear)
UPC	810045687063

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Skullcandy website or contact their customer service directly. Keep your proof of purchase for warranty claims.

You can visit the [Skullcandy Store on Amazon](#) for more product information and support resources.

© 2024 Skullcandy. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question