

Magic Chef MC77CMR

Magic Chef MC77CMR 0.7-Cu. Ft. 700-Watt Retro Countertop Microwave User Manual

[Safety Instructions](#) [Product](#)

[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- To reduce the risk of fire, electric shock, or injury to persons, do not operate the oven when empty.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Do not attempt to tamper with, or make any adjustments or repairs to the door, control panel, safety interlock switches, or any other part of the oven.
- Ensure proper ventilation around the microwave. Do not block any ventilation openings.
- Always use microwave-safe cookware.
- Supervise children closely when the microwave is in use.

2. PRODUCT OVERVIEW

The Magic Chef MC77CMR is a 0.7 cubic foot, 700-watt countertop microwave oven designed for convenient heating and cooking. It features a retro design with modern functionality.

2.1 Components and Controls

Familiarize yourself with the main parts and control panel of your microwave oven.



Image 1: Front view of the Magic Chef MC77CMR Retro Countertop Microwave. This image displays the red exterior, the oval-shaped door window, the chrome handle, the digital display, and the control panel with buttons and a rotary dial.



Image 2: Angled view of the Magic Chef MC77CMR Retro Countertop Microwave. This perspective highlights the depth and overall compact size of the appliance, showing the side profile along with the front controls.



Image 3: Interior view of the Magic Chef MC77CMR Retro Countertop Microwave with the door open. This image shows the white interior cavity, the glass turntable, and the interior light, illustrating the usable cooking space.

Control Panel Features:

- **Digital Display:** Shows time of day, cooking time, and various indicators.
- **Weight/Time Defrost Button:** Used for defrosting food by weight or time.
- **Microwave Button:** Selects microwave cooking power levels.
- **Start/+30Sec. Button:** Starts cooking or adds 30 seconds of cooking time.
- **Stop/Clear Button:** Stops cooking or clears settings.
- **Kitchen Timer/Clock Button:** Sets the kitchen timer or the clock.
- **Time/Weight/Auto Menu Dial:** Used to adjust time, weight, or select auto cook menus.

3. SETUP AND INSTALLATION

3.1 Unpacking

- Remove all packing materials from inside the oven cavity and from the oven door.
- Inspect the oven for any damage, such as a misaligned door, dents, or a broken door latch. Do not operate the oven if it is damaged.
- Ensure the glass turntable and turntable ring assembly are present and correctly installed.

3.2 Placement

- Place the microwave on a flat, stable surface capable of supporting its weight.
- Ensure there is adequate ventilation space: at least 3 inches (7.5 cm) of clearance on the top, sides, and rear of the oven. Do not block air vents.
- Keep the microwave away from heat sources and strong magnetic fields.

3.3 Electrical Connection

- Plug the microwave into a properly grounded 3-prong outlet. Do not use an adapter or extension cord.
- Ensure the electrical circuit can handle the microwave's power requirements (700 watts).

3.4 Setting the Clock

- Press the **Kitchen Timer/Clock** button once.
- Turn the **Time/Weight/Auto Menu** dial to set the hour.
- Press the **Kitchen Timer/Clock** button again.
- Turn the **Time/Weight/Auto Menu** dial to set the minutes.
- Press the **Kitchen Timer/Clock** button a third time to confirm the setting.

4. OPERATING INSTRUCTIONS

4.1 Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable. Close the door securely.
2. Turn the **Time/Weight/Auto Menu** dial to set the desired cooking time. The maximum cooking time is 99 minutes and 99 seconds.
3. Press the **Microwave** button to select a power level if different from the default (P100, full power). Each press cycles through power levels P100 to P10.
4. Press the **Start/+30Sec.** button to begin cooking.

4.2 Auto Cook Menus

The microwave includes several pre-programmed auto cook menus for common food items. Refer to the full manual for a complete list and specific instructions for each menu.

- To use, turn the **Time/Weight/Auto Menu** dial to select the desired auto menu (e.g., Popcorn, Potato, Pizza).
- Press the **Start/+30Sec.** button to confirm and start cooking.

4.3 Auto Defrost

This feature allows you to defrost food based on weight or time.

- **Defrost by Weight:** Press the **Weight/Time Defrost** button once. Turn the dial to select the food weight. Press **Start/+30Sec.**
- **Defrost by Time:** Press the **Weight/Time Defrost** button twice. Turn the dial to set the defrost time. Press **Start/+30Sec.**

4.4 Child Lock Function

To prevent unintended operation, especially by children, the microwave features a child lock.

- **To Activate:** Press and hold the **Stop/Clear** button for 3 seconds. A lock indicator will appear on the display.
- **To Deactivate:** Press and hold the **Stop/Clear** button for 3 seconds again. The lock indicator will disappear.

5. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your microwave oven.

- **Interior:** Clean the oven cavity after each use with a damp cloth and mild detergent. For stubborn stains, boil a cup of water with lemon slices inside the microwave for a few minutes to loosen residue.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.

- **Door and Seals:** Keep the door and door seals clean to ensure proper closure.
- **Turntable:** The glass turntable and roller ring can be removed and washed in warm soapy water or a dishwasher.
- Always unplug the microwave before cleaning.

6. TROUBLESHOOTING GUIDE

If you encounter issues with your microwave, consult the following common solutions before contacting service.

Problem	Possible Cause	Solution
Oven will not start	Door not closed properly; Power cord not plugged in; Fuse blown or circuit breaker tripped.	Ensure door is securely closed; Check power cord connection; Reset circuit breaker or replace fuse.
Food not heating	Incorrect cooking time/power level set; Microwave-safe cookware not used.	Adjust cooking time and power level; Use appropriate microwave-safe dishes.
Turntable not rotating	Turntable or roller ring not positioned correctly; Debris under turntable.	Re-position turntable and roller ring; Clean under the turntable.
Display shows "LOCK"	Child lock is activated.	Press and hold the Stop/Clear button for 3 seconds to deactivate.

7. PRODUCT SPECIFICATIONS

- **Model:** MC77CMR
- **Capacity:** 0.7 Cubic Feet
- **Wattage:** 700 Watts
- **Power Levels:** 10
- **Product Dimensions (D x W x H):** 10.2" x 14.2" x 17.3"
- **Item Weight:** 23.6 pounds
- **Material:** Steel
- **Installation Type:** Countertop
- **Special Features:** Auto Cook, Defrost, Turntable
- **Controller Type:** Touch






8. WARRANTY AND CUSTOMER SUPPORT

Magic Chef products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official Magic Chef website.

If you require assistance or have questions not covered in this manual, please contact Magic Chef customer support:

- **Website:** www.magicchef.com
- **Phone:** Refer to your product documentation for the most current contact number.

Related Documents - MC77CMR

	<p>Magic Chef 1.1 Cu.Ft. Countertop Microwave Oven User's Manual</p> <p>This user manual provides instructions for operating and maintaining the Magic Chef 1.1 Cu.Ft. Countertop Microwave Oven, models HMM1110W and HMM110B. It includes safety precautions, installation guidelines, operating instructions, cooking tips, and troubleshooting advice.</p>
	<p>Magic Chef MCD1110ST1 1.1 Cu. Ft. Countertop Microwave Oven User's Manual</p> <p>Comprehensive user's manual for the Magic Chef MCD1110ST1 1.1 cu. ft. countertop microwave oven. Includes safety instructions, installation, operation, care, and troubleshooting.</p>
	<p>Magic Chef 0.7 Cu.Ft. Countertop Microwave Oven User's Manual</p> <p>User's manual for the Magic Chef 0.7 Cu.Ft. Countertop Microwave Oven (Models HMM770W2/HMM770B2). Provides safety, installation, operation, and care instructions.</p>
	<p>Magic Chef MCM1611ST 1.6 Cu. Ft. Countertop Microwave Oven User's Manual</p> <p>User's manual for the Magic Chef MCM1611ST 1.6 Cu. Ft. countertop microwave oven. Includes safety instructions, installation guide, operating procedures, care and cleaning tips, troubleshooting, and warranty information.</p>
	<p>Magic Chef 1.6 Cu. Ft. Countertop Microwave Oven User's Manual (MCM1611W/MCM1611B)</p> <p>Comprehensive user manual for the Magic Chef 1.6 Cu. Ft. Countertop Microwave Oven, models MCM1611W and MCM1611B. Includes safety instructions, installation, operation, care, and warranty information.</p>



[Magic Chef HMM770W/HMM770B 0.7 Cu.Ft. Countertop Microwave Oven User's Manual](#)

User's manual for the Magic Chef 0.7 Cu.Ft. Countertop Microwave Oven, models HMM770W and HMM770B. Provides instructions on installation, operation, safety precautions, care, and troubleshooting.