

## Maxi Baby Baby High Chair

# Maxi Baby 4-in-1 Honey Baby High Chair Instruction Manual

Model: Baby High Chair

Brand: Maxi Baby

## 1. INTRODUCTION

---

Thank you for choosing the Maxi Baby 4-in-1 Honey Baby High Chair. This versatile product is designed to grow with your child, seamlessly transitioning through four modes: a high chair for mealtimes, a booster seat for dining, a toddler chair for play, and a walker for early exploration. This manual provides essential information for safe assembly, operation, maintenance, and troubleshooting to ensure a comfortable and secure experience for your child.

## 2. KEY FEATURES

---

- **4-in-1 Versatility:** Converts from high chair to booster seat, toddler chair, and walker.
- **Adjustable Comfort:** Features an ergonomic build and adjustable footrest for optimal comfort.
- **Removable Tray:** A 3-position removable tray simplifies mealtime and cleaning.
- **Enhanced Safety:** Equipped with a sturdy pyramid design, 5-point seat belt, and a safety barrier to prevent slipping.
- **Easy to Clean:** Upholstered seat and removable tray are designed for quick and easy cleaning.
- **Portable Design:** Lightweight and includes a storage bag for convenient transport.

# benefits



- Comfortable
- Multipurpose
- Safe
- Portable

Image: The Maxi Baby High Chair emphasizing its comfortable, multipurpose, safe, and portable benefits.

## 3. ASSEMBLY AND SETUP

---

The Maxi Baby High Chair is designed for quick and easy assembly. Please follow the steps below carefully. It is recommended to assemble the chair on a flat, stable surface.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list (not provided in this manual, refer to included physical manual).
2. **Assemble Base:** Connect the leg components to form the stable pyramid base. Ensure all connections click securely into place.
3. **Attach Seat Unit:** Secure the main seat unit to the assembled base.
4. **Install 5-Point Harness:** Thread the 5-point safety harness through the designated slots in the seat and secure the buckles. Ensure the harness is properly routed and adjusted for your child's safety. If you encounter difficulties, refer to the detailed diagrams in your physical instruction manual or contact customer support.
5. **Attach Footrest:** Slide the removable footrest into its position.
6. **Install Tray:** Slide the 3-position removable tray onto the front of the seat until it locks into your desired position.

# features



**5-point** seat belt



**Washable**  
upholstered cover



**3-position** tray



**Removable**  
footrest



**Safety** barrier



Image: Detailed view of the high chair's features, including the 5-point seat belt and adjustable tray.

## 4. OPERATING INSTRUCTIONS

The Maxi Baby High Chair offers four distinct modes to adapt to your child's growth and needs. Always ensure your child is securely fastened with the 5-point harness in all modes where applicable.

Your browser does not support the video tag.

Video: Official product video demonstrating the 4-in-1 functionality of the Maxi Baby High Chair, including assembly and transitions between modes.

### 4.1. High Chair Mode

This mode is ideal for feeding infants from 6 months old. Ensure the chair is on a flat, stable surface and the child is securely buckled in.



Image: A baby comfortably seated in the Maxi Baby High Chair, ready for mealtime.

#### **4.2. Booster Seat Mode**

To convert to a booster seat, detach the lower leg extensions and adjust the seat height as needed. This mode allows your child to join the family at the dining table.

#### **4.3. Toddler Chair Mode**

For independent toddlers, the chair can be configured into a low-standing toddler chair, perfect for playtime or quiet activities.

#### **4.4. Walker Mode**

The walker mode allows for safe exploration. Ensure the wheels are properly engaged and the child is supervised at all times.

# 4 in 1 - 4 phases

growing with your child



Image: Visual representation of the high chair transforming into its four different modes.

## 5. MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will prolong the life of your Maxi Baby High Chair and ensure hygiene for your child.

- **Upholstered Seat:** The upholstered seat cover is washable. Refer to the care label for specific washing instructions.
- **Removable Tray:** The tray can be easily removed and washed with warm soapy water. It is dishwasher-safe on the top rack.
- **Frame and Plastic Parts:** Wipe down the frame and other plastic components with a damp cloth and mild soap. Rinse thoroughly and dry completely.
- **Storage:** When not in use, store the high chair in a clean, dry place. The detachable design allows for quick and easy storage.

## 6. SAFETY GUIDELINES

---

Your child's safety is paramount. Always adhere to the following safety guidelines:

- Always use the 5-point safety harness to secure your child in the high chair.
- Never leave your child unattended in the high chair.
- Ensure the high chair is placed on a stable, level surface away from edges, stairs, and heat sources.
- Do not use the high chair if any parts are damaged or missing.
- The maximum weight recommendation for this high chair is 50.7 lbs (23 kg).
- Suitable for children aged 6 months and up.
- Regularly check all fasteners and connections to ensure they are secure.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your Maxi Baby High Chair, please refer to the following common solutions:

- **Difficulty Assembling Harness:** The harness system can be intricate. Refer to the detailed diagrams in your physical instruction manual. If issues persist, contact Maxi Baby customer support for guidance.
- **Chair Feels Unstable:** Ensure all leg components are fully extended and locked into place. The pyramid design provides stability, but proper assembly is crucial.
- **Tray Not Attaching Securely:** Check for any obstructions in the tray's sliding mechanism. Ensure it is aligned correctly with the grooves on the seat unit.
- **Difficulty Converting Modes:** While designed for easy conversion, ensure you are pressing the correct release buttons or levers for each transition. Refer to the video demonstration in Section 4 for visual guidance.
- **Chair Height:** Please note that the high chair has a fixed height in its primary high chair mode. If you find the chair not high enough for certain tables, consider using it in booster mode with an appropriate dining chair.

## 8. SPECIFICATIONS

---

Attribute	Detail
Product Dimensions	30.51 x 22.44 x 34.25 inches (77.5 x 57 x 87 cm)
Item Model Number	Baby High Chair
Maximum Weight Recommendation	50.7 lbs (23 Kilograms)
Material Type	Aluminum, PP, ABS and Polyester Fabric
Batteries Required	No
Is Portable	Yes
Item Weight	11.44 pounds (5.2 Kilograms)
Country/Region of Origin	Brazil
Color	Gray

# dimensions



Image: Visual representation of the high chair with its key dimensions.

## 9. WARRANTY AND SUPPORT

Maxi Baby stands behind the quality of its products. This product comes with a manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or visit the official Maxi Baby website.

For any questions, concerns, or support needs regarding your Maxi Baby 4-in-1 Honey Baby High Chair, please contact Maxi Baby customer service. Contact information can typically be found on the product packaging or the brand's official website.

You can also visit the [Maxi Baby Store on Amazon](#) for more information and product offerings.