

[Manuals.plus](#) /

› [Sharper Image](#) /

› Sharper Image Robot Combat Set Instruction Manual - Model 1017250

Sharper Image 1017250

Sharper Image Robot Combat Set

INSTRUCTION MANUAL - MODEL 1017250

Introduction

The Sharper Image Robot Combat Set offers an exciting two-player remote control robot battling experience. This set includes two robots and two remote controls, designed for head-to-head combat with immersive sound and light effects. Please read this manual thoroughly before use to ensure proper setup and operation.




What's Included

Your Sharper Image Robot Combat Set package contains the following items:

- 2 x Robot Combat Bots (one red, one blue)
- 2 x Remote Controls

SHARPER IMAGE® ROBOT COMBAT SET

WHAT YOU GET

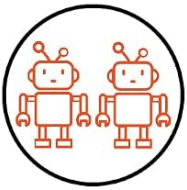

2 ROBOT COMBAT BOTS



2 REMOTE CONTROLS



Image: Contents of the Sharper Image Robot Combat Set.

Setup

Battery Installation

Before operating your robots, batteries must be installed in both the robots and their respective remote controls.

- Each robot requires 3 x AA batteries (not included).
- Each remote control requires 2 x AAA batteries (not included).

1. Locate the battery compartment on the underside of each robot and on the back of each remote control.
2. Using a small Phillips head screwdriver, open the battery compartment cover.
3. Insert the required batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.



HEAD-TO-HEAD OR SINGLE PLAYER

Compete against friends or battle the AI computer to refine your combat strategies

Image: Battery requirements for the robots and controllers.

Powering On and Pairing

Once batteries are installed, turn on each robot and its corresponding remote control. The robots and remotes are designed to pair automatically via infrared technology. Ensure the remote is pointed towards the robot during initial power-up and during play for optimal connection.

Operating Instructions

Basic Movement and Combat

The robots feature fluid rolling motion and responsive controls for dynamic battles.

- **Movement:** Use the directional controls on the remote to move your robot forward, backward, and turn.
- **Punching:** Utilize the dedicated punch buttons on the remote to deliver left jabs, right hooks, and combination attacks.
- **Winning:** A robot is defeated when its head pops up or it is knocked over. Reset the robot to continue playing.

+ ADVANCED WIRELESS CONTROL

Using state-of-the-art infrared technology



Image: Advanced wireless control for the robot combat set.

+ POWER FIST COMBO PUNCH



Jab left, hook right and go for the KO



Image: Robots demonstrating a power fist combo punch.


Immersive Effects

The robots are equipped with sound and LED light effects to enhance the battle experience.

- **Sound Effects:** Engaging sound effects accompany punches and movements.
- **LED Lights:** LED lights on the robots' faces display expressions, adding to the intensity of each duel.

IMMERSIVE SOUND & LIGHT EFFECTS

ENHANCE
THE
INTENSITY
OF EACH
DUEL

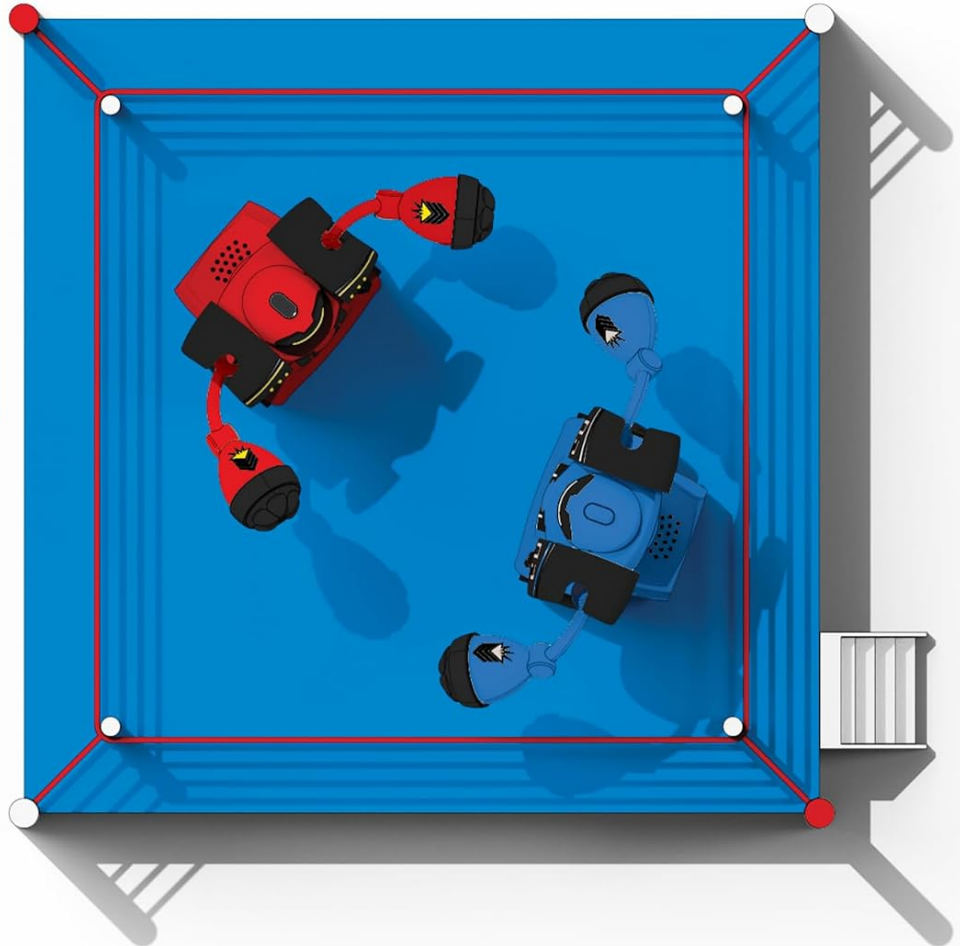

SHARPER IMAGE®

Image: Robots in a boxing ring, highlighting immersive sound and light effects.

Game Modes

The Sharper Image Robot Combat Set supports both head-to-head and single-player modes.

- **Head-to-Head:** Engage in battles against a friend using the two included robots and controllers.
- **Single Player:** Practice your combat strategies against the AI computer in single-player mode.

TROUBLESHOOTING

SYMPTOM	CAUSE	CORRECTION
Robot does not move or walk slowly.	• Loose battery connection. • Robot is in power save condition. • Batteries are not placed in compartment correctly. • Batteries are exhausted. • Controller is not pointing to the robot	• Check battery connection. • Restart robot. • Check the battery polarity. • Replace old battery with a new one. • Always point the controller to the robot.



Image: Robots ready for head-to-head or single-player combat.

Maintenance

- **Cleaning:** Wipe the robots and controllers with a dry, soft cloth. Do not use harsh chemicals or immerse in water.
- **Battery Care:** Remove batteries from both robots and remote controls if the product will not be used for an extended period to prevent leakage and damage.
- **Storage:** Store the set in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

If you encounter issues with your Robot Combat Set, please refer to the table below for common symptoms and solutions.

Symptom	Cause	Correction
---------	-------	------------

Symptom	Cause	Correction
Robot does not move or moves slowly.	• Loose battery connection. • Robot is in power save condition. • Batteries are not placed in compartment correctly. • Batteries are exhausted. • Controller is not pointing to the robot.	• Check battery connection. • Restart robot. • Check the battery polarity. • Replace old battery with a new one. • Always point the controller to the robot.



HEAD-TO-HEAD OR SINGLE PLAYER

Compete against friends or battle the AI computer to refine your combat strategies

Image: Troubleshooting guide for the robot combat set.

- **Product Dimensions:** 11 x 3 x 6 inches
- **Item Weight:** 2.09 pounds
- **Item Model Number:** 1017250
- **Manufacturer Recommended Age:** 6 years and up
- **Release Date:** October 20, 2023
- **Manufacturer:** Merchsource

Warranty and Support

For warranty information or technical support, please refer to the product packaging or contact Sharper Image customer service directly. Keep your purchase receipt for any warranty claims.

© 2023 Sharper Image. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CC7B1J36>

More documents and user manuals: <https://manuals.plus/>