

SOKANY VACUUM_CLEANER

Sokany 2-in-1 Portable Stick Vacuum Cleaner 1000W User Manual

Model: VACUUM_CLEANER

1. INTRODUCTION

Thank you for choosing the Sokany 2-in-1 Portable Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and retain it for future reference.

Important Safety Instructions

When using electrical appliances, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.

- Use extra care when cleaning on stairs.
- Store your appliance indoors in a cool, dry area.

2. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Sokany vacuum cleaner:

- **Main Unit:** Contains the motor, dust cup, and filter.
- **Handle Assembly:** For upright use.
- **Floor Nozzle:** For cleaning various floor types.
- **Crevice Tool/Nozzle:** For narrow spaces and corners.
- **Power Cord:** Corded electric operation.



This image highlights the Sokany vacuum cleaner's main features, including its 1000W power and 5-meter cord length, while showing the product in both its stick and handheld configurations.

3. SETUP AND ASSEMBLY

Your Sokany vacuum cleaner can be assembled in two configurations: a stick vacuum for floors and a handheld vacuum for versatile cleaning.

3.1. Assembling the Stick Vacuum

1. Insert the handle assembly into the top of the main unit until it clicks securely into place.
2. Attach the floor nozzle to the bottom of the main unit, ensuring it is firmly connected.
3. Wrap the power cord around the cord hooks for tidy storage when not in use.

3.2. Assembling the Handheld Vacuum

1. To use as a handheld unit, detach the handle assembly and the floor nozzle from the main unit.
2. Attach the crevice tool directly to the suction opening of the main unit for targeted cleaning.



This image displays the Sokany portable vacuum cleaner fully assembled in its stick vacuum configuration, ready for floor cleaning.



This image illustrates the versatility of the Sokany vacuum cleaner, showcasing it in both its full-size stick configuration and its compact handheld form, suitable for different cleaning tasks.

4. OPERATING INSTRUCTIONS

4.1. Powering On/Off

1. Ensure the vacuum cleaner is correctly assembled for your desired cleaning mode (stick or handheld).
2. Plug the power cord into a suitable electrical outlet (240V).
3. Press the power button located on the main unit to turn the vacuum cleaner ON.
4. To turn OFF, press the power button again.
5. Always unplug the appliance from the power outlet after use and before performing any maintenance.

4.2. Using the Stick Vacuum


For cleaning floors such as carpet, hardwood, and mattress surfaces:

- Hold the handle firmly and guide the floor nozzle over the surface to be cleaned.
- Move the vacuum in a steady, back-and-forth motion for optimal cleaning.

4.3. Using the Handheld Vacuum

For cleaning upholstery, car interiors, stairs, or hard-to-reach areas:

- Ensure the crevice tool or desired attachment is securely fitted to the main unit.
- Hold the main unit and direct the attachment towards the area requiring cleaning.

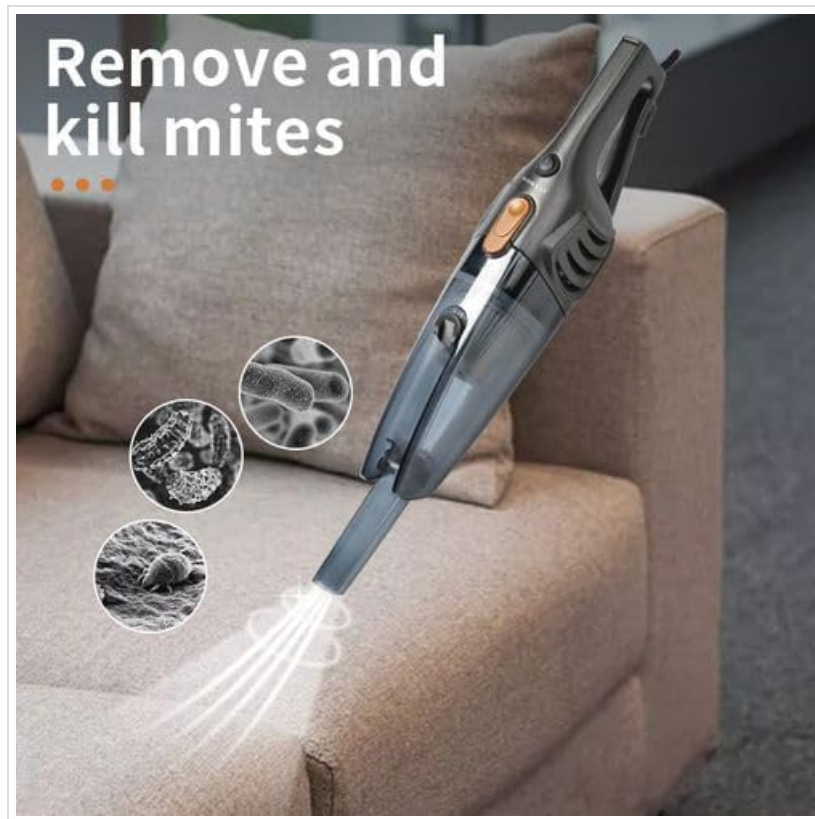

This image depicts the Sokany vacuum cleaner being used in handheld mode to clean upholstery, emphasizing its capability to remove dust and microscopic particles like mites from fabric surfaces.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

5.1. Emptying the Dust Cup

Empty the dust cup after each use or when the debris reaches the MAX fill line to maintain suction power.

1. Ensure the vacuum cleaner is unplugged from the power outlet.
2. Locate the dust cup release button/latch on the main unit and press it to detach the dust cup.
3. Hold the dust cup over a trash bin and open the bottom lid to empty the contents.
4. Close the lid and reattach the dust cup to the main unit until it clicks securely.

5.2. Cleaning the HEPA Filter

The HEPA filter should be cleaned regularly to prevent clogging and maintain suction. It is recommended to clean the filter every 3-5 uses, depending on usage.

1. With the dust cup detached, carefully remove the HEPA filter.
2. Tap the filter gently over a trash bin to remove loose dust and debris.
3. If necessary, rinse the filter under cold running water. **Do not use detergent or hot water.**
4. Allow the filter to air dry completely for at least 24 hours before reinserting it. **Do not use the vacuum with a wet filter.**
5. Once dry, place the filter back into the dust cup and reattach the dust cup to the main unit.

5.3. General Cleaning and Storage

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure the appliance is completely dry before storing.
- Store the vacuum cleaner in a cool, dry place, away from direct sunlight and moisture.

6. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	No power supply.	Check if the power cord is securely plugged into a working outlet.
Loss of suction.	Dust cup is full.	Empty the dust cup.
	Filter is clogged.	Clean or replace the HEPA filter. Ensure it is completely dry before reinserting.
	Hose or nozzle is blocked.	Turn off and unplug the vacuum. Inspect the hose, floor nozzle, and attachments for blockages and remove them.
Motor overheats.	Prolonged use or blocked airflow.	Turn off the vacuum and unplug it. Allow it to cool down for at least 30 minutes. Check for and clear any blockages in the dust cup, filter, or nozzles. Avoid continuous operation for extended periods.

7. SPECIFICATIONS

Feature	Specification
Brand	SOKANY
Model Number	VACUUM_CLEANER
Power / Wattage	1000 watts
Voltage	240 Volts
Capacity	1 Liters
Item Weight	2 Kilograms
Noise Level	75 Decibels
Special Features	Portable, 2-in-1 (Vertical/Handheld)
Filter Type	HEPA






Feature	Specification
Power Source	Corded Electric
Surface Recommendation	Carpet, Hardwood Floor, Mattress
Included Components	Nozzle
Product Dimensions	9 x 8 x 9 cm


8. WARRANTY AND SUPPORT

This product is manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or contact your retailer. For technical support or service inquiries, please contact the retailer or the manufacturer's customer service department.

Please note: Specific warranty terms and contact details may vary by region and retailer.

Related Documents - VACUUM_CLEANER

 <p>SOKANY PICADORA DE ALIMENTOS MODELO SK-7020 MANUAL DE INSTRUCCIONES</p>	<p>SOKANY SK-7020 Food Chopper User Manual</p> <p>This manual provides instructions for the safe and effective use of the SOKANY SK-7020 Food Chopper, including safety precautions, operating instructions, cleaning, maintenance, and troubleshooting.</p>
 <p>SOKANY Blender 220-240V 50/60Hz 6000W MODELO SK-999</p>	<p>SOKANY SK-999 Multi-Purpose Blender User Manual and Instructions</p> <p>Comprehensive guide for the SOKANY SK-999 Multi-Purpose Blender, covering setup, operation, cleaning, maintenance, and troubleshooting. Features 6000W power.</p>
 <p>SOKANY Blender 220-240V 50/60Hz 6000W MODELO SK-666</p>	<p>SOKANY Multi-Purpose Blender SK-666 User Manual</p> <p>Comprehensive user manual for the SOKANY Multi-Purpose Blender SK-666, covering product overview, usage instructions, troubleshooting, cleaning, maintenance, and safety guidelines.</p>
 <p>SOKANY MEAT GRINDER MODEL:SK-088 INSTRUCTION MANUAL 220-240V 50/60Hz 1200W MADE IN P.R.C. RoHS</p>	<p>SOKANY SK-088 Meat Grinder Instruction Manual</p> <p>Comprehensive instruction manual for the SOKANY SK-088 Meat Grinder, covering assembly, operation, cleaning, safety, and specifications. Learn how to use your SOKANY meat grinder effectively and safely.</p>
 <p>SOKANY COFFEE MAKER MODEL:CM-121E INSTRUCTION MANUAL</p>	<p>SOKANY CM-121E Coffee Maker Instruction Manual - User Guide</p> <p>Detailed instruction manual for the SOKANY CM-121E Coffee Maker. Includes safety precautions, operating instructions, cleaning, and maintenance guides for optimal use.</p>

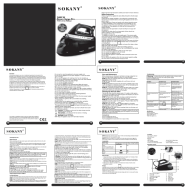

[SOKANY Steam Surge Pro 2400W Instruction Manual - User Guide](#)

Comprehensive instruction manual for the SOKANY Steam Surge Pro 2400W steam iron. Learn about safety instructions, core maintenance, troubleshooting, and usage guidelines for optimal performance.