



[Manuals.plus](#) /

> [ARSUNOVO](#) /

> Mobile Connector Replacement, Toy Pole Conversion Attachment for 4moms Mamaroo's Model 4M-005 Toy Stand,Plastic

ARSUNOVO 4M-005

Mobile Connector Replacement for 4moms Mamaroo's Model 4M-005

Instruction Manual

PRODUCT OVERVIEW

This Mobile Connector Replacement is designed specifically for the 4moms Mamaroo's Model 4M-005 toy stand. Its primary function is to address and correct the issue of a sagging toy bar, restoring the original position and functionality of your Mamaroo swing's mobile feature.



Image: The white plastic mobile connector replacement part, designed for durability and precise fit.

Before

4Moms Mamaroo Toy Arm
Started to Drop, Practically
Hitting your Child
in his/her Face

After

The disc lifts the removable
Toy Bar so your Mamaroo
is as good as new!



Image: A visual comparison demonstrating the effect of the replacement part, showing the toy bar lifted to its correct position after installation.

The replacement part effectively lifts the removable toy bar, ensuring it is no longer positioned too close to the child. This helps maintain the intended design and safety of the Mamaroo swing.

SETUP AND INSTALLATION

Follow these steps carefully to install the Mobile Connector Replacement. Ensure the Mamaroo swing is turned off and unplugged before beginning installation.



Image: The replacement part positioned next to the MamaRoo swing, indicating its intended attachment location at the base of the toy bar.

Installation Steps:

Perfect fix for Mamaroo



Image: A four-panel visual guide illustrating the step-by-step process of attaching the new mobile connector to the Mamaroo swing.

1. **Step 1: Remove Existing Part (if applicable)**

Gently pull the existing mobile connector or the base of the toy bar from the Mamaroo swing's main body. If the original part is broken or worn, ensure all fragments are removed.

2. **Step 2: Insert New Connector into Toy Bar**

Align the ribbed end of the new mobile connector replacement part with the opening at the bottom of the Mamaroo toy bar. Push firmly until it is securely seated.

3. **Step 3: Attach Toy Bar Assembly to Swing**

With the new connector attached to the toy bar, align the entire assembly with the corresponding slot on the Mamaroo swing's main unit. Push down firmly until you feel it click into place.

4. **Step 4: Verify Secure Connection**

Gently tug on the toy bar to ensure it is firmly attached and does not wobble. The toy bar should now be elevated to its correct position.

The toy bar is lifted by 15 degrees

Toy bar is no longer attached to your child's face

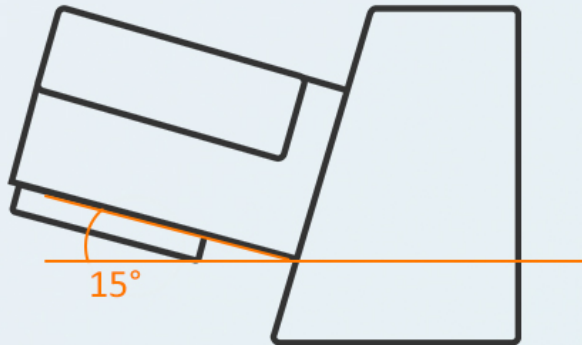


Image: A diagram illustrating the 15-degree upward angle achieved by the toy bar after the replacement part is installed, ensuring it is no longer in the child's face.

OPERATING THE MAMAROO WITH NEW CONNECTOR

Once installed, the mobile connector replacement functions passively by maintaining the correct height and angle of the Mamaroo's toy bar. No specific operational steps are required for the connector itself.

- Ensure the toy bar is securely attached before placing a child in the Mamaroo.
- Regularly check the connection point for any signs of looseness or wear.

MAINTENANCE

The mobile connector replacement requires minimal maintenance. Regular cleaning and inspection are recommended to ensure longevity and proper function.

- **Cleaning:** Wipe the plastic part with a damp cloth and mild soap if necessary. Avoid abrasive cleaners or harsh chemicals.
- **Inspection:** Periodically inspect the connector for any cracks, damage, or signs of wear. If any damage is observed, discontinue use and consider replacement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Toy bar still sags or is not elevated enough.	Incorrect installation; part not fully seated; incompatible Mamaroo model.	Ensure the connector is pushed firmly into both the toy bar and the swing's main unit until it clicks securely. Verify your Mamaroo model is 4M-005. This part is specifically designed for this model. Inspect the original attachment point on your Mamaroo for any damage that might prevent a secure fit.
Connector feels loose after installation.	Not fully engaged; damage to the connector or Mamaroo's slot.	Remove and re-install the connector, ensuring firm pressure until it is fully seated. Check the connector for any manufacturing defects or damage.

SPECIFICATIONS

Brand: ARSUNOVO

Model Number: 4M-005

ASIN: B0CC8432GD

Mounting Type: Designed for Toy Bar Attachment on Mamaroo Swing

Color: White

Material: Plastic

Batteries Required: No

For further assistance, please contact ARSUNOVO customer support.