

Manuals.plus /

› [KitchekShop](#) /

› [KitchekShop Coffee Mug Warmer Instruction Manual - Model Black](#)

KitchekShop Black

KitchekShop Coffee Mug Warmer Instruction Manual - Model Black

Comprehensive guide for your KitchekShop Coffee Mug Warmer, Model Black. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting.

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Use this appliance only for its intended use as described in this manual.
- Avoid contact with hot surfaces. Use handles or knobs.
- Ensure the cup used is heat-resistant and has a flat bottom for optimal contact.

PRODUCT OVERVIEW

The KitchekShop Coffee Mug Warmer is designed to keep your beverages at your preferred temperature. It features multiple temperature settings, an automatic shut-off timer, and a fast-heating surface.



Image: Top view of the KitchekShop Coffee Mug Warmer, displaying the digital temperature, power button, timer button, and heating indicator.

Key Features:

- **Fast Heating:** Quickly reaches desired temperature to keep beverages warm.
- **4 Temperature Settings:** Customizable warmth at 131°F, 145°F, 167°F, and 185°F.
- **1-12 Hour Timer:** Programmable auto shut-off for safety and energy saving.

- **Auto Shut-off:** Automatically turns off after the set timer or after 8 hours if no timer is set.
- **Large Heating Panel:** Accommodates various cup sizes and types, including stainless steel, ceramic, and milk cartons. Best results with flat-bottomed mugs.
- **Includes Coaster:** A complementary coaster is provided for convenience and table protection.

PACKAGE CONTENTS

- 1 x KitchekShop Coffee Mug Warmer Unit (Model Black)
- 1 x Complementary Coaster
- 1 x User Manual (this document)

SPECIFICATIONS

Feature	Detail
Brand	KitchekShop
Model Number	Black
Product Dimensions	6.75"L x 5.4"W x 1.2"H
Item Weight	14.1 ounces
Voltage	110 Volts
Wattage	50 watts
Maximum Temperature	185°F (85°C)
Temperature Settings	131°F, 145°F, 167°F, 185°F
Timer Settings	1-12 hours
Power Source	Corded Electric
Material	Large Heating Plate

SETUP GUIDE

1. **Unpack:** Carefully remove the mug warmer and all accessories from the packaging.
2. **Placement:** Place the mug warmer on a flat, stable, and heat-resistant surface, away from flammable materials. Ensure there is adequate ventilation around the unit.
3. **Power Connection:** Plug the power cord into a standard 110V AC electrical outlet. The display will illuminate, indicating the device is in standby mode.
4. **Prepare Your Mug:** Use a heat-resistant mug with a flat bottom for best results. This ensures maximum contact with the heating surface.

OPERATING INSTRUCTIONS

Controls Overview:

Power Button (): Turns the warmer ON/OFF.

Temperature Button (••): Cycles through temperature settings.

Timer Button (): Sets the automatic shut-off timer.

1. Turning On and Setting Temperature:

1. Place your mug with beverage onto the heating surface.
2. Press the Power Button () to turn on the warmer. The display will show the current temperature setting.
3. Press the Temperature Button (••) repeatedly to cycle through the four temperature settings: 131°F, 145°F, 167°F, and 185°F. Select your desired temperature.
4. The warmer will begin heating to the selected temperature. The heating indicator light will be on.

4 TEMPERATURE SETTINGS



Image: The mug warmer displaying different temperature options, illustrating the four available heat settings.

2. Setting the Timer:

1. While the warmer is on, press the Timer Button (⏸). The display will show "01H" (1 hour).
2. Press the Timer Button (⏸) repeatedly to adjust the timer in 1-hour increments, from 1 hour up to 12 hours.
3. Once the desired time is set, the display will flash a few times and then return to showing the temperature. The timer is now active.
4. The warmer will automatically shut off once the set time has elapsed.

INTELLIGENT CONSTANT TEMPERATURE

Stays perfect from the first sip to the last



Image: The mug warmer with a mug on top, illustrating the 12-hour timer function for automatic shut-off.

3. Automatic Shut-off (Without Timer):

If no specific timer is set, the mug warmer will automatically shut off after 8 hours of continuous operation for safety.

4. Turning Off:

To manually turn off the warmer, press and hold the Power Button () for 2-3 seconds until the display turns off.

CARE AND MAINTENANCE

1. **Unplug Before Cleaning:** Always unplug the mug warmer from the power outlet and allow it to cool completely before cleaning.
2. **Cleaning the Surface:** Wipe the heating surface and the body of the warmer with a soft, damp cloth. For stubborn stains, a small amount of mild dish soap can be used, then wipe thoroughly with a clean, damp cloth.
3. **Do Not Immerse:** Never immerse the mug warmer in water or any other liquid.

4. **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surface.
5. **Storage:** When not in use, store the mug warmer in a dry, cool place.



Image: The mug warmer on a wooden table with a glass of water, demonstrating its waterproof and easy-to-clean design.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Warmer does not turn on.	Not plugged in or power outlet issue.	Ensure the power cord is securely plugged into a working outlet. Try a different outlet.
Beverage is not warm enough.	Incorrect temperature setting, mug type, or lid not used.	<ul style="list-style-type: none"> ◦ Increase the temperature setting. ◦ Use a mug with a flat bottom made of ceramic, glass, or stainless steel for better heat transfer. ◦ Consider using a mug with a lid to retain heat more effectively.
Warmer automatically shut off.	Timer elapsed or 8-hour auto shut-off activated.	This is a safety feature. If you wish to continue warming, simply turn the unit back on and reset the timer if desired.
Buttons are unresponsive.	Temporary electronic glitch.	Unplug the unit from the power outlet for 1 minute, then plug it back in and try again.

WARRANTY AND CUSTOMER SUPPORT

KitchekShop products are designed for reliability and performance. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims.

For technical support, troubleshooting assistance, or questions regarding your product, please contact KitchekShop customer service through the retailer where you purchased the product or visit the official KitchekShop store page

on Amazon:

Visit KitchekShop Store on Amazon