

[Manuals.plus](#) /

› [HUIOP](#) /

› HUIOP Nanwei 21V Cordless Electric Pruning Shears Instruction Manual

## HUIOP MMITE22906EU-2ZLL10

# HUIOP Nanwei 21V Cordless Electric Pruning Shears Instruction Manual

Model: MMITE22906EU-2ZLL10

## 1. INTRODUCTION

---

Welcome to your new HUIOP Nanwei Cordless Electric Pruning Shears. This manual provides essential information for safe and efficient operation, maintenance, and troubleshooting. Please read it thoroughly before first use to ensure proper handling and to maximize the lifespan of your tool.

This electric pruner features a powerful brushless motor, an SK5 special steel blade, and a 21V lithium-ion battery for efficient and prolonged use. Its ergonomic design ensures comfortable operation for various gardening tasks.

## Ours

## Others



✓ Sharp blade




✗



✓ High temperature quenching



✗

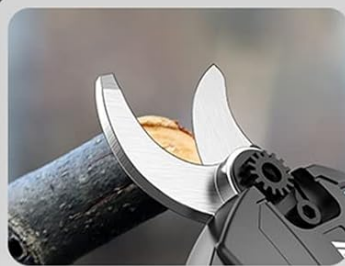

✓ Battery powered



✗

Image 1.1: Key features including brushless motor, ternary lithium battery, SK5 blade, two-gear adjustment, and safety switch.

## 2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury.

- **Wear Eye Protection:** Always wear safety glasses or goggles to protect your eyes from flying debris.
- **Wear Gloves:** Use sturdy work gloves to protect your hands.
- **Keep Hands Clear:** Never place your hands near the cutting blade while the tool is powered on or connected to a battery.
- **Secure Work Area:** Ensure the area is clear of bystanders, especially children and pets.
- **Avoid Wet Conditions:** Do not operate the pruner in rain or damp environments.
- **Proper Storage:** Store the tool in a dry, secure place out of reach of children when not in use. Remove the battery before storage.
- **Use Correct Charger:** Only use the charger supplied with the product to charge the battery.
- **Inspect Before Use:** Check the blades for damage or wear before each use.

- **Unplug When Not in Use:** Disconnect the battery when performing maintenance, cleaning, or when the tool is not in use.

### 3. PACKAGE CONTENTS

---

Verify that all items are present in your package:

- 1 x Brushless Cordless Pruner
- 1 or 2 x Lithium Battery (depending on your purchase option)
- 1 x Charger
- 1 x Sharpener
- 1 x Pair of Gloves
- 1 x Hex Wrench
- 1 x L-shaped Spanner
- 1 x Spare Blade
- 1 x Tool Box



Image 3.1: All components included in the package.

## 4. SPECIFICATIONS

| Feature                        | Specification       |
|--------------------------------|---------------------|
| Manufacturer                   | HUIOP               |
| Model Reference                | MMITE22906EU-2ZLL10 |
| Product Dimensions (L x W x H) | 33 x 25.5 x 7.5 cm  |
| Voltage                        | 21V                 |

|                                    |                          |
|------------------------------------|--------------------------|
| Battery Type                       | Lithium-ion              |
| Battery Capacity (Series)          | 20000mAh (10 * 2000mAh)  |
| Battery Capacity (Parallel/Actual) | 4000mAh                  |
| Maximum Shearing Diameter          | 30 mm                    |
| Handle Material                    | ABS                      |
| Blade Material                     | SK5 Special Carbon Steel |
| Motor Type                         | Brushless                |
| Blade Type                         | Anvil                    |
| Pruner Weight (without battery)    | 685 g / 1.51 lb          |
| Battery Weight                     | 584 g / 1.29 lb          |

# CORDLESS ELECTRIC PRUNING SHEARS

Industrial brushless fruit branch scissors



## POWERFUL BRUSHLESS MOTOR

21V professional cordless electric pruning shears adopt Brushless Motor which provides more run time and increase pruning efficiency, also its service life is 3 to 5 times that of a conventional brush motor which greatly save maintenance costs due to motor damage

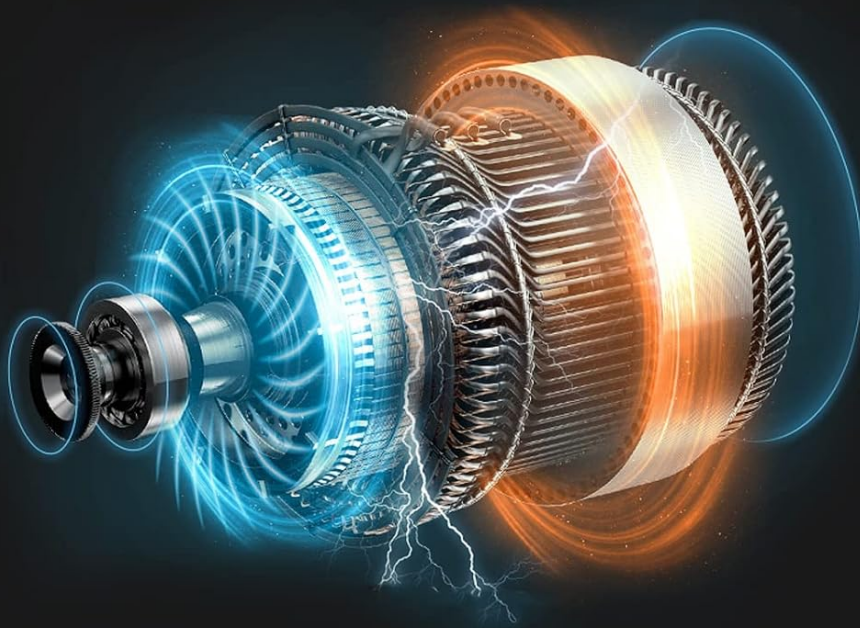


Image 4.2: Illustration of the brushless motor, which offers increased efficiency and longer lifespan compared to conventional brush motors.

## 5. SETUP AND INITIAL USE

### 5.1 Battery Charging

1. Connect the charger to a suitable power outlet (100-240V).
2. Insert the battery into the charger. Ensure proper alignment.
3. The indicator light on the charger will show the charging status. Refer to the charger's specific instructions for light indications.
4. Once fully charged, disconnect the battery from the charger and unplug the charger from the power outlet.

### 5.2 Battery Installation

1. Ensure the pruner's safety switch is in the 'OFF' position.
2. Align the charged battery with the battery slot at the base of the pruner handle.
3. Slide the battery firmly into place until it clicks, indicating it is securely locked.
4. To remove the battery, press the release button(s) on the battery pack and slide it out.



1 Pack of Battery



2 Pack of Battery



Plug type optional



US Plug



EU Plug

Image 5.1: Battery packs and available plug types for charging.



Image 5.2: The 21V rechargeable lithium battery supports hours of constant work with premium charging technology.

## 6. OPERATING INSTRUCTIONS

### 6.1 Powering On/Off

1. With the battery installed, locate the main power switch (often a safety switch). Move it to the 'ON' position.
2. To activate the blades, press and hold the trigger. The blades will open and close with each press.
3. To turn off, release the trigger and move the main power switch to the 'OFF' position. Always engage the safety switch when not actively pruning.

### 6.2 Cutting Technique

- Ensure the branch to be cut is within the maximum cutting diameter of 30mm. Attempting to cut larger branches can damage the tool.
- Position the open blades around the branch, ensuring the branch is fully seated at the base of the blades for a clean cut.

- Press the trigger firmly to close the blades and cut the branch.
- Avoid twisting or forcing the pruner during a cut. Let the tool do the work.
- This pruner is suitable for various applications including orchard pruning, park pruning, thick branch pruning, and bamboo forest pruning.

### 6.3 Two-Gear Adjustment

Your pruner may feature a two-gear adjustment for different cutting needs. Refer to the specific controls on your device to switch between cutting modes, typically for smaller or larger diameter branches within the 30mm limit.



Image 6.1: Examples of suitable pruning applications for the electric shears.

## 7. MAINTENANCE

### 7.1 Blade Cleaning

After each use, especially when pruning resinous wood, clean the blades. Remove the battery before cleaning. Use a damp cloth and a mild detergent to wipe off sap and debris. Dry the blades thoroughly to prevent rust.

7.2 Blade Sharpening

Regular sharpening maintains cutting efficiency. Use the provided sharpener to carefully sharpen the cutting edge of the blade. Follow the original angle of the blade. Always remove the battery before sharpening.

7.3 Blade Replacement

If the blade becomes dull beyond sharpening or is damaged, it can be replaced with the spare blade provided. Refer to the tool's specific design for blade removal and installation, typically involving the hex wrench and L-shaped spanner. Ensure the battery is removed before attempting blade replacement.

7.4 Storage

Store the pruner in its tool box in a cool, dry place, away from direct sunlight and moisture. Ensure the battery is removed from the tool before long-term storage. Keep out of reach of children.

8. TROUBLESHOOTING

| Problem                     | Possible Cause                                                    | Solution                                                                                   |
|-----------------------------|-------------------------------------------------------------------|--------------------------------------------------------------------------------------------|
| Pruner does not turn on     | Battery not charged or not installed correctly; Safety switch off | Charge battery; Reinstall battery; Turn safety switch to 'ON'                              |
| Reduced cutting power       | Dull blades; Low battery charge; Branch too thick                 | Sharpen or replace blades; Recharge battery; Do not attempt to cut branches exceeding 30mm |
| Battery not charging        | Charger not plugged in; Faulty charger or battery                 | Check power connection; Contact customer support for replacement                           |
| Blades jam during operation | Debris caught in blades; Overload                                 | Remove battery, then carefully clear debris; Avoid forcing the tool                        |

9. WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please contact the retailer or manufacturer directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**