

[Manuals.plus](#) /

> [podoboq](#) /

> podoboq 5-in-1 Electric Vegetable Chopper Set (Model PM-VC) User Manual

podoboq PM-VC

podoboq 5-in-1 Electric Vegetable Chopper Set (Model PM-VC) User Manual

Your comprehensive guide to operating and maintaining your new kitchen appliance.

1. INTRODUCTION

The podoboq 5-in-1 Electric Vegetable Chopper Set is a versatile kitchen tool designed to simplify food preparation. This handheld device combines five functions: slicing, chopping, peeling, washing, and stirring, making it suitable for various culinary tasks. It features a rechargeable design for cordless convenience and includes multiple attachments for different uses.



Image 1: The podoboq 5-in-1 Electric Vegetable Chopper Set, showcasing its multi-functional design and various applications in food preparation.

2. IMPORTANT SAFETY INFORMATION

- Always ensure the device is fully assembled and the safety lock is engaged before operation.
- Keep hands and utensils away from moving blades during operation.
- Blades are sharp; handle with extreme care during assembly, disassembly, and cleaning.
- Do not immerse the main motor unit in water. The entire machine is washable, but the motor unit should not be soaked.
- Keep out of reach of children.
- Use only the provided charging cable and ensure the charging port is dry before connecting.
- Do not attempt to process extremely hard foods that may damage the blades or motor.

3. PACKAGE CONTENTS

Your podoboq 5-in-1 Electric Vegetable Chopper Set includes the following components:

- Main Motor Unit (Handheld)
- Chopping Blade Attachment
- Slicing Blade Attachment
- Egg & Cream Beater Attachment
- Cleaning Brush Attachment
- Food Container (for chopping/mashing)
- Splash Cup (for slicing)
- Peeler Attachment
- USB Type-C Charging Cable



Image 2: An overview of all included components in the podoboq 5-in-1 Electric Vegetable Chopper Set.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the device. Connect the USB Type-C charging cable to the port on the main motor unit and plug it into a suitable USB power source. The indicator light will show charging status. Ensure the port is dry before charging.

Your browser does not support the video tag.

Video 1: Demonstrates the initial charging process and proper safety lock alignment for the device.

4.2 Assembling Attachments

To attach any accessory, align the main motor unit with the desired attachment (chopping blade in food container, slicing blade in splash cup, or whisk). Ensure the safety lock is correctly engaged. A white indicator light confirms correct assembly, while a red light indicates an error or improper alignment.



Egg & Cream Beater



Food container



Splash Cup

Image 3: Visual guide to the different components and how they fit together for various functions.

5. OPERATING INSTRUCTIONS

5.1 Chopping and Mashing

Attach the chopping blade to the food container and secure the main motor unit. Place ingredients like garlic, chili, or meat into the container. Press and hold the power button to chop. The device features an open filling hole, allowing you to add longer ingredients directly during operation without opening the lid.



Open Filling Hole

No worries about the length of the food.

Image 4: Demonstrates using the open filling hole to add chili peppers for chopping.

Your browser does not support the video tag.

Video 2: Shows the device in action, chopping various vegetables and demonstrating the open filling hole feature.

5.2 Slicing

For slicing, use the slicing blade with the splash cup. Insert vegetables such as celery or carrots into the feeding chute and press the power button. The sliced ingredients will be dispensed directly from the bottom of the splash cup.



Convenient & Quick

No need to pick up ingredients.

Fresh ingredients can be put directly into the pot.

Image 5: Illustrates the convenient and quick slicing function, directly dispensing ingredients into a cooking pot or bowl.

5.3 Whisking

Attach the egg & cream beater to the main motor unit. Place the whisk into a bowl containing eggs or cream. Press and hold the power button to whisk until desired consistency is achieved.

Multi-Purpose

Comes with an egg & cream beater
for easy and quick whisking.



Image 6: The device used with the egg and cream beater attachment for quick whisking.

5.4 Peeling

The set includes a dedicated peeler attachment. Use this attachment manually to peel fruits and vegetables. It is designed for efficient and safe peeling.

Multi-Functional

Not only a feeder, but also a peeler.

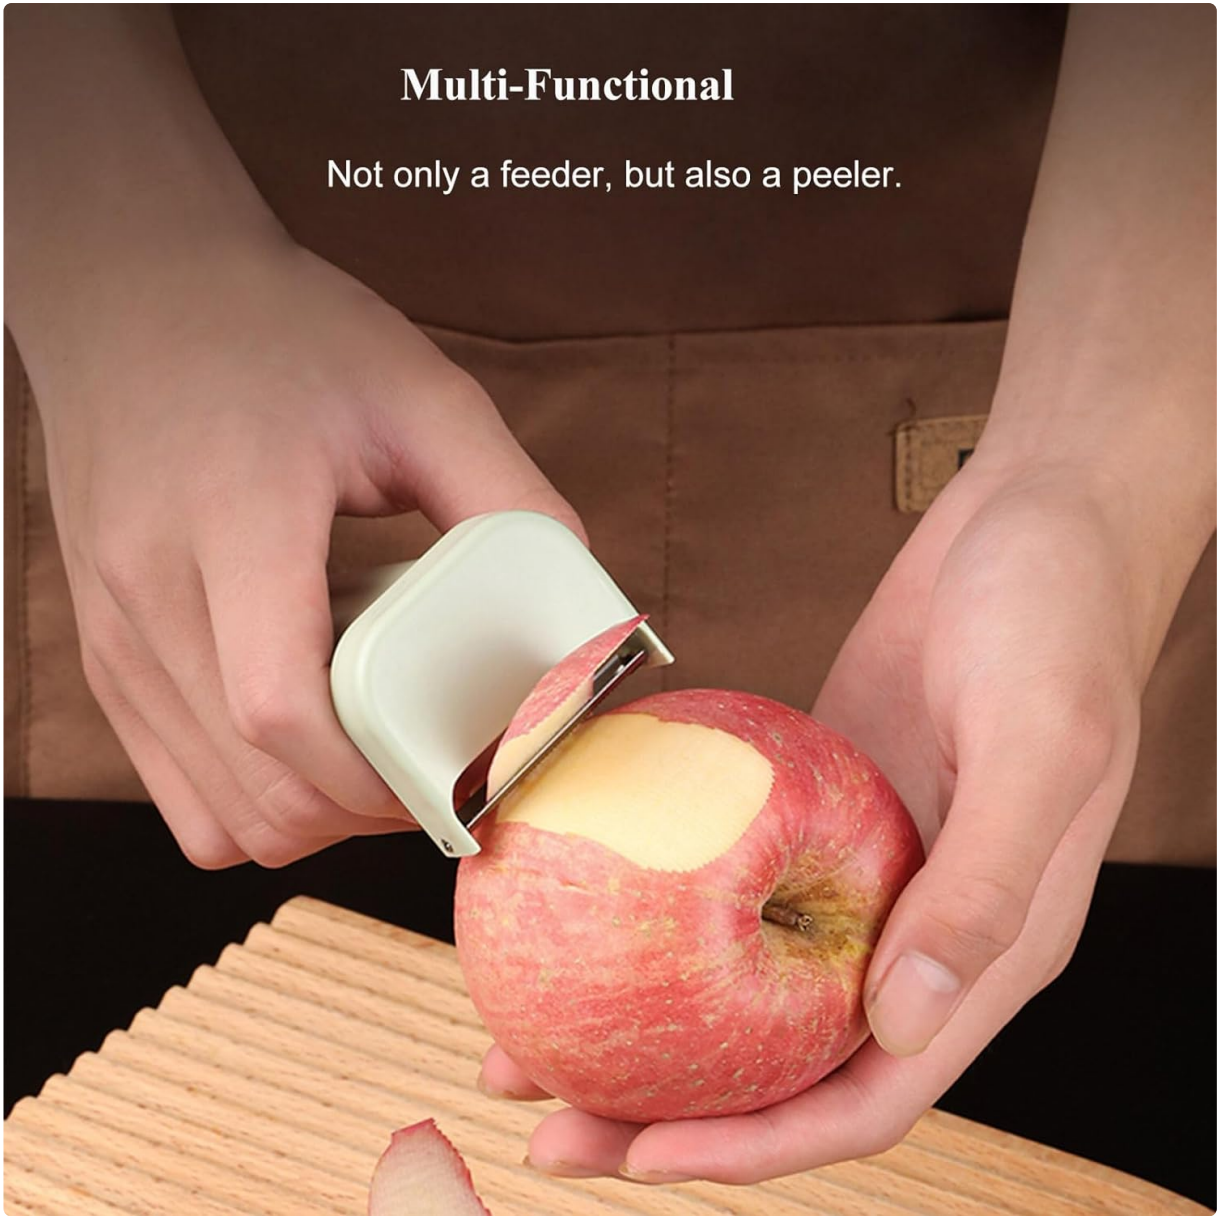


Image 7: The peeler attachment in use, demonstrating its function for fruits and vegetables.

6. MAINTENANCE AND CLEANING

The podoboq Electric Vegetable Chopper is designed for easy cleaning. After use, detach the accessories from the main motor unit.

- **One-Key Cleaning:** For the chopping and slicing attachments, add a small amount of detergent and water to the container/cup. Press the power button to activate the blades for 5 seconds, then rinse under running water.
- **Cleaning Brush:** Use the included cleaning brush attachment to easily remove stubborn stains from kitchen utensils or the device's containers.
- **Hand Wash:** All detachable parts (blades, containers, whisks, peeler, brush) should be hand washed.
- **Motor Unit:** Wipe the main motor unit with a damp cloth. Do not immerse it in water.
- **Drying:** Ensure all parts are thoroughly dry before reassembling or storing.



One-click Cleaning

Easily removes stubborn stains from kitchen utensils.

Image 8: The cleaning brush attachment in use, effectively cleaning a pan.

7. TROUBLESHOOTING

- **Device Not Turning On:**

- a. Check battery level. Recharge if necessary.
- b. Ensure the safety lock is correctly engaged. The white indicator light should be on. If a red light is visible, the safety lock is not properly aligned. Refer to Section 4.2 for correct assembly.

- **Ineffective Chopping/Slicing:**

- a. Ensure ingredients are cut into manageable sizes before feeding.
- b. Do not overfill the container/cup.
- c. Blades may be dull. Contact customer support for assistance.

8. SPECIFICATIONS

Brand:	podoboq
Model Name:	Vegetable Chopper (PM-VC)

Power Source:	Corded Electric (USB Rechargeable)
Wattage:	30 watts
Material:	Acrylonitrile Butadiene Styrene (ABS)
Product Dimensions:	8 x 3.5 x 3.1 inches
Item Weight:	1.15 pounds
Special Feature:	Safety Lock



Image 9: Detailed dimensions of the main unit and various attachments.

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided with your purchase or visit the official podoboq website. Keep your purchase receipt as proof of purchase.

