

[Manuals.plus](#) /

› [Fimilo](#) /

› Fimilo 3-in-1 Cordless Electric Grass Trimmer (Model B0CC8Z22HZ) Instruction Manual

Fimilo B0CC8Z22HZ

Fimilo 3-in-1 Cordless Electric Grass Trimmer (Model B0CC8Z22HZ) Instruction Manual

Your guide to safe and efficient operation.

1. SAFETY INFORMATION

Read all safety warnings and instructions before operating this tool. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

General Safety Warnings:

- Always wear eye protection and sturdy footwear when operating the trimmer.
- Keep hands, face, and feet clear of the cutting area.
- Ensure the battery is fully charged before use.
- Do not operate the trimmer in wet conditions or near flammable liquids.
- Keep children and bystanders at a safe distance (at least 15 meters) from the operating area.
- Inspect the tool for damage before each use. Do not use if damaged.
- Remove the battery pack before making any adjustments, changing accessories, or storing the tool.

2. PACKAGE CONTENTS

Verify that all items are present and in good condition upon opening the package. If any items are missing or damaged, contact customer support.



Image: All components included with the Fimilo 3-in-1 Cordless Electric Grass Trimmer.

Included Items:

- Main Trimmer Unit
- Adjustable Handle
- Auxiliary Wheels (Upgraded)
- Plastic Blades
- Metal Blades
- 40-Tooth Alloy Saw Blade
- 2 x 2000mAh Lithium-Ion Batteries
- Battery Charger
- Safety Glasses
- Work Gloves
- Wrench and Screwdriver for Assembly

3. SETUP AND ASSEMBLY

Follow these steps to assemble your Fimilo 3-in-1 Cordless Electric Grass Trimmer.

3.1 Unboxing and Initial Inspection

Your browser does not support the video tag.

Video: Unboxing the Fimilo Cordless Weed Wacker. This video demonstrates the contents of the package and initial setup steps.

Carefully remove all components from the packaging. Check for any visible damage or missing parts against the package contents list.

3.2 Handle Installation

Attach the auxiliary handle to the main shaft. Ensure it is securely fastened at a comfortable position for operation.

Your browser does not support the video tag.

Video: Installation of the handle. This video provides a visual guide for attaching the auxiliary handle to the trimmer shaft.

3.3 Blade Installation

Select the appropriate blade for your task (plastic for tender grass, metal for tougher weeds, alloy saw blade for branches). Follow the steps below for secure installation.

1. Ensure the hexagonal slot on the trimmer head is properly locked with the hexagonal screw.

2. Place the chosen blade onto the spindle, ensuring the blade's parallel edge slot aligns.
3. Add a shim between the blade and the nut.
4. Tighten the nut securely using the provided wrench.



Image: Installation steps for blades and wheels. This image illustrates the process of attaching different blade types and the auxiliary wheels.

Your browser does not support the video tag.

Video: Blade installation. This video demonstrates how to correctly install the cutting blades.

3.4 Wheel Installation (Optional)

The trimmer can be used in wheeled or wheel-less mode. For wheeled operation, attach the auxiliary wheels.

1. Identify the three different height mounting holes on the protection guard. Choose the desired height.
2. Insert the hexagonal nut along the parallel slot and fix it on the mounting hole.
3. Fix the nut with one hand and hold the gripper on the wheel with the other hand to spin the wheel clockwise until it is installed.

Your browser does not support the video tag.

Video: Installation of the wheel. This video shows the steps for attaching the auxiliary wheels to the trimmer.



Image: Fimilo grass trimmer in wheeled mode, demonstrating its use as a lawn mower.

4. OPERATING INSTRUCTIONS

The Fimilo 3-in-1 Cordless Electric Grass Trimmer offers versatility for various gardening tasks.

4.1 Charging the Battery

Before first use, fully charge both 2000mAh lithium-ion batteries. Charging typically takes 2-3 hours. The charger will indicate when charging is complete.

Double the usage time

Large Capacity Battery Pack
Two 2000mAh batteries



No-load Up to **120min**
60 min of runtime



2-3 Hours
quick charge

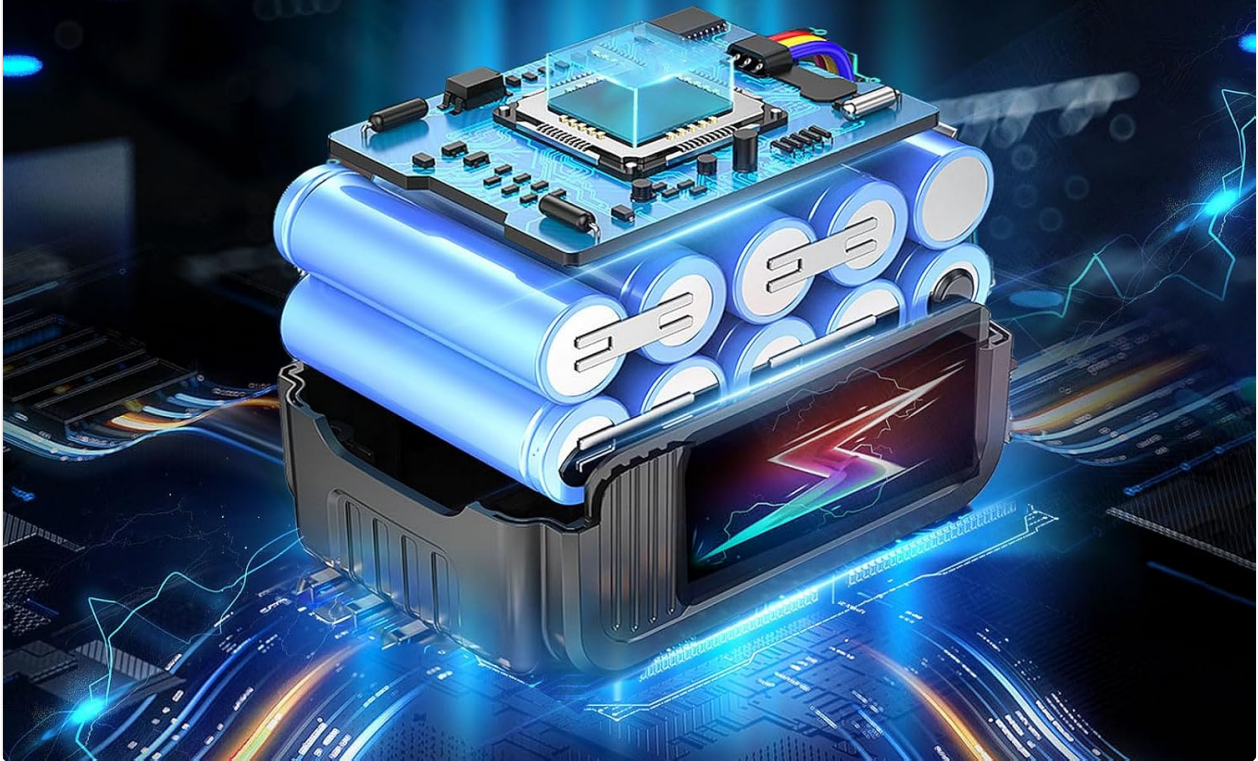


Image: Battery pack and charging indicators. This image shows the two 2000mAh batteries and their charging status.

4.2 Selecting Operating Mode

This tool functions as a trimmer, edger, and brush cutter. The mode is determined by the blade type and whether the wheels are attached.

Your browser does not support the video tag.

Video: 3-in-1 electric weed eater. This short video demonstrates the trimmer, edger, and mower functions.

- **Trimmer Mode:** Use plastic or metal blades for cutting grass and light weeds. Can be used with or without wheels.
- **Edger Mode:** Attach the wheels and use plastic or metal blades to create clean edges along sidewalks and driveways.
- **Brush Cutter Mode:** Use the 40-tooth alloy saw blade for thicker brush, small branches, and shrubs.

3-IN-1 Multifunction Trimmer

Convert **in seconds** easily and **save time**



Image: 3-in-1 multifunction trimmer. This diagram illustrates how the tool converts between mower, trimmer, and edger functions.

Two Modes Trimmer

The wheels are **removable**
So you can choose the **wheelless mode** or **wheeled mode**



Wheelless Mode

Wheeled Mode

Upgraded

Telescopic/Portable

Powerful

Long load

Low noise

Fast cutting

Image: Two modes of operation: wheel-less and wheeled. This image shows the trimmer being used in both configurations.

4.3 Operation Steps:

1. Ensure the battery is fully charged and securely inserted.
2. Wear appropriate safety gear (eye protection, gloves, sturdy shoes).
3. Hold the trimmer firmly with both hands.
4. Press the safety lock button and then the power trigger to start the motor.
5. Move the trimmer slowly and steadily across the area to be cut. Avoid striking hard objects.
6. Release the power trigger to stop the motor.



Image: Upgraded Cordless Lawn Mower in various usage scenarios. This image demonstrates the trimmer's versatility for different pruning and mowing tasks.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Fimilo grass trimmer.

5.1 Cleaning

- Always remove the battery before cleaning.
- Use a dry cloth to wipe down the exterior of the tool.
- Remove any grass clippings, dirt, or debris from the blade guard and motor housing.
- Clean blades after each use to prevent rust and maintain sharpness.

5.2 Blade Care

- Inspect blades for wear, cracks, or damage before each use. Replace damaged blades immediately.
- Sharpen metal and alloy blades as needed to maintain cutting efficiency.
- Plastic blades should be replaced when worn or broken.

3-IN-1 VERSATILE WEED WACKER

3 types blades make your work easier and more convenient



PLASTIC BLADES

Suitable for lawns and tender grass



METAL BLADES

Bush/Complex terrain weeds



40 TOOTH ALLOY SAW BLADE

Branches/Thorns/Crops/Shrubs

Image: Three types of blades. This image displays the plastic, metal, and alloy saw blades, indicating their suitable uses.

5.3 Battery Storage

- Store batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- For long-term storage, charge batteries to approximately 50% capacity.
- Do not store batteries in a discharged state.

6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Trimmer does not start	Battery not charged or improperly inserted. Safety lock not engaged.	Ensure battery is fully charged and correctly inserted. Press safety lock button before trigger.

Problem	Possible Cause	Solution
Poor cutting performance	Dull or damaged blade. Incorrect blade for material.	Replace or sharpen blade. Use appropriate blade type for the task.
Excessive vibration	Blade improperly installed or damaged.	Check blade installation. Replace damaged blade.
Battery drains quickly	Battery not fully charged. Old or faulty battery.	Ensure full charge. Consider replacing battery if performance does not improve.

7. SPECIFICATIONS

Feature	Detail
Brand	Fimilo
Model	B0CC8Z22HZ
Speed	Up to 8300 RPM (Motor up to 18000 RPM)
Power	650W
Battery Type	Lithium Ion
Number of Batteries	2 (included)
Battery Capacity	2000mAh each
Assembly Required	Yes

8. WARRANTY AND SUPPORT

Fimilo is committed to providing quality products and customer satisfaction.

8.1 Warranty Information

This product comes with a 30-day money-back guarantee. For specific warranty details beyond this period, please refer to the product packaging or contact Fimilo customer service.

8.2 Customer Support

If you encounter any issues or have questions regarding your Fimilo 3-in-1 Cordless Electric Grass Trimmer, please contact Fimilo Tech. customer service. Support is available 24 hours online.

For assistance, please visit the official Fimilo website or contact through the platform where the product was purchased.

