

[Manuals.plus](#) /

› [YOBON](#) /

› YOBON Mini Power Bank 10000mAh User Manual

YOBON

YOBON Mini Power Bank 10000mAh User Manual

Model: 10000mAh Fast Charging Portable Charger 22.5W

IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Use this product only in accordance with the enclosed instructions.
- Do not expose the power bank to extreme temperatures (above 60°C/140°F) or direct sunlight.
- Avoid dropping, short-circuiting, or exposing the power bank to high humidity or water.
- If the product battery expands, deforms, or emits a strange odor, discontinue use immediately.
- Keep out of reach of children.
- Do not disassemble, repair, or modify the power bank yourself. Contact qualified service personnel for assistance.
- Dispose of the power bank responsibly according to local regulations. Do not dispose of it in household waste.

Safety Guaranteed



Over-charge
protection



Over-current
protection



Over-Voltage
protection



Short-circuit
protection



Low-temp
protection



High-temp
protection



Image: Safety features including over-charge, over-current, over-voltage, short-circuit, low-temp, and high-temp protection.

PRODUCT OVERVIEW

The YOBON Mini Power Bank is a compact and portable 10000mAh fast charging solution designed to keep your mobile devices powered on the go. It features 22.5W fast charging capabilities with USB-C input and output, supporting PD3.0 and QC4.0 protocols.



Image: The YOBON Mini Power Bank, demonstrating its small size when held in a hand, with its digital display showing 100% charge and 22.5W fast charging indicator.

Package Contents

- 1 x YOBON 10000mAh Power Bank
- 1 x USB Cable
- 1 x User Manual (this document)

Key Features

- **10000mAh Capacity:** Provides multiple charges for smartphones and other small devices.
- **22.5W Fast Charging:** Supports Power Delivery (PD3.0) and Quick Charge (QC4.0) for rapid charging of compatible devices.
- **USB-C Input & Output:** Versatile USB-C port for both charging the power bank and charging devices.
- **Dual USB-A Outputs:** Two additional USB-A ports for charging multiple devices simultaneously.
- **LED Digital Display:** Clearly shows the remaining battery percentage.
- **Compact and Portable Design:** Small dimensions (105 x 67 x 18 mm) and lightweight (180g) for easy portability.
- **Universal Compatibility:** Compatible with a wide range of devices including smartphones, tablets, earphones, smartwatches, and even heated vests.

Compact Build

⚖️: 180g

iphone15

10000mAh



Image: A close-up of the power bank highlighting its features: LED Digital Display, Power Button, Micro USB Port, Type-C Charging Port, and two USB 5V/3A Outputs.

Universal Compatibility

PD 22.5W

Fast Charge Mode



iPhone 12 Series

PD 20W

Fast Charge Mode



iPhone 11/iPhone X
/ iPhone 8

QC 18W

Fast Charge Mode



Samsung



LG



Google

5V 3A

Fast Charge Mode



Phones



Tablets



Earphone



Heated vest



Smartwatch



Airpods



Image: A chart illustrating the power bank's universal compatibility with various devices and charging modes, including PD 22.5W, PD 20W, QC 18W, and 5V 3A for phones, tablets, earphones, heated vests, smartwatches, and AirPods.

Delicate Design

LED Digital Display

Power Button

Micro USB Port

Type-C Charging Port

USB 5V/3A Output

USB 5V/3A Output



Image: The power bank shown in a travel context (on an airplane window sill) and fitting into a jeans pocket, emphasizing its compact and portable design.

SETUP

Initial Charging of the Power Bank

Before first use, it is recommended to fully charge your YOBON Mini Power Bank.

1. Connect the provided USB cable to the power bank's USB-C or Micro USB input port.
2. Connect the other end of the USB cable to a compatible USB wall charger (not included) or a computer's USB port.
3. The LED digital display will show the charging progress. The power bank is fully charged when the display shows "100%".

Connecting Devices for Charging

The power bank can charge up to three devices simultaneously.

1. Identify the correct charging cable for your device (USB-C, USB-A, etc.).
2. Connect one end of your device's charging cable to one of the power bank's output ports (USB-C, USB1, or USB2).
3. Connect the other end of the cable to your device.

4. The power bank will automatically begin charging your device.



Image: The YOBON power bank connected and charging a laptop, an iPhone, and another smartphone, demonstrating its triple-device charging capability at 22.5W.

OPERATING INSTRUCTIONS

Charging Your Devices

Once your device is connected, the power bank will automatically detect it and begin charging. The power bank's intelligent USB output technology identifies the device type and supplies the appropriate electrical current for optimal charging speed.

- For fast charging, ensure your device and cable support PD3.0 or QC4.0 protocols.
- The power bank can charge devices up to 50%-65% in approximately 30 minutes with 3A high-speed charging.

Checking Battery Level

The LED digital display on the power bank indicates the remaining battery percentage.

- Press the power button briefly to activate the display and view the current battery percentage.

- The display will turn off automatically after a few seconds to conserve power.

MAINTENANCE

Proper care and maintenance will extend the lifespan of your power bank.

- **Cleaning:** Use a soft, dry cloth to clean the surface of the power bank. Do not use liquid cleaners or aerosols.
- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery health, fully charge the power bank at least once every three months if not in regular use.
- **Avoid Drops:** Protect the device from physical shocks and drops, which can damage internal components.

TROUBLESHOOTING

If you encounter issues with your YOBOON Mini Power Bank, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Power bank not charging.	Cable not connected properly; faulty cable/charger; power bank battery depleted.	Ensure cable is securely connected. Try a different USB cable or wall charger. Allow sufficient time for charging.
Device not charging from power bank.	Power bank battery depleted; incorrect cable; device not compatible; power bank in standby.	Check power bank battery level. Use the correct charging cable for your device. Ensure the power bank is active (press power button).
Slow charging.	Cable not supporting fast charge; device not supporting fast charge; multiple devices charging.	Use a fast-charging compatible cable. Ensure your device supports PD or QC. Charging multiple devices simultaneously may reduce individual charging speeds.
Power bank gets warm during use.	Normal operation during charging/discharging.	This is normal. If it becomes excessively hot or emits smoke/odor, discontinue use immediately and contact support.
LED display not working.	Power bank is off; display timeout.	Press the power button briefly to activate the display. The display turns off automatically to save power.

SPECIFICATIONS

Feature	Detail
Battery Type	Lithium-ion Polymer Battery
Capacity	10000mAh
USB-C Input/Output	22.5W (3A)
USB Outputs (USB1, USB2)	3A
Micro USB Input	3A
Dimensions	105 x 67 x 18 mm
Weight	180g
Special Features	Fast Charging, Pocket Size, LED Digital Display
Color	Black

YO BON[®] Produced

Power bank list

Power bank x 1
Usb cable x 1
User Manual x 1

Specification

Input: DC5V/2.4A
Output: DC5V/2.4A



eVatmaster Consulting GmbH
Bettinastr.30
60325 Frankfurt am Main, Germany
contact@evatmaster.com
Manufacturer: Shenzhenshijinnengtongkejiyouxiangongsi
Address: longgangqubantianjiedaobulonglu
445haogetailonggongyeyeancahngfangddong3louc
Shenzhen zhongguo 518129 CN



High-Speed
Charge



Temperature
Automatic Protection



Over-charge and
auto-discharge protection



Input Over-voltage
Protection



Cell MCU protection



Output over-current
protection



Warning: please use this product in accordance with the enclosed instructions. Ignoring the instructions may lead to product fire or other damage. For safety reasons, please do not use this product when fall down, short circuit or in high temperature, if the product battery expands or deform, please stop using immediately. Do not let children expose this product.

Image: A visual comparison of the power bank's dimensions (105mm length, 67.5mm width, 18mm thickness) and weight (180g) against an iPhone 15, illustrating its compact build.

WARRANTY AND SUPPORT

YO BON provides an industry-leading warranty for this product.

- **Warranty Period:** 3 years (36 months) from the date of purchase.
- This warranty covers manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or natural disasters.

For any questions, technical support, or warranty claims, please contact YOBON customer service. Refer to the product packaging or the official YOBON website for the most current contact information.

