

[manuals.plus](#) /

› [DOSS](#) /

› [DOSS PartyBoom Outdoor Bluetooth Speaker Instruction Manual](#)

DOSS WB-382

DOSS PartyBoom Outdoor Bluetooth Speaker Instruction Manual

Model: WB-382

Brand: DOSS

1. INTRODUCTION

Thank you for purchasing the DOSS PartyBoom Outdoor Bluetooth Speaker. This manual provides detailed instructions on how to set up, operate, and maintain your speaker to ensure optimal performance and longevity. Please read this manual thoroughly before using the product and retain it for future reference.

2. WHAT'S IN THE Box

- DOSS PartyBoom Outdoor Bluetooth Speaker
- USB-C Charging Cable
- User Manual

3. PRODUCT OVERVIEW

The DOSS PartyBoom speaker features a robust design with a 6.5-inch woofer and dual 2-inch tweeters for powerful, clear sound. It includes a comprehensive control panel for easy operation and various input options.



Figure 3.1: Front view of the DOSS PartyBoom speaker, showcasing the main woofer and integrated lighting.

MICROPHONE

INPUT Notes: Microphone not include.



Figure 3.2: Top-down view of the DOSS PartyBoom speaker's control panel, detailing buttons for volume, playback, bass/treble adjustment, and input selection.

4. SETUP AND BLUETOOTH PAIRING

4.1 Charging the Speaker

Before first use, fully charge the speaker using the provided USB-C cable. The charging indicator will show the battery status.

4.2 Powering On/Off

Press and hold the power button located on the control panel to turn the speaker on or off.

4.3 Bluetooth Pairing

1. Turn on the DOSS PartyBoom speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth light.

2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "DOSS PartyBoom" from the list. Once connected, you will hear an audible confirmation, and the Bluetooth light will become solid.

Your browser does not support the video tag.

Video 4.1: This video demonstrates the wireless stereo pairing feature of the DOSS PartyBoom speaker, showing how to connect your device via Bluetooth for a seamless audio experience.

5. OPERATING INSTRUCTIONS

5.1 Volume Control

Use the '+' and '-' buttons on the control panel to adjust the volume. A short press adjusts volume incrementally, while a long press quickly changes the volume.

5.2 Playback Control

- Press the Play/Pause button to start or pause music playback.
- Long press the '+' button for the next track.
- Long press the '-' button for the previous track.

5.3 BassBoost Function

Press the dedicated BassBoost button to enhance the low-end frequencies, providing a deeper and richer bass experience. Press it again to deactivate.

Over 100 Lights Effects

4 Light Modes*36 Multi-Color Lights
+7 Single Light Effects.



Figure 5.1: Illustration highlighting the powerful bass capabilities of the DOSS PartyBoom speaker, emphasizing its 100W peak power output.

6. PARTY SYNC FEATURE

The Party Sync feature allows you to wirelessly connect multiple DOSS PartyBoom speakers for an expanded audio experience, creating a synchronized sound system for larger spaces or more immersive sound.

6.1 Pairing Two Speakers for Stereo Sound

1. Ensure both DOSS PartyBoom speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the Party Sync button until you hear a prompt indicating pairing mode.
3. On the second speaker, short press the Party Sync button.
4. The speakers will automatically connect to each other. Once connected, the primary speaker's Party Sync light will be solid, and the secondary speaker's light will also be solid.
5. Now, connect your device to the primary speaker via Bluetooth as described in Section 4.3. Audio will play in stereo across both speakers.

6.2 Syncing Up to 99 Speakers (Party Mode)

For an even larger soundstage, you can connect up to 99 DOSS PartyBoom speakers in Party Mode. Follow the same steps as for stereo pairing, but continue short-pressing the Party Sync button on additional speakers to add them to the group. All speakers will play the same audio simultaneously.



Figure 6.1: Multiple DOSS PartyBoom speakers synchronized, creating an expanded stereo sound experience for a party setting.

7. MICROPHONE AND GUITAR INPUTS

The DOSS PartyBoom speaker is equipped with dedicated inputs for a microphone and a guitar, allowing for karaoke sessions or live music performances.

Customize Operate

Adjust your music effect, Guitar/Mic settings, and the light modes.



Figure 7.1: Close-up of the DOSS PartyBoom speaker's control panel, highlighting the microphone input and related controls.

7.1 Connecting a Microphone or Guitar

Plug your microphone or guitar cable into the corresponding input jack on the speaker's control panel.

7.2 Adjusting Input Volume and Echo

Use the dedicated 'Mic/Guitar Volume' and 'Echo Level' controls on the speaker's control panel to adjust the sound of your connected instruments or microphone.



Figure 7.2: Individuals enjoying a backyard gathering, utilizing the DOSS PartyBoom speaker with both microphone and guitar inputs for entertainment.

8. LIGHT MODES

The DOSS PartyBoom speaker features dynamic, beat-driven lights that enhance your listening experience. There are multiple light modes to choose from, allowing you to customize the ambiance.



Figure 8.1: Visual representation of the DOSS PartyBoom speaker's extensive lighting capabilities, illustrating over 100 light effects across various modes and colors.

8.1 Changing Light Modes

Press the 'Light Mode' button on the control panel to cycle through the available light effects. The lights will pulse and flow with the beats of your music.

9. MAINTENANCE

9.1 Cleaning

Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents. For stubborn dirt, a slightly damp cloth can be used, ensuring no liquid enters the ports.

9.2 Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery to approximately 50% every few months to preserve battery life.

9.3 Water Resistance

The DOSS PartyBoom speaker features an IPX4 splash-proof rating, meaning it is resistant to splashing water from any direction. Do not submerge the speaker in water or expose it to pressurized water jets.

10. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully.
No sound from speaker.	Volume is too low or muted.	Increase speaker and device volume. Check if the device is muted.
Bluetooth pairing fails.	Speaker is already connected to another device. Device Bluetooth is off. Speaker is out of range.	Disconnect from other devices. Ensure device Bluetooth is on. Move device closer to speaker (within 33 feet/10 meters).
Party Sync fails.	Speakers are too far apart. One speaker is already connected to a device.	Ensure speakers are within close proximity. Disconnect any Bluetooth devices from both speakers before initiating Party Sync.

11. SPECIFICATIONS

Feature	Detail
Model Name	PartyBoom
Speaker Type	Subwoofer
Speaker Maximum Output Power	60 Watts
Woofer Diameter	6.5 Inches
Surround Sound Channel Configuration	2.1
Wireless Communication Technology	Bluetooth
Power Source	Battery Powered (2 Nonstandard Battery batteries included)
Product Dimensions	12.7"D x 11.8"W x 16.3"H
Item Weight	10.98 pounds
Is Waterproof	TRUE (IPX4 Splash Proof)
Recommended Uses For Product	Indoor/Outdoor

12. WARRANTY AND SUPPORT

DOSS products come with a limited warranty. For detailed warranty information, product support, or to register your product, please visit the official DOSS website or contact their customer service. Keep your purchase

receipt as proof of purchase.

For further assistance, please visit: [DOSS Official Store on Amazon](#)