

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KEMEI](#) /

› [KEMEI Hair Clipper and Trimmer Set Instruction Manual \(Models KM-2296, KM-2299\)](#)

KEMEI KM-2296, KM-2299

KEMEI Hair Clipper and Trimmer Set Instruction Manual

Models: KM-2296, KM-2299

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- Avoid using on infants.
- Keep the trimmer away from water sources.
- Follow recommended cleaning and maintenance procedures to prevent electrical hazards and skin irritation.
- Do not disassemble the appliance. For repairs, contact qualified service personnel.
- Ensure the appliance is fully charged before first use to optimize battery life.

2. PRODUCT OVERVIEW

The KEMEI Hair Clipper and Trimmer Set provides professional-grade hair cutting and trimming capabilities. The set includes a main hair clipper (KM-2296) and a detail trimmer (KM-2299), both designed for smooth, sharp, and precise performance.

Key Features:

- **Self-Sharpening Blades:** Equipped with precise blades that maintain sharpness longer.
- **Easy to Clean:** Blades can be rinsed directly without disassembly.
- **High-Capacity Battery:** Long-lasting rechargeable batteries for extended use.
- **Detail Trimmer:** Precision T-shaped blade for near-zero gapped distance, ideal for necklines, sideburns, and beards.
- **Fade Blade:** Carbon steel blade for quick and easy cutting of all hair types, suitable for fade haircuts.

3. PACKAGE CONTENTS

Your KEMEI Hair Clipper and Trimmer Set includes the following items:

- 1 x KEMEI Hair Clipper (KM-2296)

- 1 x KEMEI Detail Trimmer (KM-2299)
- 11 x Limit Combs (8 for clipper: 3/6/9/13/16/19/22/25mm; 3 for trimmer: 1/2/3mm)
- 1 x Cleaning Brush
- 1 x Instruction Manual
- 1 x Hair Cutting Cape
- 1 x Charger with USB Connection
- ABS Plastic Protective Accessories



Image 1: Contents of the KEMEI Hair Clipper and Trimmer Set, including both devices, various guide combs, cleaning brush, and charging cables, neatly arranged in a carrying case.

4. CHARGING INSTRUCTIONS

Before first use, fully charge both the hair clipper and the detail trimmer.

- **Hair Clipper (KM-2296):** Charges in approximately 3.5 hours and provides up to 350 minutes of running time.
- **Detail Trimmer (KM-2299):** Charges in approximately 3 hours and provides up to 180 minutes of running time.

Connect the charger to the device and a suitable USB power source (e.g., laptop, power bank, car charger, USB wall adapter). The indicator light will show charging status.

Variety of Charging with Charging Base



Laptop



Power bank



Car charger



USB Charge



**Charging time
3.5 Hours
Running time
350 Minutes**



Image 2: The KEMEI Hair Clipper (KM-2296) placed on its charging base, illustrating various charging methods like laptop, power bank, car charger, and USB charge. The image highlights a 3.5-hour charging time for 350 minutes of running time.



Image 3: The KEMEI Detail Trimmer (KM-2299) connected to a laptop via USB for charging. The image highlights a 3-hour charging time for 180 minutes of usage.

5. OPERATING INSTRUCTIONS

5.1 Attaching and Removing Guide Combs

To achieve desired hair lengths, attach the appropriate guide comb to the clipper or trimmer. Ensure the comb is securely fastened before use.

- **For Hair Clipper (KM-2296):** Use the 8 limit combs (3mm, 6mm, 9mm, 13mm, 16mm, 19mm, 22mm, 25mm) for various hair lengths.
- **For Detail Trimmer (KM-2299):** Use the 3 limit combs (1mm, 2mm, 3mm) for precise detailing.

8 Hair clipper limit combs 0.1-4 mm adjustable



3 Hair trimmer limit combs T-blade 0 mm gap



Image 4: The KEMEI Hair Clipper (KM-2296) shown with its eight guide combs, ranging from 3mm to 25mm, for different hair cutting lengths. The image also displays the detail trimmer (KM-2299) with its three guide combs (1mm, 2mm, 3mm).

Your browser does not support the video tag.

Video 1: This video demonstrates the unboxing of the KEMEI Hair Clipper and Trimmer Set, showcasing all included components and how to attach the guide combs to both the clipper and the trimmer. It also shows the power-on function of both devices.

5.2 Hair Cutting and Trimming

Ensure hair is clean and dry before cutting. Select the desired guide comb. Turn on the device and move it against the direction of hair growth for an even cut. Use the detail trimmer for precise lines and edges.

Your browser does not support the video tag.

Video 2: This video demonstrates the KEMEI Hair Clipper and Trimmer Set in use, showing how to perform a fade haircut and create sharp lines and edges with the detail trimmer. It highlights the precision and ease of use of both devices during a haircut.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure optimal performance and longevity of your KEMEI hair clipper and trimmer.

- **Blade Cleaning:** After each use, brush off any loose hair from the blades using the provided cleaning brush. The blades can be rinsed directly under water without disassembly. Ensure the device is turned off and unplugged before cleaning.
- **Oiling Blades:** Periodically apply a small drop of clipper oil (not included) to the blades to keep them lubricated and sharp. Turn on the clipper for a few seconds to distribute the oil.
- **Storage:** Store the appliance in a dry place, away from direct sunlight and moisture. Use the provided carrying case for protection.

DLC Carbon Steel Blades

Steel precision hair clipper & trimmer



Image 5: A close-up view of the DLC Carbon Steel Blades on both the KEMEI Hair Clipper and Trimmer, emphasizing their precision and sharpness.

7. TROUBLESHOOTING

If you encounter any issues with your KEMEI Hair Clipper and Trimmer Set, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device not turning on.	Low battery or not charged.	Charge the device fully as per charging instructions.

Problem	Possible Cause	Solution
Poor cutting performance.	Blades are dull or clogged with hair.	Clean the blades thoroughly and apply clipper oil. If blades are excessively dull, consider replacement.
Device making unusual noise.	Lack of lubrication or foreign object.	Clean and oil the blades. Check for any obstructions. If the issue persists, contact customer support.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	KEMEI
Model Numbers	KM-2296, KM-2299
Battery Type	Lithium (3 A batteries included)
Clipper Charging Time	3.5 Hours
Clipper Running Time	350 Minutes
Trimmer Charging Time	3 Hours
Trimmer Running Time	180 Minutes
Blade Material	Carbon Steel
Package Dimensions	11.85 x 7.72 x 3.46 inches
Item Weight	2.67 Pounds

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official KEMEI website. Keep your purchase receipt as proof of purchase.