

CELED236HDB5, L32MTV17a, L40MTV17a, L42MTV17a, L48MTV17a, L49UTV17a, L55HTV17a

Generic Remote Control Instruction Manual

For Continental Edison CELED236HDB5 & Linden L32MTV17a, L40MTV17a, L42MTV17a, L48MTV17a, L49UTV17a, L55HTV17a Smart LCD LED TVs

1. INTRODUCTION

This instruction manual provides essential information for the proper use and care of your Generic replacement remote control. This remote is designed to be compatible with various Continental Edison and Linden Smart LCD LED TV models, including CELED236HDB5, L32MTV17a, L40MTV17a, L42MTV17a, L48MTV17a, L49UTV17a, and L55HTV17a. Please read this manual thoroughly before use.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent damage to the remote control or injury to yourself:

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period.
- Do not expose the remote control to direct sunlight, heat sources, or moisture.
- Avoid dropping the remote control or subjecting it to strong impacts.

3. PACKAGE CONTENTS

The package contains:

- 1 x Generic Replacement Remote Control

Note: Batteries are not included and must be purchased separately.

4. SETUP

4.1 Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.



Image: Rear view of the remote control, showing the closed battery compartment cover.

After installing the batteries, the remote control is ready for use with your compatible TV.

5. OPERATING INSTRUCTIONS

5.1 Remote Control Layout and Functions

Familiarize yourself with the buttons on your remote control. While this replacement remote may not have all the exact same buttons as your original, the primary functions are typically mapped as follows:



Image: Front view of the remote control, displaying all available buttons and their labels.

Common Button Functions

Button	Function
POWER (●)	Turns the TV on or off.
MUTE	Mutes or unmutes the TV sound.
VOL +/-	Adjusts the volume level.
CH +/-	Changes the TV channel.
OK	Confirms selections in menus.
Directional Arrows (Up, Down, Left, Right)	Navigates through menus and options.
EXIT	Exits the current menu or function.
MENU/INFO	Accesses the TV's main menu or displays information.
Number Buttons (0-9)	Direct channel selection.
PLAY/PAUSE/STOP/FF/RW	Controls media playback (if supported by TV).
TEXT/SUBTITLE/DISPLAY	Accesses teletext, subtitles, or display options.

Note: Specific button functionality may vary depending on your TV model. Some advanced features of your original TV remote may not be supported by this replacement remote.

6. MAINTENANCE

6.1 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

6.2 Battery Replacement

Replace the batteries when the remote control's performance degrades or it stops responding. Always replace both batteries at the same time with new AAA batteries. Refer to the 'Battery Installation' section for detailed instructions.

7. TROUBLESHOOTING

7.1 Remote Control Not Working

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new ones.
- **Line of Sight:** Make sure there is a clear line of sight between the remote control and the TV's infrared sensor. Obstructions can block the signal.
- **Remote Sensor:** Ensure the TV's remote sensor is not blocked or dirty.
- **TV Compatibility:** Verify that your TV model is listed as compatible with this remote control.

7.2 Buttons Unresponsive

- **Battery Check:** Low batteries can cause intermittent button response. Replace batteries.
- **Stuck Buttons:** Check if any buttons are physically stuck or jammed.
- **Infrared Signal:** Point the remote directly at the TV.

If the issue persists after trying these steps, the remote control may be faulty.

8. SPECIFICATIONS

8.1 Product Specifications

Feature	Detail
Brand	Generic
Compatible Devices	Television (Continental Edison CELED236HDB5, Linden L32MTV17a, L40MTV17a, L42MTV17a, L48MTV17a, L49UTV17a, L55HTV17a)
Connectivity Technology	Infrared
Max Number of Supported Devices	1
Batteries Required	2 AAA batteries (not included)
Special Feature	Replacement remote; may not replicate all original button functions.

9. WARRANTY INFORMATION

9.1 Product Warranty

No specific warranty information is provided for this Generic replacement remote control. Please refer to the retailer's return policy for details regarding returns or exchanges.

10. CUSTOMER SUPPORT

10.1 Contact Information

For support regarding this product, please contact the seller directly through the platform where the purchase was made. No direct manufacturer contact information is available.