

CHACON 99013

CHACON 99013 Remote Control Outlet Set User Manual

Indoor 3680W & Outdoor 1000W Wireless Control System

1. INTRODUCTION

This manual provides comprehensive instructions for the CHACON 99013 Remote Control Outlet Set. This product allows you to wirelessly control your electrical appliances and lighting, both indoors and outdoors, for enhanced convenience. The set includes indoor outlets with a maximum capacity of 3680W and outdoor outlets with a maximum capacity of 1000W.

Please read this manual carefully before installation and use to ensure safe and optimal operation of your device.

2. SAFETY INFORMATION

- Ensure the total power consumption of connected devices does not exceed the maximum load capacity of the respective outlet (3680W for indoor, 1000W for outdoor).
- Do not immerse the outdoor outlets in water. They are designed for outdoor use but are not submersible.
- Do not open or attempt to repair the devices yourself. Refer all servicing to qualified personnel.
- Keep the remote control and outlets away from extreme temperatures, direct sunlight, and moisture.
- Dispose of batteries responsibly according to local regulations.
- This product is designed for household use. Do not use for industrial or commercial applications unless specified.

3. PACKAGE CONTENTS

The CHACON 99013 set includes:

- 5 x Sets of 3 Indoor Remote Control Outlets (Total 15 indoor outlets)
- 5 x Sets of 3 Outdoor Remote Control Outlets (Total 15 outdoor outlets)
- Remote controls (one for each set of 3 outlets, typically 10 remotes in total for 10 sets)



Image 1: Overview of the CHACON remote control outlet set, showing both the white indoor outlets and the black outdoor outlets, each with their respective remote controls.

4. SETUP AND PAIRING

4.1. Remote Control Battery Installation

The remote controls require batteries (type usually CR2032 or similar, not specified in input, but common for such remotes). Open the battery compartment on the back of the remote control and insert the battery, observing the correct polarity (+/-).

4.2. Pairing Outlets with Remote Control

Each set of outlets and its remote control are typically pre-paired. If re-pairing is necessary or if you wish to change the pairing:

1. Plug the remote control outlet into a wall socket. The indicator light on the outlet may flash or illuminate.
2. Press and hold the pairing button on the side of the outlet (or the button indicated in the specific product instructions, if different) for a few seconds until the indicator light starts flashing rapidly.
3. While the light is flashing, press the desired "ON" button (e.g., A ON, B ON, C ON, D ON) on your remote control.
4. The indicator light on the outlet should stop flashing and remain solid or turn off, indicating successful pairing.
5. Test the connection by pressing the ON/OFF buttons for the paired channel on the remote.

Repeat this process for all outlets you wish to pair with the remote control.





Image 2: Left: CHACON indoor remote control outlets (white) with their corresponding remote. Right: CHACON outdoor remote control outlets (black) with their corresponding remote.

5. OPERATING INSTRUCTIONS

5.1. Connecting Appliances

Once paired, plug your desired electrical appliance or lamp into the remote control outlet. Ensure the appliance is switched to its "ON" position if it has a physical power switch, so it can be controlled by the remote outlet.

5.2. Using the Remote Control

The remote control features "ON" and "OFF" buttons, typically grouped by channels (A, B, C, D). Press the corresponding "ON" button to turn on the appliance connected to the paired outlet, and the "OFF" button to turn it off.

- **ON:** Activates the connected appliance.
- **OFF:** Deactivates the connected appliance.

The wireless transmission range is approximately 30 meters in an open field. Obstacles such as walls, furniture, and other electronic devices may reduce this range.

6. MAINTENANCE

- Clean the outlets and remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- Regularly check the battery in the remote control and replace it when its performance diminishes.
- Ensure outdoor outlets are protected from direct heavy rain or prolonged exposure to harsh weather conditions, despite their outdoor rating.

7. TROUBLESHOOTING

- **Outlet not responding:**
 - Check if the outlet is properly plugged into the wall socket.
 - Ensure the appliance connected to the outlet is switched on.
 - Replace the battery in the remote control.
 - Re-pair the outlet with the remote control (refer to Section 4.2).
 - Ensure you are within the operational range (30 meters, clear line of sight).
- **Interference:**
 - Other wireless devices operating on the 433.92 MHz frequency might cause interference. Try moving the outlets or remote control to a different location.
- **Outdoor outlet not working:**
 - Verify the outdoor outlet's IP rating (IP20 for this model, meaning it's not waterproof, only protected against solid objects larger than 12.5mm). This rating suggests limited protection against water. For outdoor use, additional protection from direct moisture is advised.

8. SPECIFICATIONS

Model Number	99013
Brand	CHACON
Operating Voltage	220 Volts
Indoor Outlet Max Load	3680W (as per product title)
Outdoor Outlet Max Load	1000W (as per product title)
Transmission Frequency	433.92 MHz
Transmission Range	30m (open field)
Operating Mode	ON-OFF
Contact Type	Normally Closed
Material	Plastic
International Protection (IP) Rating	IP20 (<i>Note: IP20 indicates protection against solid objects >12.5mm, but no protection against water. For outdoor use, additional protection from moisture is advised.</i>)
Product Dimensions (L x W x H)	29 x 51 x 30 cm (for the entire package)
Weight	800 grams (for the entire package)
Country of Origin	China

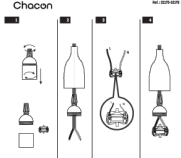
9. WARRANTY AND SUPPORT

Specific warranty information is not provided in the product details. Please refer to your purchase documentation or contact the retailer for warranty terms.

For technical support or further assistance, please contact CHACON customer service through their official website or the retailer where the product was purchased.

© 2023 CHACON. All rights reserved.

Related Documents - 99013

	Chacon 32175-32176 Installation Guide and Instructions Step-by-step installation instructions for the Chacon 32175-32176 electrical accessory, including assembly diagrams described textually, manufacturer details, and recycling information. This guide is designed for clarity and accessibility.
	Chacon Wi-Fi Timer User Manual (53022/53023) User manual for the Chacon Wi-Fi Timer plug (models 53022 and 53023), detailing setup, usage, troubleshooting, and technical specifications. Compatible with My Chacon and DiO one apps, and voice control via Google Home and Amazon Alexa.
	Chacon 84172 Wireless Doorbell User Manual - Installation and Operation Guide Comprehensive user manual for the Chacon 84172 wireless doorbell. Includes installation instructions, setup guide, technical specifications, safety information, and operation details.
	Manual de Instalação e Utilizador do Vídeoporteiro CHACON (Modelos 34801, 34802) Guia completo para a instalação e utilização do vídeoporteiro CHACON, incluindo especificações técnicas, resolução de problemas e notas de segurança.

 The diagram shows the step-by-step process of installing a Chacon lamp holder. It includes illustrations of the lamp holder, the lamp, and the wiring connections. The text 'Chacon' is visible at the top left, and 'N°1 32180-32181' is at the top right.	Chacon 32180-32181 Lamp Holder Installation Guide Step-by-step instructions for installing the Chacon 32180-32181 lamp holder. Includes wiring guidance and product information.
 The diagram shows the cover of the Chacon 53025/53026 Wi-Fi Programmer User Manual. It features a small image of the device and a list of contents in French. The text 'Chacon' is visible at the top left.	Manuel d'utilisation et spécifications du programmeur Wi-Fi Chacon 53025/53026 Guide détaillé pour l'installation et l'utilisation du programmeur Wi-Fi Chacon (modèles 53025, 53026), incluant la création de compte, la connexion Wi-Fi, l'utilisation, le dépannage et les spécifications techniques.

Documents - CHACON – 99013

no relevant documents