

[Manuals.plus](#) /

› [Milly Mally](#) /

› Milly Mally Axel Tricycle Instruction Manual

Milly Mally Axel

Milly Mally Axel Tricycle Instruction Manual

Model: Axel

INTRODUCTION

Thank you for choosing the Milly Mally Axel Tricycle. This manual provides essential information for the safe assembly, operation, and maintenance of your new tricycle. Please read it thoroughly before use and retain it for future reference.



Image: The Milly Mally Axel Tricycle in black with blue accents, shown with the parent push handle attached.

SAFETY INFORMATION

- Always supervise children when using the tricycle.
- Ensure all parts are securely fastened before each use.
- Do not use on public roads, near motor vehicles, or on steep inclines.
- Children should wear appropriate safety gear, including a helmet.
- The parent handle is for steering and pushing, not for lifting the tricycle with the child in it.

- Recommended age: For children learning to ride, approximately 1 year and older.

PACKAGE CONTENTS

Upon unpacking, please verify that all components are present:

- Tricycle Frame (main body)
- Front Wheel with foldable pedals
- Rear Wheels (2)
- Handlebar with grips and bell
- Seat with safety harness
- Parent Push Handle
- Front Basket
- Rear Basket
- Assembly Hardware (screws, nuts, tools if included)
- Instruction Manual (this document)

SETUP AND ASSEMBLY

Assembly is required for this product. Please follow these steps carefully.

1. Attach Rear Wheels

Securely attach the two rear wheels to the main frame using the provided hardware. Ensure they rotate freely but are firmly fixed.



Image: Rear view of the tricycle showing the two rear wheels and the rear basket.

2. Install Front Wheel and Pedals

Insert the front wheel assembly into the front fork. Attach the foldable pedals. Ensure the pedals can be folded and unfolded smoothly and securely lock into position for use.



Image: Close-up of the front wheel with a foldable pedal in the extended position.



Image: Close-up of a rear wheel with a footrest, indicating where a child's feet can rest when not pedaling.

3. Attach Handlebar and Bell

Mount the handlebar onto the front fork stem. Ensure the grips are firm and the bell is securely attached and functional.



Image: Close-up of the handlebar showing the bell and the blue non-slip grip.

4. Install Seat and Baskets

Attach the seat to the frame, ensuring the safety harness is correctly installed. Mount the front and rear baskets.

5. Attach Parent Push Handle

Insert the parent push handle into its designated slot at the rear of the tricycle. Adjust its height for comfortable pushing and secure it. The handle can be removed when the child is ready to ride independently.



Image: The Milly Mally Axel Tricycle shown without the parent push handle, ready for independent riding.

OPERATING INSTRUCTIONS

Using the Parent Push Handle

The adjustable parent push handle allows an adult to steer and control the tricycle. Use it to guide the child and assist with propulsion. The handle can be adjusted for height to suit the parent's comfort.

Foldable Pedals

For younger children who are not yet ready to pedal, the pedals can be folded away, allowing their feet to rest on the footrests or simply hang freely. When the child is ready to pedal, unfold the pedals and ensure they are locked into position.

Steering and Bell

The child can steer the front wheel using the handlebar. The integrated bell can be used for playful signaling.

Safety Harness

Always secure the child with the safety harness when they are seated in the tricycle to prevent accidental falls.

MAINTENANCE

- **Cleaning:** Wipe down the tricycle with a damp cloth and mild soap. Do not use abrasive cleaners or solvents.
- **Lubrication:** Periodically check and lubricate moving parts such as wheel axles and pedal mechanisms with a light, non-toxic lubricant.
- **Inspections:** Regularly inspect all screws, nuts, and bolts to ensure they are tight. Check for any signs of wear or damage to the frame, wheels, seat, and handle. Replace worn or damaged parts immediately.
- **Storage:** Store the tricycle in a dry place, away from direct sunlight and extreme temperatures, to prevent material degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tricycle difficult to steer.	Loose handlebar or front wheel assembly.	Check and tighten all connections for the handlebar and front wheel.
Pedals not engaging or folding properly.	Mechanism obstructed or damaged.	Clear any obstructions. Inspect for damage. Ensure pedals are fully extended and locked for use.
Squeaking noises from wheels.	Lack of lubrication or loose parts.	Apply a small amount of non-toxic lubricant to the wheel axles. Check for loose wheel nuts.
Parent handle feels wobbly.	Not securely fastened or height adjustment lock is loose.	Ensure the parent handle is fully inserted and its locking mechanism is engaged.

SPECIFICATIONS

- Model:** Axel
- Brand:** Milly Mally
- Material:** Alloy Steel
- Item Weight:** 6 Kilograms
- Product Dimensions (L x W x H):**80 cm x 41 cm x 95 cm
- Recommended Age:** Baby (approximately 1 year and older)
- Assembly Required:** Yes



Image: Diagram showing the key dimensions of the Milly Mally Axel Tricycle, including length, width, and height.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Milly Mally website or contact your retailer. Keep your proof of purchase for any warranty claims.

Official Brand Store: [Milly Mally Store on Amazon](#)

© 2023 Milly Mally. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question