

Roku 55R4A5R

Roku Smart TV – 55-Inch Select Series 4K HDR RokuTV User Manual

Model: 55R4A5R


INTRODUCTION

The Roku Select Series 4K TV is designed to provide a brilliant streaming experience with superior picture quality. This manual will guide you through the setup, operation, and maintenance of your new Roku Smart TV.



Image: The Roku 55-Inch Select Series 4K HDR Smart TV, showcasing its sleek design, alongside its remote and product packaging.

 Roku Select Series 4K TVs

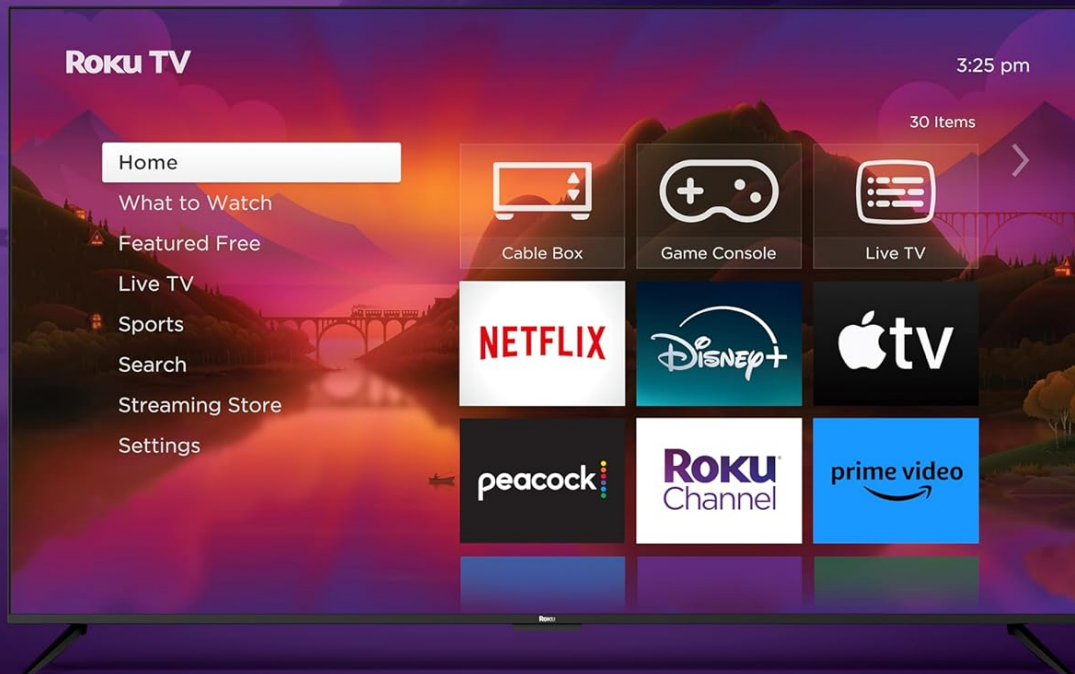

The smart TV that makes sense

Image: The Roku Select Series 4K TV displaying its intuitive home screen, featuring icons for popular streaming applications and input options.

WHAT'S IN THE BOX

Verify that all components are present before beginning setup:

- Roku 55" Select Series 4K Smart TV
- Stands and screws
- Roku enhanced voice remote with batteries
- Quick Start Guide



Image: A visual representation of the contents of the Roku TV box, including the television unit, TV stands, power cable, various screws, AA batteries, and the Roku Enhanced Voice Remote.

SETUP

 
 
Step 1: Attach the TV Stands

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align the TV stands with the screw holes on the bottom of the TV.
3. Secure the stands using the provided screws. For 55" models, use 4 screws.

Step 2: Connect Power and Devices

Connect the power cord to the TV and then to a wall outlet. Connect your external devices (e.g., cable box, game console, soundbar) to the appropriate ports on the back of the TV.


What's in the box

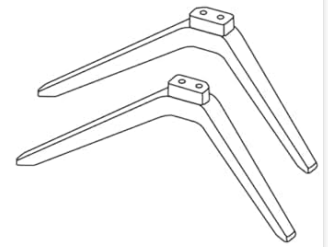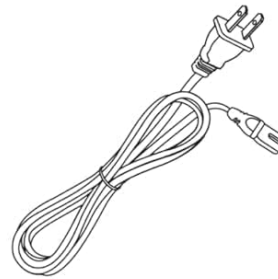


TV stands

Roku Select Series 4K TV

 Power cable
for 75" model
only




43"/50"/55"/75"
model x 4 screws

 

65" model x 6 screws

 Stand screws

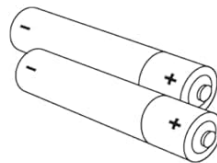

AA batteries
x 2



Roku Enhanced
Voice Remote

Image: A detailed view of the Roku TV's connectivity panel, showing various input ports such as HDMI (including ARC), USB, Optical audio out, and Antenna/Cable input for connecting external devices.

 
Step 3: Initial Setup and Network Connection

1. Insert the included AA batteries into the Roku enhanced voice remote.
2. Power on the TV using the remote.
3. Follow the on-screen instructions to select your language, connect to your Wi-Fi network, and activate your Roku account.

OPERATING YOUR ROKU SMART TV

Home Screen Navigation

The Roku home screen provides easy access to your streaming apps, connected inputs, and free live TV channels. Use the directional pad on your remote to navigate through options.

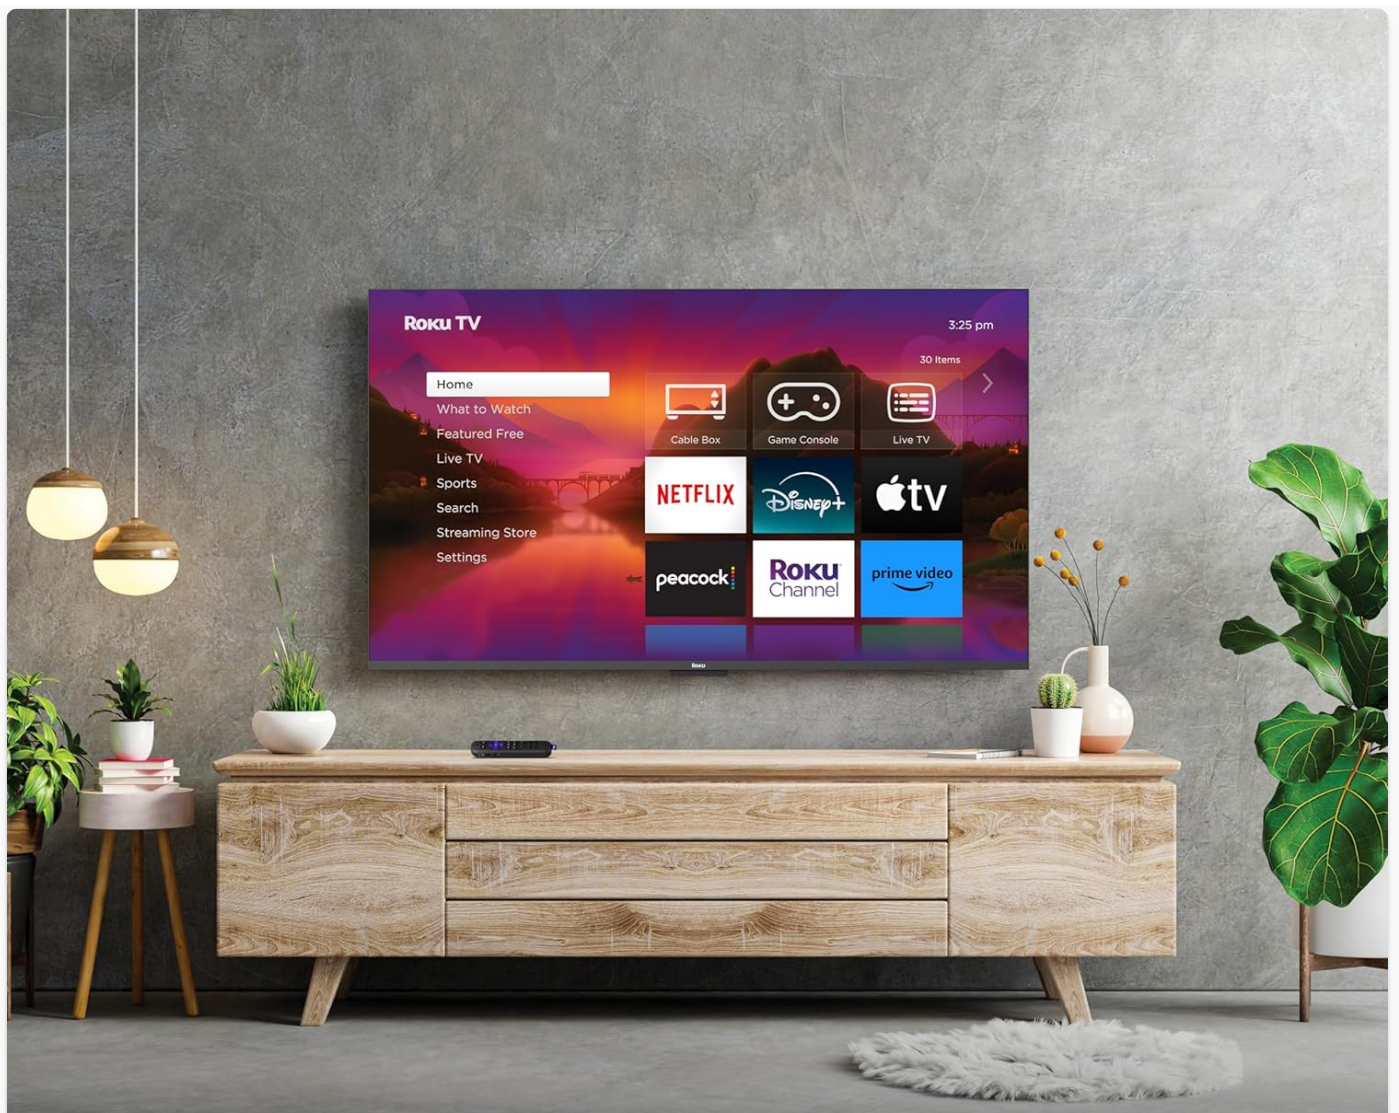

Your favorites front and center

Streaming apps, inputs, and free live TV are all together on the home screen.

Image: The Roku TV's home screen, highlighting how streaming applications, inputs, and free live TV are centrally organized for quick access.

Picture and Sound Settings

Your Roku TV features brilliant 4K HDR picture with automatic brightness adjustment. You can further customize picture and sound settings through the TV's menu.

- **Automatic Brightness:** The TV adjusts screen brightness based on room lighting.
- **HDR10+:** Experience enhanced color, contrast, and brightness with compatible content.
- **Auto Speech Clarity & Night Mode:** Built-in sound features to improve dialogue and reduce loud sounds for late-night viewing.



A treat for the eyes

Sharp 4K HDR10+ with auto brightness brings out rich detail while colors pop in lifelike clarity.

Image: The Roku TV screen showcasing a high-definition image of two colorful parrots, illustrating the sharp 4K HDR10+ picture quality and vibrant colors.

Using the Enhanced Voice Remote

The Roku enhanced voice remote allows for convenient control and search functions.



Enhanced voice remote

Search, set personal shortcuts, and enjoy Headphone Mode—there's even a lost remote finder.

Image: The Roku enhanced voice remote, demonstrating its voice search capability with a speech bubble showing "Show me comedies."



Image: A detailed diagram labeling the various buttons on the Roku enhanced voice remote, including TV power, microphone, volume, mute, options, instant replay, personal shortcut buttons, and app shortcuts.

- **Voice Search:** Press and hold the voice button (microphone icon) and speak your command to search for content or control the TV.
- **Headphone Mode:** Plug headphones into the remote's headphone jack for private listening.
- **Personal Shortcuts:** Assign your favorite streaming apps to the customizable shortcut buttons.
- **Lost Remote Finder:** Use the Roku mobile app to locate a misplaced remote.

Backdrops Feature

Transform your TV into a digital gallery using the Backdrops feature. Browse curated art and photography or upload your own personal photos.

State of the art

Turn your TV into a digital gallery with Backdrops. Browse famous artists and photographers or upload your personal photos.

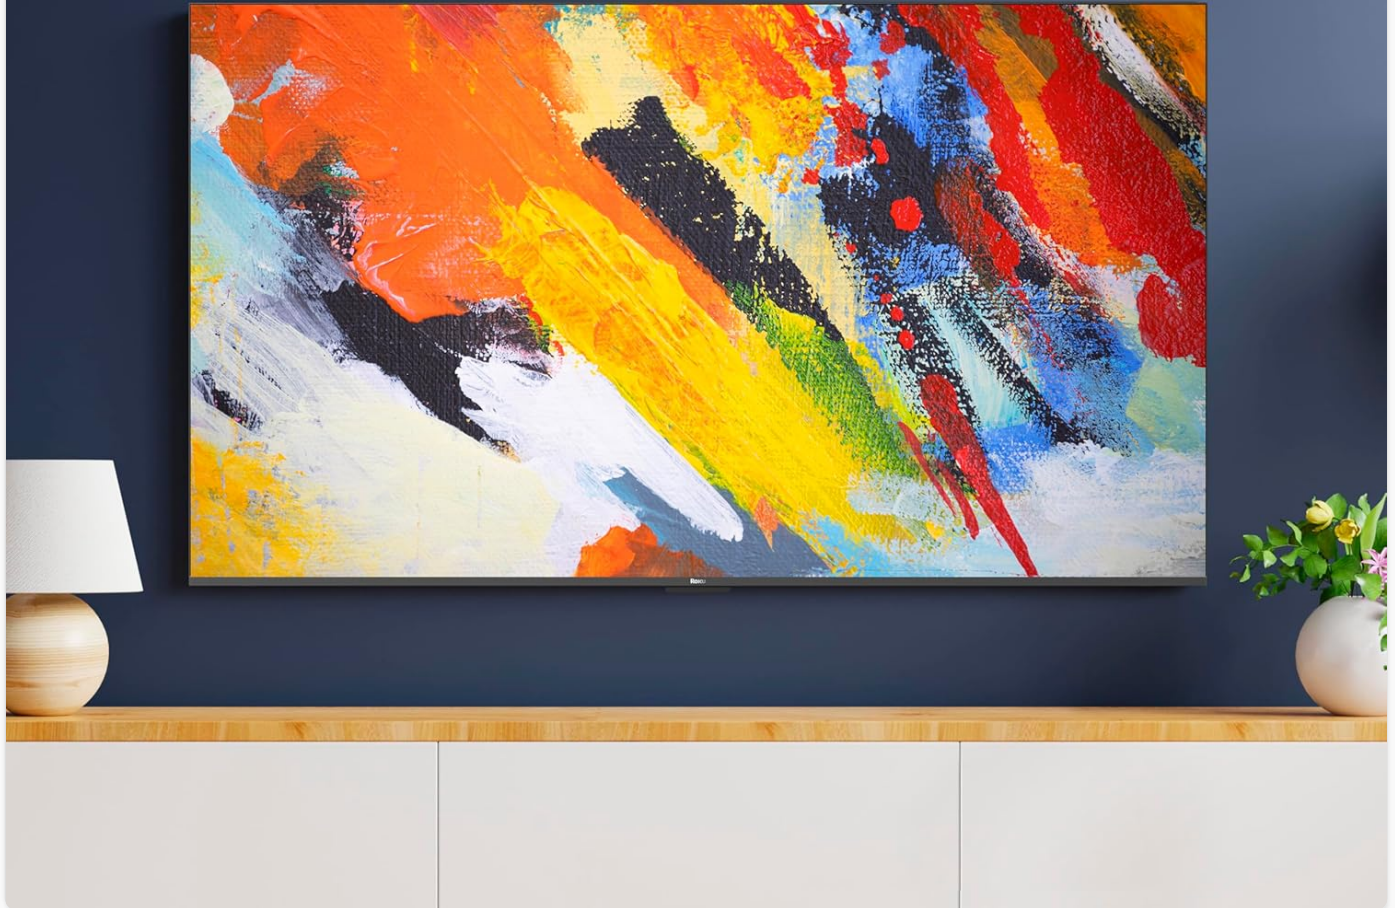 


Image: The Roku TV screen showcasing an abstract art piece as a digital backdrop, illustrating the "Backdrops" feature that allows the TV to function as a digital gallery.

MAINTENANCE

- **Cleaning the Screen:** Use a soft, lint-free cloth specifically designed for electronics. Do not use harsh chemicals or abrasive cleaners.
- **Cleaning the TV Body:** Wipe with a soft, dry cloth.
- **Ventilation:** Ensure proper airflow around the TV. Do not block ventilation openings.
- **Software Updates:** Your Roku TV will automatically download and install software updates when connected to the internet. Ensure your TV remains connected for optimal performance and new features.

TROUBLESHOOTING

Problem	Possible Solution
No Power	◦ Check if the power cord is securely plugged into both the TV and the wall outlet. ◦ Test the outlet with another device to ensure it has power.
No Picture/Sound	◦ Ensure the correct input source is selected on the TV. ◦ Check all cable connections to external devices. ◦ Verify volume is not muted or set too low.
Remote Not Responding	◦ Replace the batteries in the remote. ◦ Ensure there are no obstructions between the remote and the TV. ◦ Try re-pairing the remote if it's a voice remote (refer to Quick Start Guide).
Network Connection Issues	◦ Restart your Wi-Fi router and modem. ◦ Go to Settings > Network > Check connection on your TV to diagnose. ◦ Ensure the TV is within range of your Wi-Fi signal.

SPECIFICATIONS

Feature	Detail
Brand	Roku
Model Number	55R4A5R
Screen Size	55 Inches (140 cm diagonal)
Display Technology	LED
Resolution	4K (3840 x 2160)
Refresh Rate	60 Hz
HDR Support	HDR10+
Connectivity	Wi-Fi, USB, Ethernet, HDMI
Product Dimensions (DxWxH)	10.2"D x 48.5"W x 31"H
Item Weight	34 Pounds
Special Features	Bezel-Less Design, HDR10+, Voice Remote, Automatic Brightness

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the Quick Start Guide included with your product or visit the official Roku support website. You can also find additional resources and FAQs online.

Official User Guide (PDF): [Download PDF](#)

For further assistance, contact Roku Customer Support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question