



Manuals.plus /

› McbeAn /

› McbeAn Dust Box Instruction Manual for Deerma DX600, DX600S, DX700, DX700S Handheld Vacuum Cleaners

McbeAn Deerma DX600/DX600S/DX700/DX700S Compatible Dust Box

McbeAn Dust Box Instruction Manual

For Deerma DX600, DX600S, DX700, DX700S Handheld Vacuum Cleaners

1. INTRODUCTION

This manual provides essential instructions for the proper installation, operation, and maintenance of your McbeAn replacement dust box. This accessory is designed for compatibility with Deerma DX600, DX600S, DX700, and DX700S handheld vacuum cleaner models. Please read this manual thoroughly before use to ensure optimal performance and longevity of the product.

2. PRODUCT OVERVIEW

The McbeAn dust box is a replacement component for specific Deerma handheld vacuum cleaners, designed to collect dust and debris during operation. It is crafted from high-quality materials to ensure durability and a precise fit.

Key Features:

- Easy to install and remove.
- Made of high-quality, durable materials.
- Designed for perfect compatibility with Deerma DX600, DX600S, DX700, and DX700S models.
- Essential vacuum cleaner part for effective dust collection.



Figure 2.1: The McbeAn replacement dust box, showing its transparent body and attachment points. A yellow label with instructional diagrams is visible on the side.

3. SETUP AND INSTALLATION

Follow these steps to correctly install the replacement dust box into your Deerma handheld vacuum cleaner.

1. **Ensure Safety:** Before beginning, ensure your vacuum cleaner is turned off and unplugged from the power source to prevent accidental operation.
2. **Remove Old Dust Box:** Locate the release button or latch for the existing dust box on your Deerma vacuum cleaner. Press the button or unlatch it and carefully pull the old dust box away from the main body of the vacuum.
3. **Prepare New Dust Box:** Inspect the new McbeAn dust box for any damage or debris. Ensure the internal filter components are correctly seated.
4. **Install New Dust Box:** Align the new dust box with the corresponding slot on the vacuum cleaner body. Gently push the dust box into place until you hear a click, indicating it is securely latched. Refer to the diagrams on the product label for visual guidance on proper attachment and detachment.
5. **Verify Installation:** Lightly tug on the dust box to confirm it is firmly attached and will not detach during operation.



Figure 3.1: A closer view of the dust box, highlighting the attachment area and the yellow instructional label. The label typically illustrates how to correctly insert and remove the dust box.

4. OPERATING INSTRUCTIONS

Once the dust box is securely installed, your vacuum cleaner is ready for use. The dust box functions automatically to collect debris during vacuuming.

Emptying the Dust Box:

For optimal performance, empty the dust box regularly, ideally after each significant use or when the fill line is reached.

1. **Power Off:** Turn off and unplug the vacuum cleaner.
2. **Remove Dust Box:** Detach the dust box from the vacuum cleaner as described in the "Setup and Installation" section.
3. **Empty Contents:** Position the dust box over a waste bin. Locate the dust box's release mechanism (usually a button or latch at the bottom or side) and open it to release the collected dust and debris.
4. **Close and Reattach:** Close the dust box lid securely and reattach the dust box to the vacuum cleaner until it clicks into place.

5. MAINTENANCE

Regular cleaning of the dust box and its filter components is crucial for maintaining your vacuum cleaner's suction power and extending the life of the accessory.

Cleaning the Dust Box:

1. **Detach:** Remove the dust box from the vacuum cleaner.
2. **Disassemble (if applicable):** If your dust box has removable filter components (e.g., a mesh filter or HEPA filter), carefully remove them according to your vacuum cleaner's specific instructions.
3. **Rinse:** Rinse the dust box and non-electrical filter components under cool, running water until all dust and debris are removed. **Do not use hot water or harsh detergents.**
4. **Dry Thoroughly:** Allow all components to air dry completely for at least 24 hours before reassembling and reattaching to the vacuum cleaner. Ensure no moisture remains, as this can damage the vacuum cleaner or promote mold growth.
5. **Reassemble:** Once completely dry, reassemble the filter components into the dust box and reattach it to the vacuum cleaner.

Note: Refer to your original Deerma vacuum cleaner manual for specific filter cleaning or replacement schedules.

6. TROUBLESHOOTING

If you encounter issues with your McbeAn dust box, refer to the following common solutions:

- **Dust Box Not Fitting Securely:**
 - Ensure the dust box is correctly aligned with the vacuum cleaner's attachment points.
 - Check for any obstructions or debris preventing a proper seal.
 - Verify that the dust box is fully pushed in until it clicks into place.
- **Reduced Suction Power:**

- The dust box may be full and needs emptying.
- The internal filters may be clogged and require cleaning or replacement.
- Check for blockages in the vacuum cleaner's hose or nozzle.

- **Dust Leaking from Dust Box:**

- Ensure the dust box lid is securely closed after emptying.
- Check for cracks or damage to the dust box itself.
- Verify that the dust box is properly seated and sealed against the vacuum cleaner body.

If problems persist, consult the original Deerma vacuum cleaner manual or contact customer support for further assistance.

7. SPECIFICATIONS

Feature	Detail
Product Type	Replacement Dust Box
Brand	McbeAn
Compatibility	Deerma DX600, DX600S, DX700, DX700S Handheld Vacuum Cleaners
Package Dimensions	1.18 x 0.79 x 0.39 inches
Item Weight	1.76 ounces
Number of Pieces	1
Assembly Required	No (simple installation)
Batteries Required	No