

## AREYZIN BG400

# AREYZIN BG400 Body Hair Trimmer User Manual

Model: BG400 | Brand: AREYZIN

## INTRODUCTION

---

Thank you for choosing the AREYZIN BG400 Body Hair Trimmer. This versatile grooming kit is designed for efficient and comfortable hair removal across various body areas, including the bikini line, legs, arms, armpits, and nose. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.

## SAFETY INFORMATION

---

- Use with caution near eyes and sensitive areas.
- Do not use the device while it is charging.
- This product is not intended for use on infants.
- Always follow general safety guidelines for electric trimmers to prevent injury.
- Ensure the device is clean and free of debris before and after each use.
- Keep out of reach of children.

## PACKAGE CONTENTS

---

Verify that all items are present in your package:

- 1x AREYZIN Body Trimmer (BG400)
- 1x Beauty Travel Bag
- 1x User Manual
- 2x Replaceable Blade Heads (Wide Body Trimmer Blade, Narrow Hair Trimmer Blade)
- 1x Nose Hair Trimmer Blade
- 2x Length Guide Combs (3-6 mm, 9-12 mm)
- 1x Cleaning Brush
- 1x USB Charging Cable

# PACK LIST



Image: All components included in the AREYZIN BG400 package.

## PRODUCT OVERVIEW

The AREYZIN BG400 is a versatile 3-in-1 grooming tool featuring a durable ceramic and stainless steel blade system, an 8000 RPM copper motor for efficient trimming, and an IPX7 waterproof design for both wet and dry use. It includes multiple interchangeable heads and guide combs to cater to different grooming needs.



Image: Detailed view of the trimmer's internal components, highlighting the ceramic blade and copper motor.



Image: The AREYZIN BG400 trimmer showcasing its different heads for body hair, sideburns, and nose hair trimming.

## SETUP

---

### 1. Charging the Trimmer

Before first use, fully charge the trimmer. Connect the provided USB cable to the trimmer's charging port and plug the other end into a USB power source (e.g., computer, adapter, power bank, car charger). A full charge provides up to 90 minutes of battery life. The indicator light will show charging status.

# USB RECHARGEABLE BATTERY



Computer



Adapter



Power Bank



Car charger



2 Hour  
Charging



90 Mins  
Running



Remark: Adapter is not included.

Image: The trimmer connected to a USB power source for charging.

## 2. Attaching Blades and Guide Combs

The trimmer comes with interchangeable blade heads and guide combs for various trimming lengths and areas.

1. To attach a blade head: Align the desired blade head with the trimmer body and press it firmly until it clicks into place.
2. To remove a blade head: Gently pull the blade head away from the trimmer body.
3. To attach a guide comb: Slide the desired guide comb (3-6mm or 9-12mm) onto the body trimmer blade head until it securely snaps into place.



Image: Visual guide on how to replace the trimmer head by pressing and pulling.

Your browser does not support the video tag.

Video: Demonstrates the assembly and attachment of different trimmer heads and guide combs.

## OPERATING INSTRUCTIONS

### 1. General Trimming

After assembling the desired blade and comb, turn on the device by pressing the power button. Gently move the trimmer along the skin in the desired trimming direction. For best results, stretch your skin taut with your free hand and move the trimmer slowly with light pressure, against the direction of hair growth.

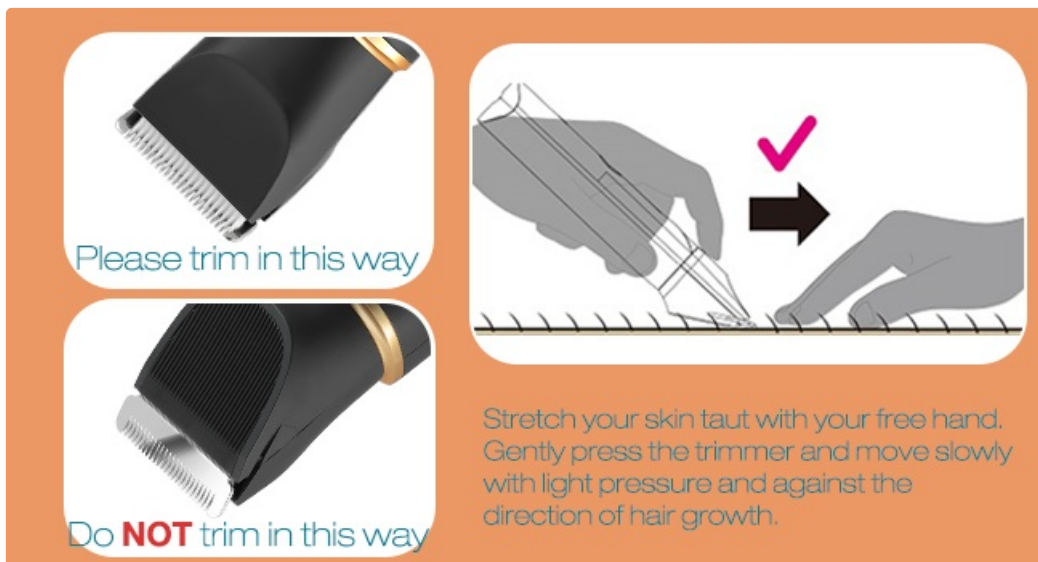


Image: Illustration showing the correct method for trimming, moving against hair growth.

### 2. Wet and Dry Use

The AREYZIN BG400 features an IPX7 waterproof design, allowing for safe use in the shower or bathtub. This makes your grooming routine more convenient and allows for easy cleaning. Ensure the charging port cover is securely closed when using in wet conditions.

# WASHABLE BLADE & WET USE



WATERPROOF  
SPLASHPROOF



Image: The trimmer demonstrating its waterproof capability under running water.



Image: The trimmer being used for both wet and dry shaving, highlighting its waterproof feature.

Your browser does not support the video tag.

Video: Demonstrates the trimmer's effectiveness for bikini area hair removal.

### 3. Travel Lock Setting

To prevent accidental activation during travel, the trimmer features a security travel lock. When the device is locked, the light will be red when you press the switch.

- To activate/deactivate: Long press the power switch for 3 seconds. The light will turn white when unlocked. Press it again to operate.

# TRAVEL LOCK SETTING FOR SAFER TRANSPORTATION

There will be a security lock setting when you get it. The light is **red** when you press the switch

Long press the switch for 3s, The light will turn to **white** and press it again, it will work on.



Image: Visual explanation of the travel lock setting and indicator light.

## MAINTENANCE

### 1. Cleaning the Trimmer

Thanks to its IPX7 waterproof rating, the trimmer heads can be rinsed directly under running water. Use the included cleaning brush to remove any trapped hairs from the blades. Ensure the trimmer is turned off before cleaning.

### 2. Blade Care

The trimmer uses ceramic and stainless steel blades designed for durability and sharpness. To maintain optimal performance, ensure blades are clean and free of hair and debris. Avoid dropping the trimmer or applying

excessive force to the blades.

Your browser does not support the video tag.

Video: Demonstrates the durability and heat resistance of the ceramic blades.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is low or depleted. Device is in travel lock mode.	Charge the trimmer fully. Long press the power button for 3 seconds to deactivate travel lock.
Poor trimming performance.	Blades are dull or clogged with hair. Incorrect trimming technique.	Clean the blade head thoroughly. Ensure you are trimming against the direction of hair growth.
Trimmer stops during use.	Battery is depleted.	Recharge the trimmer.

## SPECIFICATIONS

---

- **Model Name:** Body grooming set
- **Item Model Number:** BG400
- **Product Dimensions:** 5.8 x 1.3 x 1 inches
- **Item Weight:** 5.29 ounces (150 Grams)
- **Power Source:** Battery Powered (1 Lithium Ion battery included)
- **Battery Average Life:** 90 minutes
- **Charging Time:** Approximately 2 hours (from images)
- **Waterproof Rating:** IPX7
- **Blade Material:** Ceramic, Stainless Steel
- **Additional Features:** Ergonomic Design, Interchangeable Trimmer Heads, Portable, Rechargeable

## WARRANTY INFORMATION

---

The AREYZIN BG400 Body Hair Trimmer comes with a **1 Year Manufacturer Warranty**. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty card included in your package or contact customer support.

## SUPPORT

---

For any questions, concerns, or technical assistance regarding your AREYZIN BG400 Body Hair Trimmer, please contact AREYZIN customer support through the retailer's platform or visit the official AREYZIN website for contact information.