

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Wind River](#) /

› [Wind River The Mini 36" LED Ceiling Fan User Manual \(Model WR2008MB\)](#)

## Wind River WR2008MB

# Wind River The Mini 36" LED Ceiling Fan User Manual

Model: WR2008MB

## INTRODUCTION

Thank you for purchasing the Wind River The Mini 36" LED Ceiling Fan. This manual provides detailed instructions for the safe installation, operation, and maintenance of your new ceiling fan. Please read all instructions carefully before beginning installation and retain this manual for future reference.

## IMPORTANT SAFETY INFORMATION

**WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these instructions:**

- Read all instructions and safety information before installing your new fan. Review the accompanying diagrams thoroughly.
- All electrical connections must be made by a qualified electrician and conform to local codes, ordinances, and the National Electrical Code.
- Before installation, disconnect power by turning off the circuit breakers at the main fuse box.
- Ensure the installation site allows the fan blades to rotate without obstruction and provides a minimum clearance of 7 feet (2.1 meters) from the floor to the blade trailing edge.
- The outlet box and support structure must be securely mounted and capable of reliably supporting a minimum of 35 lbs (15.9 kg). Use only UL/ETL listed outlet boxes marked "FOR FAN SUPPORT."
- Do not operate the fan with damaged blades or any visible defects.
- Avoid placing objects in the path of the fan blades.
- Do not attempt to reverse the fan direction while the blades are in motion.

## PACKAGE CONTENTS

Carefully unpack your fan and inspect the contents. You should have the following items:

- Fan Motor Assembly

- Fan Blades (3)
- Mounting Bracket
- Downrod and Canopy
- LED Light Kit
- Remote Control with Wall Mount
- Hardware Pack (screws, washers, wire nuts)
- Instruction Manual

If any parts are missing or damaged, contact Wind River customer support immediately.

## TOOLS REQUIRED

---

The following tools are typically required for installation:

- Phillips Screwdriver
- Flathead Screwdriver
- Adjustable Wrench
- Pliers
- Wire Strippers
- Electrical Tape
- Step Ladder

## INSTALLATION INSTRUCTIONS

---

Before proceeding, ensure power is disconnected at the circuit breaker.

### Step 1: Mount the Hanging Bracket

1. Secure the mounting bracket to the ceiling outlet box using the screws provided with the outlet box. Ensure the bracket is firmly attached and can support the fan's weight.
2. Pass the household supply wires through the center opening of the mounting bracket.

### Step 2: Assemble the Downrod and Fan Motor

1. Insert the downrod through the canopy.
2. Feed the motor wires through the downrod.
3. Secure the downrod to the fan motor assembly with the provided pin and screw. Tighten all screws securely.

### Step 3: Hang the Fan

1. Carefully lift the fan assembly and place the downrod ball into the mounting bracket opening. Ensure the tab on the mounting bracket aligns with the slot on the downrod ball.

### Step 4: Make Electrical Connections

1. Connect the fan's ground wire (green or bare copper) to the household ground wire.
2. Connect the fan's neutral wire (white) to the household neutral wire (white).
3. Connect the fan's hot wire (black) to the household hot wire (black).

4. Secure all wire connections with wire nuts and electrical tape.
5. Tuck the wires neatly into the outlet box.

## Step 5: Attach Fan Blades

1. Attach each fan blade to the motor housing using the screws provided. Ensure all screws are tightened firmly.

## Step 6: Install the LED Light Kit

1. Connect the light kit wires to the corresponding wires from the fan motor assembly.
2. Secure the light kit to the bottom of the fan motor housing.
3. Attach the light diffuser/cover by twisting or snapping it into place.

## Step 7: Complete Installation

1. Slide the canopy up against the ceiling and secure it to the mounting bracket with the provided screws.
2. Restore power at the circuit breaker.



This image shows the complete Wind River The Mini 36-inch LED ceiling fan. It features a matte black motor housing and canopy, three dark wood-grain finish blades, and a circular integrated LED light at the bottom. The fan is designed for both indoor and outdoor use.

## OPERATING INSTRUCTIONS

Your Wind River The Mini ceiling fan is operated by a remote control.

### Remote Control Functions:

- **Fan ON/OFF:** Press to turn the fan on or off.
- **Fan Speed:** Buttons typically labeled 1, 2, 3, etc., or with fan icons, control the fan speed (low, medium, high).
- **Light ON/OFF:** Press to turn the integrated LED light on or off.

- **Light Dimming:** Press and hold the light button to cycle through brightness levels. Release at the desired brightness.
- **Reverse Function:** A button often labeled with a circular arrow or "REV" controls the fan's direction. This function is typically used to change airflow for seasonal comfort (downward airflow for cooling in summer, upward airflow for heat circulation in winter). Ensure the fan is off before changing direction.

**Note:** The remote control may require batteries (not included). Refer to the remote's battery compartment for the correct battery type and installation.

## MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the life of your ceiling fan.

- **Cleaning:** Periodically clean the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the finish.
- **Blade Cleaning:** Wipe fan blades with a soft cloth to remove dust.
- **Tighten Fasteners:** Annually, check all screws and fasteners on the fan and mounting hardware to ensure they are secure. Loose connections can cause noise or wobbling.
- **Light Kit:** The integrated LED light is designed for long life and typically does not require bulb replacement. If the light malfunctions, consult the troubleshooting section or contact customer support.

**CAUTION: Always turn off the power at the circuit breaker before cleaning or performing any maintenance on your fan.**

## TROUBLESHOOTING

---

If you experience issues with your ceiling fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan Loose wire connections Remote control not paired or faulty	Check circuit breaker and wall switch Verify all wire connections are secure (power off first) Ensure remote batteries are fresh and correctly inserted. Repair remote if necessary (refer to remote instructions).
Fan wobbles	Loose blade screws Unbalanced blades Loose mounting bracket	Tighten all blade screws Ensure blades are installed correctly and evenly. Use a balancing kit if necessary. Verify mounting bracket is securely fastened to the ceiling box.
Fan is noisy	Loose screws Motor hum Blades hitting an obstruction	Check and tighten all screws on the fan and mounting bracket. Some motor hum is normal, especially at lower speeds. Ensure all connections are secure. Ensure there are no obstructions in the fan's path.

Problem	Possible Cause	Solution
Light does not work	No power to the light Loose wire connections Faulty LED driver or light kit	Check light switch and circuit breaker. Verify light kit wire connections (power off first). Contact customer support if the LED light kit is faulty.
Remote control not working	Dead batteries Remote not paired Obstruction between remote and receiver	Replace batteries. Follow remote pairing instructions. Ensure clear line of sight to the fan's receiver.

If you are unable to resolve an issue after consulting this troubleshooting guide, please contact Wind River customer support.

## SPECIFICATIONS

---

Feature	Detail
Brand	Wind River
Model Number	WR2008MB
Color	Matte Black
Electric Fan Design	Ceiling Fan
Style	Modern
Product Dimensions	36"D x 36"W x 15"H
Room Type	Bedroom, Living Room
Wattage	14.00 Watts
Finish Type	Matte Black
Number of Blades	3
Air Flow Capacity	2804 Cubic Feet Per Minute
Blade Length	36 Inches
Voltage	120 Volts
Included Components	Light Kit, Remote Control
Indoor/Outdoor Usage	Indoor (Note: Product description states indoor/outdoor, but specifications list Indoor. Please verify with manufacturer for outdoor use.)

Feature	Detail
Control Method	Remote
Item Weight	13.77 pounds
UPC	845952025059

## WARRANTY AND CUSTOMER SUPPORT

---

For information regarding the product warranty, please refer to the documentation included with your purchase or visit the official Wind River website. Warranty terms and conditions may vary. If you require technical assistance, have questions about installation, or need to report a missing/damaged part, please contact Wind River customer support directly. Contact information can typically be found on the manufacturer's website or on the product packaging.

© 2023 Wind River. All rights reserved. Information subject to change without notice.