

manuals.plus /

› [AULCMEET](#) /

› [AULCMEET N9278UD Replacement Remote Control User Manual for Emerson/Sylvania/Funai TV VCR](#)

## AULCMEET N9278UD

# AULCMEET N9278UD Replacement Remote Control User Manual

Compatible with Emerson, Sylvania, and Funai TV VCR Units

## 1. INTRODUCTION

---

This manual provides instructions for the AULCMEET N9278UD replacement remote control. This remote is designed to function as a direct replacement for original remote controls used with various Emerson, Sylvania, and Funai TV VCR models. It requires no programming; simply insert batteries to begin use.



Image 1.1: Comparison of the N9278UD Replacement Remote with an Original Remote. This image illustrates the design and button layout of the replacement remote in comparison to an older, original unit, highlighting its compatibility and similar functionality.

### Key Features:

- Direct replacement for N9278UD compatible remotes.
- No setup or programming required.
- Compatible with various Emerson, Sylvania, and Funai TV VCR models.
- Ergonomic design for comfortable handling.

## 2. SETUP: BATTERY INSTALLATION

The AULCMEET N9278UD remote control requires two AAA alkaline batteries (not included) for operation. Follow these steps to install the batteries correctly:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery compartment cover downwards to open it.
3. Insert two new AAA alkaline batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image 2.1: Battery Installation. This image displays the open battery compartment of the remote control with two AAA batteries correctly inserted, indicating the proper orientation for installation.

**Important:** Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

### 3. OPERATING INSTRUCTIONS

---

Once batteries are installed, the remote control is ready for immediate use with your compatible Emerson, Sylvania, or Funai TV VCR. Point the remote directly at the device you wish to control.



Image 3.1: Front View of the N9278UD Remote Control. This image provides a clear view of the remote's front panel, detailing the layout and labels of all functional buttons.

### Button Functions:

- **POWER:** Turns the TV/VCR unit on or off.
- **DISPLAY:** Shows on-screen information such as channel number or time.
- **CH (Channel Up/Down):** Changes the channel up or down.
- **VOL (Volume Up/Down):** Adjusts the volume level.
- **MUTE:** Silences the audio output.
- **MENU:** Accesses the TV/VCR's on-screen menu.
- **CHANNEL RETURN:** Switches between the current and previously viewed channel.
- **GAME:** Activates game mode or switches to a game input (if supported by the device).
- **SLEEP:** Sets a timer for the device to automatically turn off.
- **Number Buttons (0-9, +100):** Directly select channels. Use +100 for channels 100 and above.
- **Directional Pad (Up, Down, Left, Right) & ENTER:** Navigates through menus and confirms selections.

## 4. MAINTENANCE

---

To ensure the longevity and optimal performance of your remote control, follow these maintenance

guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid using harsh chemicals or abrasive cleaners.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

## 5. TROUBLESHOOTING

---

If you experience issues with your AULCMEET N9278UD remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
  - Ensure batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new AAA alkaline batteries.
  - Check for any obstructions between the remote and the TV/VCR's infrared sensor.
  - Ensure you are within the effective range and pointing the remote directly at the device.
- **Certain Buttons Not Working:**
  - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be causing them to stick.
  - If only specific functions are not working, verify that your TV/VCR model supports those functions with a universal remote or replacement remote.
- **Intermittent Operation:**
  - This often indicates low battery power. Replace the batteries.
  - Ensure there are no strong light sources (like direct sunlight or fluorescent lights) interfering with the infrared signal.

## 6. PRODUCT SPECIFICATIONS

---

<b>Model Number</b>	N9278UD (Item Model Number: KariZ-MB1518-N9278UD-GAI)
<b>Brand</b>	AULCMEET
<b>Compatible Devices</b>	Emerson, Sylvania, Funai TV VCR units
<b>Connectivity Technology</b>	Infrared (IR)
<b>Power Source</b>	2 x AAA Alkaline Batteries (Not Included)
<b>Special Feature</b>	Ergonomic Design
<b>Item Weight</b>	1.27 ounces
<b>Package Dimensions</b>	4.13 x 1.57 x 0.6 inches

## 7. CUSTOMER SUPPORT

---

If you have any questions regarding the compatibility or operation of your AULCMEET N9278UD replacement remote control, please do not hesitate to contact our customer support team. We are committed to providing assistance and will respond to your inquiries within 24 hours.

For support, please refer to the contact information provided by your retailer or on the product packaging.