



Manuals.plus /

› AULCMEET /

› AULCMEET EDGS02 BRC52A61 Remote Control User Manual for Daikin Air Conditioners

## AULCMEET EDGS02 BRC52A61

# AULCMEET EDGS02 BRC52A61 Remote Control User Manual

For Daikin Air Conditioners

## 1. INTRODUCTION

This manual provides instructions for the proper use and maintenance of your AULCMEET EDGS02 BRC52A61 replacement remote control. This remote is designed to be compatible with various Daikin Air Conditioner models, offering a direct replacement for your original unit without requiring complex setup.

## 2. SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, high temperatures, or moisture.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations. Do not mix old and new batteries, or different types of batteries.

## 3. PRODUCT OVERVIEW

The AULCMEET EDGS02 BRC52A61 remote control features an ergonomic design with clearly labeled buttons for easy operation of your Daikin air conditioner. It includes a display screen to show current settings.



**Figure 1:** Front view of the remote control with display and buttons.



Figure 2: Angled view of the remote control, showing button layout.

## 4. SETUP

### 4.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.





**Figure 3:** Back view of the remote control with closed battery compartment.

3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.



**Figure 4:** Battery compartment open with batteries inserted.

4. Slide the battery compartment cover back into place until it clicks securely.

The remote control is now ready for use. No additional programming or pairing is required for compatible Daikin air conditioner models.

## 5. OPERATING INSTRUCTIONS

---

Point the remote control directly at the air conditioner's receiver when operating.

- **Power Button (Red):** Press to turn the air conditioner ON or OFF.
- **MODE Button:** Press to cycle through operating modes: Auto, Cool, Dry, Fan, Heat (if supported by your AC unit).
- **FAN Button:** Adjusts the fan speed. Press repeatedly to cycle through available speeds (e.g., Auto, Low, Medium, High).
- **Temperature Adjustment (Up/Down Arrows):** Use these buttons to increase or decrease the desired temperature setting.
- **SWING Button:** Activates or deactivates the automatic louver swing function.
- **TURBO Button:** Activates maximum cooling or heating capacity for rapid temperature change.
- **QUIET Button:** Reduces fan speed and compressor noise for quieter operation.
- **SLEEP Button:** Activates sleep mode, which adjusts temperature and fan speed for comfortable sleep and energy saving.
- **TIMER ON/OFF Buttons:** Set a specific time for the air conditioner to turn ON or OFF. Refer to your air conditioner's main manual for detailed timer programming.
- **CLOCK Button:** Sets the current time on the remote control's display.
- **CANCEL Button:** Used to cancel timer settings or other programmed functions.

## 6. MAINTENANCE

---

### 6.1 Battery Replacement

Replace batteries when the remote control's display becomes dim or when the remote control no longer operates the air conditioner reliably. Follow the battery installation steps in Section 4.1.

### 6.2 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the remote control's surface or internal components.

## 7. TROUBLESHOOTING

---

- **Remote control not working:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new AAA alkaline batteries.
  - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
  - Confirm the remote control is pointed directly at the air conditioner.
- **Air conditioner not responding to commands:**
  - Verify that the air conditioner is powered on and functioning.
  - Ensure the remote control model (EDGS02 BRC52A61) is compatible with your specific Daikin air conditioner model.

## 8. SPECIFICATIONS

---

Feature	Specification
Model	EDGS02 BRC52A61
Brand	AULCMEET
Power Source	2 x AAA Alkaline Batteries (Not Included)
Connectivity Technology	Infrared
Maximum Range	35 Meters
Weight	Approximately 2.15 Ounces (without batteries)

## 9. COMPATIBLE DAIKIN AIR CONDITIONER MODELS

This remote control is compatible with a wide range of Daikin air conditioner models, including but not limited to:

- ATXN50N, ATXN35N, ATXN60N, ATXB50C, ATXB60C
- RXN25L, RXN35L, RXN60L, RXN50L, RXN25M, RXN35M, RXN50M, RXK35A, RXN60M, RXK25A
- RXN35N, RXN25N, RXK60A, RXK50A, RXN50N, RXN60N, RXC25A, RXC35A, RXC50A, RXB50A, RXC60A, RXB60A, RXB60C, RXB50B, RXB60B, RXB50C
- ARXN50L, ARXN60L, ARXN35L, ARXN25L, ARXN50M, ARXN35M, ARXN25M, ARXN60M, ARXN25N, ARXN50N, ARXN35N, ARXN60N, ARXB50C, ARXB60C
- APGS02, APGS02-I, ECGS02, ECGS02-I
- RS20JEV1K, RS25JEV1K
- FTXN25L, FTXN35L, FTXN50L, FTXN60L, FTXN25M, FTXN35M, FTXN50M, FTXN60M, FTXK25A, FTXK50A, FTXK35A, FTXN35N, FTXK60A, FTXN25N, FTXN50N, FTXC25A, FTXN60N, FTXC60A, FTXC35A, FTXC50A, FTXB60A, FTXB50A, FTXB50B, FTXB60B, FTXB50C, FTXB60C
- ATXN25L, ATXN35L, ATXN50L, ATXN60L, ATXN25M, ATXN35M, ATXN50M, ATXN60M, ATXN25N

If you are unsure about compatibility, please refer to your air conditioner's original manual or contact customer support.

## 10. WARRANTY AND SUPPORT

This product is designed for reliable performance. For any questions regarding compatibility or operation, please contact the seller or manufacturer's customer support. Keep your purchase receipt for any warranty claims.