



Manuals.plus /

› Azkoeesy /

› Azkoeesy TV Stand Instruction Manual - Model WF304203204AAF

Azkoeesy WF304203204AAF

Azkoeesy TV Stand Instruction Manual

Model: WF304203204AAF | Brand: Azkoeesy

IMPORTANT SAFETY INFORMATION

Attention: This furniture must be assembled carefully to prevent injuries. Do not place heavy loads on the edges to avoid the risk of cuts. Ensure the furniture is stable before placing heavy objects to prevent the risk of tipping over. Always follow the assembly instructions precisely. Keep small parts away from children.

SETUP AND ASSEMBLY


The Azkoeesy TV Stand is designed for straightforward assembly. It includes numbered Allen tools and a step-by-step illustrated manual to guide you through the process. Assembly is estimated to take approximately 20 minutes with the Plug&Play system.







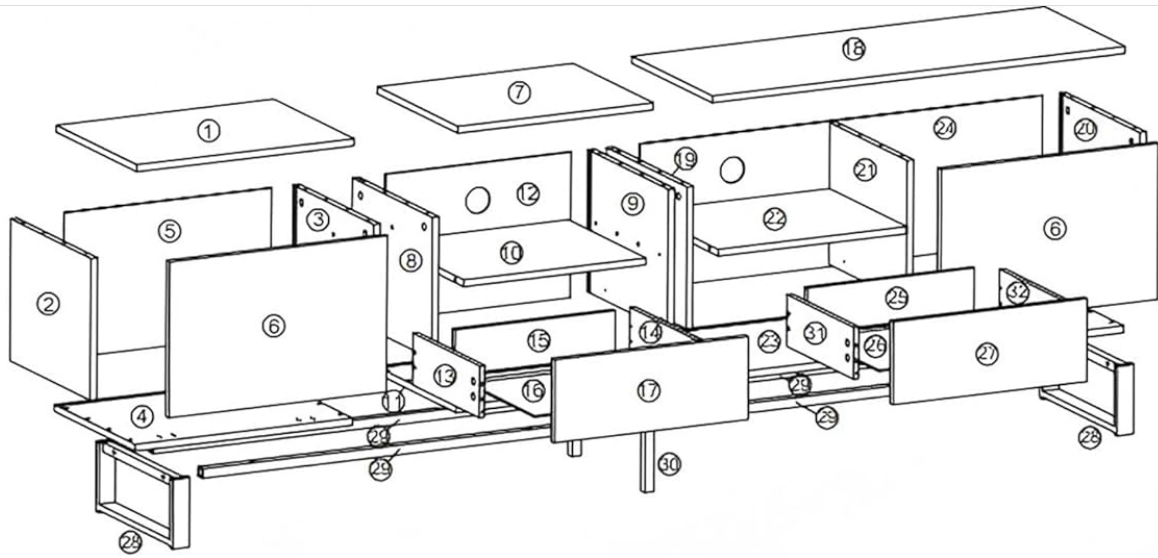


 








 
Before You Begin:

- Unpack all components and verify against the parts list provided in the manual.
- Ensure you have a clean, spacious area for assembly.
- Identify all hardware using the numbered labels.

Assembly Steps Overview:

1. Attach the metal legs to the base panels using the provided screws.
2. Assemble the main frame of the TV stand, connecting side panels to the base and top.
3. Install the drawer slides into the designated compartments.
4. Assemble the drawers and cabinets, then insert them into the frame.
5. Secure any back panels or additional shelves.



A	×30	B	×22	C	×8	D	×36	E	×4
									
Ø6×35mm		Ø15×12mm		Ø15×10mm		Ø8×30mm		M4×17mm	
F	×4	G	×4	H	×8	I	×40	J	×8
									
M6×40mm		M6×15mm		M6×30mm		Ø3.5×14mm		Ø4×35mm	
K	×14	L	×1	M	×2	N	×4	CL	×2
									
Ø7×40mm				M4×55mm					
DL	×2	CR	×2	DR	×2	S	×2		
									
						M6×25mm			

2/14

Figure 1: Exploded view of the TV stand components and hardware list. This diagram illustrates all parts and fasteners required for assembly, labeled for easy identification.



Figure 2: View of the TV stand with drawers and cabinet doors open, showcasing the internal storage compartments and drawer runners.



Figure 3: Detailed view of a cabinet hinge, demonstrating its attachment to the cabinet door and frame.



Figure 4: Close-up of a drawer runner, highlighting the smooth bearing guides for easy drawer operation.

OPERATING INSTRUCTIONS

The Azkoeesy TV Stand is designed to accommodate televisions from 32" to 65" and provides ample storage for your multimedia devices and accessories.

Storage Compartments:

- **Cabinets:** The two large capacity cabinets are ideal for storing larger items such as gaming consoles, soundbars, or media collections.
- **Drawers:** The two multifunction drawers feature 30 cm (12") dividers, perfect for organizing smaller items like remote controls, tablets, video games, and cables. The silent bearing guides ensure smooth and quiet operation.

Weight Capacity:

The TV stand is constructed to withstand a load of up to 50 kg (approximately 110 lbs). Distribute weight evenly across the top surface and within the storage compartments to maintain stability and prevent damage.



Figure 5: The Azkoeesy TV stand integrated into a living room, demonstrating its use with a television and various decorative items.

MAINTENANCE

Proper care will ensure the longevity and appearance of your Azkoeesy TV Stand.

Cleaning:

- For general cleaning, wipe surfaces with a soft, damp cloth.
- Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- Immediately wipe up any spills to prevent staining.

Care:

- Avoid direct sunlight and extreme temperature changes to prevent warping or fading.
- Use coasters or protective pads under hot or wet items placed on the surface.
- Periodically check all fasteners and tighten if necessary to maintain structural integrity.

TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common solutions:

Wobbly Stand:

- Ensure all screws and bolts are securely tightened.
- Check that the stand is placed on a level surface. Adjust the feet if applicable.

Drawers Not Closing Smoothly:

- Verify that the drawer slides are correctly installed and aligned.
- Check for any obstructions within the drawer or on the slides.
- Ensure the drawer is not overloaded beyond its capacity.

Missing Parts:

- Carefully re-check all packaging materials.
- Refer to the parts list in your assembly manual and contact customer support if parts are genuinely missing.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Azkoeesy
Model Number	WF304203204AAF
Product Dimensions (L x W x H)	190 x 38 x 48 cm (74.8 x 15 x 18.9 inches)
Product Weight	36 kg (79.4 lbs)
Color	Wood and Black
Material	Wood composite, Metal (legs)
Load Capacity	Up to 50 kg (110 lbs)
Compatible Devices	Television (32" to 65" recommended)
Storage Features	2 Cabinets, 2 Drawers with 30 cm dividers



Figure 6: Dimensional diagram of the Azkoeesy TV stand, showing overall length, width, height, and internal compartment measurements.

WARRANTY INFORMATION

This product comes with a standard manufacturer's warranty covering defects in materials and workmanship. Please retain your proof of purchase for any warranty claims. For specific details regarding the warranty period and terms, refer to the documentation included with your purchase or contact Azkoeesy customer support.

CUSTOMER SUPPORT

For further assistance, missing parts, or technical support, please contact Azkoeesy customer service. Refer to the contact information provided on the product packaging or the official Azkoeesy website. When contacting support, please have your model number (WF304203204AAF) and proof of purchase readily available.