

## MOJAY M-6713

# MOJAY M-6713 Modern Dining Chairs Instruction Manual

Model: M-6713

## 1. PRODUCT OVERVIEW

---

The MOJAY M-6713 Modern Dining Chairs are designed for comfort and style, featuring durable PU leather upholstery and sturdy solid wood legs. This manual provides essential information for assembly, proper use, maintenance, and troubleshooting to ensure the longevity and optimal performance of your chairs.



Image 1.1: MOJAY M-6713 Modern Dining Chairs in a room setting.

## Product Features

- **Mid-Century Design:** Sleek PU leather upholstery with elegant wooden legs.
- **Plush Cushioned Seat:** Soft, padded seat for optimal support and comfort.
- **Premium PU Leather:** Durable, easy to clean, and skin-friendly material.
- **Sturdy Wooden Legs:** Provides stability and durability, with non-slip foot pads to prevent floor scratches.
- **Button-Tufted Details:** Enhances the modern design and aesthetic.

Your browser does not support the video tag.

Video 1.1: A detailed showcase of the MOJAY Modern PU Leather Wingback Dining Chairs, highlighting their design, upholstery, and overall appearance in a room setting.

## 2. SETUP AND ASSEMBLY

Your MOJAY M-6713 Dining Chairs require minimal assembly. Please follow these instructions carefully to ensure proper setup.

### 2.1 Included Components

- Chair Seat with Backrest (1 per chair)
- Wooden Legs (4 per chair)
- Assembly Hardware (screws, washers, Allen wrench)
- Instruction Manual

## 2.2 Assembly Steps

1. Carefully unpack all components and verify against the included components list. Place all parts on a soft, clean surface to prevent scratches.
2. Identify the four wooden legs. Each leg is designed to fit into a specific corner of the chair base.
3. Align each wooden leg with the pre-drilled holes on the underside of the chair seat. Ensure the leg is oriented correctly.
4. Insert the provided screws through the holes in the chair base and into the top of each leg. Hand-tighten all screws initially.
5. Once all four legs are in place, use the Allen wrench to fully tighten all screws. Do not overtighten.
6. Gently place the assembled chair upright on a level surface. Check for stability. If the chair wobbles, loosen the leg screws slightly, press down on the seat to level it, and then re-tighten the screws.



Image 2.1: Visual guide for attaching chair legs.

## 3. OPERATING INSTRUCTIONS

---

The MOJAY M-6713 Dining Chairs are designed for indoor use in dining rooms, kitchens, or living areas.

- **Intended Use:** These chairs are designed for seating purposes in indoor environments.
- **Weight Capacity:** The maximum recommended weight for each chair is 265 pounds (120 kg). Do not exceed this limit to prevent damage or injury.
- **Placement:** Place chairs on a flat, stable surface. The non-slip foot pads are designed for hard floors to prevent scratches and provide stability.
- **Movement:** When moving the chairs, lift them rather than dragging them to protect both the chair legs and your flooring.



## 4. MAINTENANCE AND CARE

---

Proper care will help maintain the appearance and extend the life of your MOJAY dining chairs.

- **Cleaning Upholstery:** The PU leather upholstery is easy to clean. Wipe spills immediately with a soft, damp cloth. For general cleaning, use a mild soap solution and a soft cloth, then wipe dry. Avoid harsh chemicals or abrasive cleaners.
- **Cleaning Wooden Legs:** Wipe wooden legs with a dry or slightly damp cloth. Avoid excessive moisture.
- **Regular Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause the PU leather to fade or crack. Position chairs away from direct sunlight or use window coverings.
- **Avoid Sharp Objects:** Prevent contact with sharp objects to avoid puncturing or scratching the upholstery.



Image 4.1: Detail of the PU leather fabric.



Image 4.2: High-density sponge cushioning for comfort.

## 5. TROUBLESHOOTING

---

If you encounter any issues with your MOJAY dining chairs, refer to the following common solutions:

- **Wobbly Chair:** If the chair feels unstable, check that all leg screws are securely tightened. Loosen them slightly, press down on the seat to ensure all legs are evenly touching the floor, then re-tighten.
- **Scratches on Floor:** Ensure the non-slip foot pads are intact and properly attached to the bottom of each leg. Replace if damaged.
- **Stains on Upholstery:** Refer to the cleaning instructions in Section 4. Act quickly on spills. For stubborn stains, a specialized PU leather cleaner may be used, but always test on an inconspicuous area first.
- **Loose Screws:** Periodically check and tighten all assembly screws to maintain stability and safety.

## 6. SPECIFICATIONS

---

Detailed specifications for the MOJAY M-6713 Modern Dining Chairs:



Image 6.1: Product dimensions and specifications.

Feature	Detail
Brand	MOJAY
Model Name	M-6713
Color	Dark Blue
Product Dimensions (Overall)	21.5"W x 22.5"D x 31.5"H
Seat Width	19.5"
Seat Depth	16.5"
Seat Height	18.5"
Backrest Height	13"
Weight Capacity	265 lbs
Material	PU Leather, Solid Wood Legs
Back Style	Wing Back
Special Feature	Upholstered Leather
Product Care Instructions	Wipe Clean
Indoor/Outdoor Usage	Indoor
Item Weight (per chair)	Approximately 20.9 lbs (41.8 lbs for 2 chairs)

## 7. WARRANTY AND SUPPORT

---

For warranty information or if you require further assistance, please contact MOJAY customer support through the retailer where the product was purchased. Please have your model number (M-6713) and purchase date available when contacting support.