



Manuals.plus /

› Sangcon /

› Sangcon 3-in-1 Immersion Blender HB836 Instruction Manual

Sangcon B0CCDTG752

Sangcon 3-in-1 Immersion Blender Instruction Manual

Model: B0CCDTG752

INTRODUCTION

Thank you for choosing the Sangcon 3-in-1 Immersion Blender. This versatile kitchen appliance is designed to simplify your food preparation with its powerful 400-watt motor and multiple attachments. Please read this manual carefully before use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the appliance from the power supply before assembling, disassembling, or cleaning.
- Do not immerse the motor unit in water or other liquids.
- Keep hands, hair, and clothing, as well as spatulas and other utensils, away from moving blades during operation to prevent injury.
- Avoid contact with moving parts.
- Do not operate the blender with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.
- Use only attachments recommended or sold by the manufacturer.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
- Blades are sharp. Handle with care.

PACKAGE CONTENTS

Your Sangcon 3-in-1 Immersion Blender package includes the following items:

- Immersion Blender Motor Unit

- Blending Arm (Stainless Steel)
- Whisk Attachment
- Milk Frother Attachment
- User Manual



Image: The Sangcon 3-in-1 Immersion Blender showing the main unit, blending arm, whisk, and milk frother attachments, along with their approximate dimensions.

SETUP AND ASSEMBLY

Before first use, ensure all parts are clean. Wash all detachable parts (blending arm, whisk, frother) in warm soapy water, rinse thoroughly, and dry. The motor unit should be wiped with a damp cloth.

Attaching the Blending Arm:

1. Align the blending arm with the motor unit.
2. Twist the blending arm clockwise until it locks securely into place. You should hear a click.

Attaching the Whisk Attachment:

1. First, attach the red cap to the motor unit by twisting it clockwise until it clicks.
2. Insert the whisk into the opening of the red cap and twist until it is secure.

Attaching the Milk Frother Attachment:

1. First, attach the red cap to the motor unit by twisting it clockwise until it clicks.
2. Insert the milk frother into the opening of the red cap and twist until it is secure.



Image: Visual guide demonstrating how to install and remove the blending arm from the main motor unit by twisting.

OPERATING INSTRUCTIONS

The Sangcon Immersion Blender features a powerful 400-watt motor and dual-speed control for various blending and mixing tasks.

Speed Control:

The blender has two speed buttons: a low-speed control and a high-speed control. Press the desired button to activate the blender. Release the button to stop operation.



Image: The ergonomic handle of the blender with clearly marked low-speed and high-speed control buttons.

Using the Blending Arm:

1. Attach the blending arm to the motor unit.
2. Plug the blender into a power outlet.
3. Immerse the blending arm into the ingredients you wish to blend (e.g., soups, sauces, smoothies, milkshakes). Ensure the blade guard is fully submerged to prevent splashing.
4. Press and hold the desired speed button (Low or High) to begin blending.
5. Move the blender up and down gently to ensure even blending.
6. Release the button to stop. Unplug the appliance before removing the blending arm.



Image: The immersion blender being used to blend soup in a large pot, demonstrating its direct-in-pot blending capability.



Powerful 400-Watt Motor

Smoothies & sauces in seconds

Image: The immersion blender blending fruits and vegetables in a tall cup, illustrating its use for smoothies and sauces.

Your browser does not support the video tag.

Video: An official demonstration of the Sangcon 3-in-1 Immersion Blender in action, showcasing its blending capabilities for various ingredients.

Using the Whisk Attachment:

1. Attach the whisk attachment to the motor unit as described in the Setup section.
2. Plug the blender into a power outlet.
3. Place the whisk into the ingredients you wish to mix (e.g., eggs, creams, batters).
4. Press and hold the desired speed button (Low or High) to begin whisking.
5. Move the whisk gently to incorporate ingredients.

6. Release the button to stop. Unplug the appliance before removing the whisk.



Image: The whisk attachment of the immersion blender being used to mix eggs in a clear bowl, suitable for preparing batters or creams.

Your browser does not support the video tag.

Video: A short demonstration showing the whisk attachment quickly beating eggs and frothing milk, highlighting its efficiency.

Using the Milk Frother Attachment:

1. Attach the milk frother attachment to the motor unit as described in the Setup section.
2. Plug the blender into a power outlet.
3. Immerse the frother into milk or other liquids you wish to froth.

4. Press and hold the desired speed button (Low or High) to begin frothing.
5. Move the frother gently to create foam.
6. Release the button to stop. Unplug the appliance before removing the frother.



Milk Frother

Creating creamy and frothy milk

Image: The milk frother attachment being used to create creamy, frothy milk for a beverage, demonstrating its specialized function.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your immersion blender.

- **Always unplug the appliance before cleaning.**
- The blending arm, whisk, and milk frother attachments are dishwasher safe.

- For manual cleaning, wash detachable parts in warm, soapy water. Rinse thoroughly and dry immediately.
- Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
- Do not use abrasive cleaning agents or scouring pads, as these may scratch the surfaces.

Easy to Clean & Dishwasher Safe



Image: The blending arm being cleaned under running water, emphasizing its dishwasher-safe and easy-to-clean design.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--|--|--|
| Blender does not turn on. | Not plugged in; power outlet not working; attachment not securely connected. | Ensure the blender is properly plugged into a working outlet. Check that the attachment is securely locked into the motor unit. |
| Motor stops during operation. | Overheating due to continuous use or processing overly thick mixtures. | Unplug the blender and let it cool down for at least 10-15 minutes. Reduce the amount of ingredients or add more liquid to thick mixtures. |
| Ingredients are not blending smoothly. | Insufficient liquid; ingredients are too large; not moving the blender enough. | Add more liquid. Cut ingredients into smaller pieces. Move the blending arm up and down and around the container. |
| Excessive splashing. | Blending arm not fully submerged; container too full. | Ensure the blade guard is fully submerged before starting. Do not overfill the container. |

SPECIFICATIONS

- **Brand:** Sangcon
- **Model:** B0CCDTG752
- **Power:** 400 Watts
- **Voltage:** 120 Volts (AC)
- **Material:** Stainless Steel (blades and blending arm)
- **Special Features:** Multiple Attachments (Blending Arm, Whisk, Milk Frother), Dual-Speed Control, Portable
- **Product Dimensions:** 10"D x 8"W x 2.5"H (overall, approximate)
- **Dishwasher Safe:** Yes (attachments only)

WARRANTY AND SUPPORT

The Sangcon Immersion Blender comes with a **2-Year Limited Warranty**. This warranty covers defects in materials and workmanship under normal use. For warranty claims, technical support, or any inquiries, please contact Sangcon customer service.

- **Quick Assistance Guaranteed**
- **1-Year Free Replacements**
- **30-Day Hassle-Free Returns**
- **Lifetime Support for All Inquiries**

**PRESS TO ENJOY
FRESH JUICE**



Image: Overview of Sangcon's customer support commitments.