



Manuals.plus /

› **Le Toy Van /**

› Le Toy Van Wooden Stand Alone Fridge Freezer Set Instruction Manual TV348

Le Toy Van TV348

Le Toy Van Wooden Stand Alone Fridge Freezer Set Instruction Manual

Model: TV348

INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your Le Toy Van Wooden Stand Alone Fridge Freezer Set. Designed for imaginative play, this toy encourages creative development and social skills. Please read all instructions carefully before use.

SAFETY INFORMATION

This product is a toy. Remove all packaging and retain for future reference. Inspect the toy before each use. Discard the toy at the first indication of damage or fragility. Adult supervision is recommended during play. For cleaning, wipe thoroughly before and after use. Keep away from fire. Product colors and contents may vary from those shown.

WHAT'S IN THE BOX

Verify that all components are present before beginning assembly.

- Wooden Fridge Freezer unit
- 2 Ice Creams
- Ice Cube Tray
- Egg Tray
- Milk Bottle
- Smoothie Bottle
- Two Magnets

9

ACCESSORIES



Image: Included accessories for the Le Toy Van Wooden Fridge Freezer Set.

SETUP AND ASSEMBLY

The Le Toy Van Wooden Stand Alone Fridge Freezer Set requires assembly. Follow the manufacturer's provided assembly instructions carefully. Ensure all screws and fittings are securely tightened to prevent instability during play. If you encounter difficulties with hinge alignment or screw fitting, refer to the manufacturer's support resources.





LE TOY VAN

Image: Front view of the assembled Wooden Fridge Freezer.



Image: Interior view of the Wooden Fridge Freezer with doors open.

OPERATING INSTRUCTIONS

This toy fridge freezer is designed for imaginative play. Its features mimic a real appliance to enhance the play experience.

- 1. Opening and Closing Doors:** Gently pull the wooden handles to open the top freezer compartment and the bottom fridge compartment. Ensure doors are closed after use to keep play food 'fresh'.
- 2. Using the Water Dispenser:** The front of the fridge features a simulated water dispenser. Children can press the button to pretend to dispense water.
- 3. Adjusting Temperature Control:** Inside the freezer compartment, a rotating dial simulates temperature adjustment. Turn the dial to set the desired 'temperature' for play.
- 4. Storing Accessories:** Use the included shelves, egg tray, and door compartments to organize the play food accessories. The magnets can be placed on the fridge door.

*SMOOTHIE &
MILK BOTTLE HOLDER*



2 x FREEZER MAGNETS



DRINKS DISPENSER



TEMPERATURE CONTROL



Image: Detailed view of the fridge freezer's interactive features.

Your browser does not support the video tag.

Video: A child interacting with the Le Toy Van Fridge Freezer, demonstrating opening doors, placing items, and using the dispenser. This video highlights the toy's play features.

Your browser does not support the video tag.

Video: A detailed demonstration of the Le Toy Van Fridge Freezer's features, including placing milk bottles, ice cube tray, and adjusting the temperature dial. This video provides a closer look at the toy's functionality.

MAINTENANCE

To ensure the longevity of your Le Toy Van Wooden Stand Alone Fridge Freezer Set, follow these maintenance guidelines:

- **Cleaning:** Wipe clean thoroughly before and after each use with a damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the wood or paint.
- **Storage:** Store the toy in a dry environment away from direct sunlight or extreme temperatures to prevent warping or fading.

- **Inspection:** Periodically check all parts for wear and tear, especially hinges and connections. Tighten any loose screws as needed.

TROUBLESHOOTING

If you encounter any issues with your Le Toy Van Wooden Stand Alone Fridge Freezer Set, consider the following:

- **Doors Not Closing Properly:** Check if any internal items are obstructing the door. Ensure hinges are securely attached and screws are tightened. If the wood around the hinges appears damaged, contact customer support.
- **Loose Parts:** Regularly inspect and tighten any loose screws or connections. Do not overtighten.
- **Missing Accessories:** Refer to the 'What's in the Box' section to confirm all original accessories are present. Contact customer support for assistance with missing components.

SPECIFICATIONS

Product Dimensions	13.8 x 13 x 31.9 inches (350mm x 330mm x 810mm)
Item Weight	33 pounds
Model Number	TV348
Manufacturer Recommended Age	36 months - 10 years
Material	Sustainable Wood

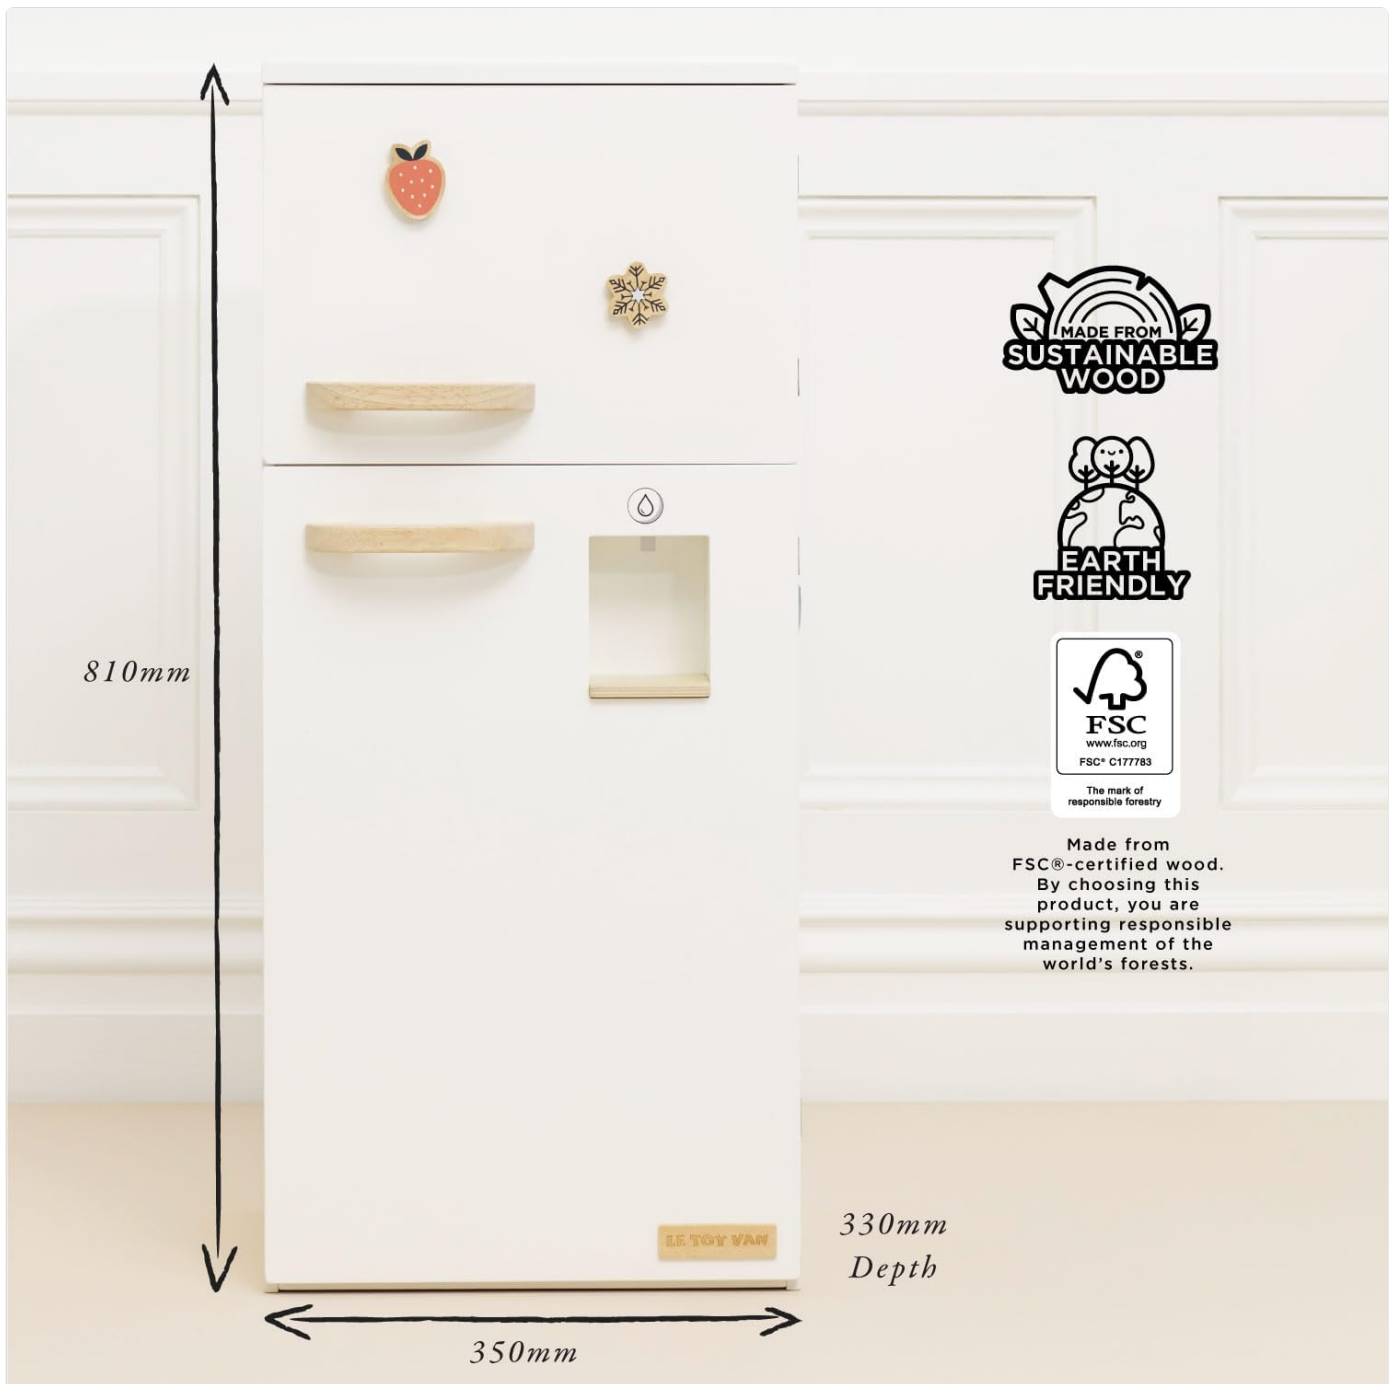


Image: Product dimensions and sustainability information.

WARRANTY AND SUPPORT

For warranty information or product support, please contact Le Toy Van customer service directly. Details can typically be found on the product packaging or the official Le Toy Van website. Please have your model number (TV348) and purchase details available when contacting support.