

[Manuals.plus](#) /

› [Le Toy Van](#) /

› Le Toy Van Large Wooden Kitchen Furniture Set Instruction Manual

## Le Toy Van TV347

# Le Toy Van Large Wooden Kitchen Furniture Set Instruction Manual

Model: TV347

## INTRODUCTION

Thank you for choosing the Le Toy Van Large Wooden Kitchen Furniture Set. This comprehensive manual provides essential information for the safe assembly, operation, and maintenance of your new play kitchen. Designed for children aged 36 months to 10 years, this set encourages interactive and imaginative play. Please read all instructions carefully before assembly and retain this manual for future reference.

## SAFETY INFORMATION

This product is a toy. Adult supervision is recommended during play. Please observe the following safety guidelines:

- Remove all packaging materials before giving the toy to a child. Keep packaging for future reference.
- Inspect the toy for any damage or fragility before each use. Discontinue use immediately if any damage is found.
- Keep the toy away from open flames or heat sources.
- Colors and contents may vary slightly from those shown.
- This product contains small parts before assembly and is not suitable for children under 36 months due to choking hazards.

## WHAT'S IN THE BOX

Please verify that all components are present before beginning assembly:

- Kitchen unit
- Colander
- Tea-towel
- Salt and pepper pots
- Spatula

- Assembly hardware (screws, dowels, etc.)
- Assembly instructions



Figure 1: Included Accessories

## SETUP AND ASSEMBLY

Assembly of the Le Toy Van Large Wooden Kitchen Furniture Set requires adult supervision and careful attention to detail. Please follow the included step-by-step assembly instructions provided in the product packaging. It is recommended to lay out all parts and hardware before starting.

1. **Unpack Components:** Carefully remove all parts from the packaging. Identify each piece and compare it against the parts list in the separate assembly guide.
2. **Organize Hardware:** Separate and identify all screws, dowels, and other hardware.
3. **Follow Step-by-Step Guide:** Refer to the detailed assembly instructions provided with your product. Ensure each step is completed accurately before proceeding to the next.

4. **Secure Connections:** Tighten all screws firmly, but do not overtighten to avoid damaging the wood.
5. **Final Check:** Once assembled, ensure the kitchen unit is stable and all components are securely attached.

*Note: Some users have reported challenges with identifying parts due to labeling. We recommend carefully matching each piece to the diagrams in the assembly guide before beginning.*



Figure 2: Assembled Kitchen Unit

## OPERATING INSTRUCTIONS

This play kitchen is designed for imaginative role-play. Here's how to interact with its various features:



Figure 3: Key Features of the Play Kitchen

- **Washing Up Sink:** The integrated sink allows for pretend dishwashing. Use the included colander for draining.
- **Modern Microwave:** The microwave features a door that opens and closes, and interactive buttons for setting pretend cooking times.
- **Oven & Hob:** The oven door opens to reveal storage space. The hob features rotating knobs for pretend cooking. Place pots and pans (sold separately) on the hob.
- **Washing Machine:** The washing machine door opens and closes, allowing children to load and unload pretend laundry.
- **Storage Drawer:** A pull-out drawer provides additional storage for play food or accessories.
- **Accessories:** Utilize the included spatula, salt and pepper pots, and tea towel to enhance the play experience.

Your browser does not support the video tag.

Video 1: Lifestyle video demonstrating children interacting with the Le Toy Van kitchen, showing various features in use.

Your browser does not support the video tag.

Video 2: Short video showcasing the Family Size Wooden Play Kitchen, highlighting its features and encouraging imaginative play.

## MAINTENANCE AND CARE

To ensure the longevity of your Le Toy Van Wooden Kitchen, follow these care instructions:

- **Cleaning:** Wipe clean thoroughly before and after use with a damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the kitchen in a dry environment, away from direct sunlight or extreme temperatures, to prevent warping or fading of the wood.
- **Inspection:** Regularly check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Wood Care:** As a wooden toy, minor variations in grain and color are natural. Avoid prolonged exposure to moisture.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Missing parts upon unboxing.	Packaging error or oversight during inspection.	Carefully re-check all packaging materials. If parts are still missing, contact Le Toy Van customer support with your purchase details.
Difficulty with assembly.	Unclear instructions or difficulty identifying parts.	Review the assembly guide diagrams carefully. Ensure all parts are correctly oriented before securing. Adult assistance is crucial.
Kitchen unit feels unstable.	Loose connections or uneven placement.	Check and tighten all screws. Ensure the unit is placed on a flat, level surface.

## SPECIFICATIONS

Feature	Detail
Product Dimensions	13.78 x 33.07 x 31.89 inches (350mm Depth x 840mm Width x 810mm Height)
Item Weight	39.6 pounds
Model Number	TV347
Recommended Age	36 months - 10 years
Material	Sustainable Wood
Manufacturer	Le Toy Van

# COOK UP WONDER WITH THIS EXQUISITE PLAY KITCHEN

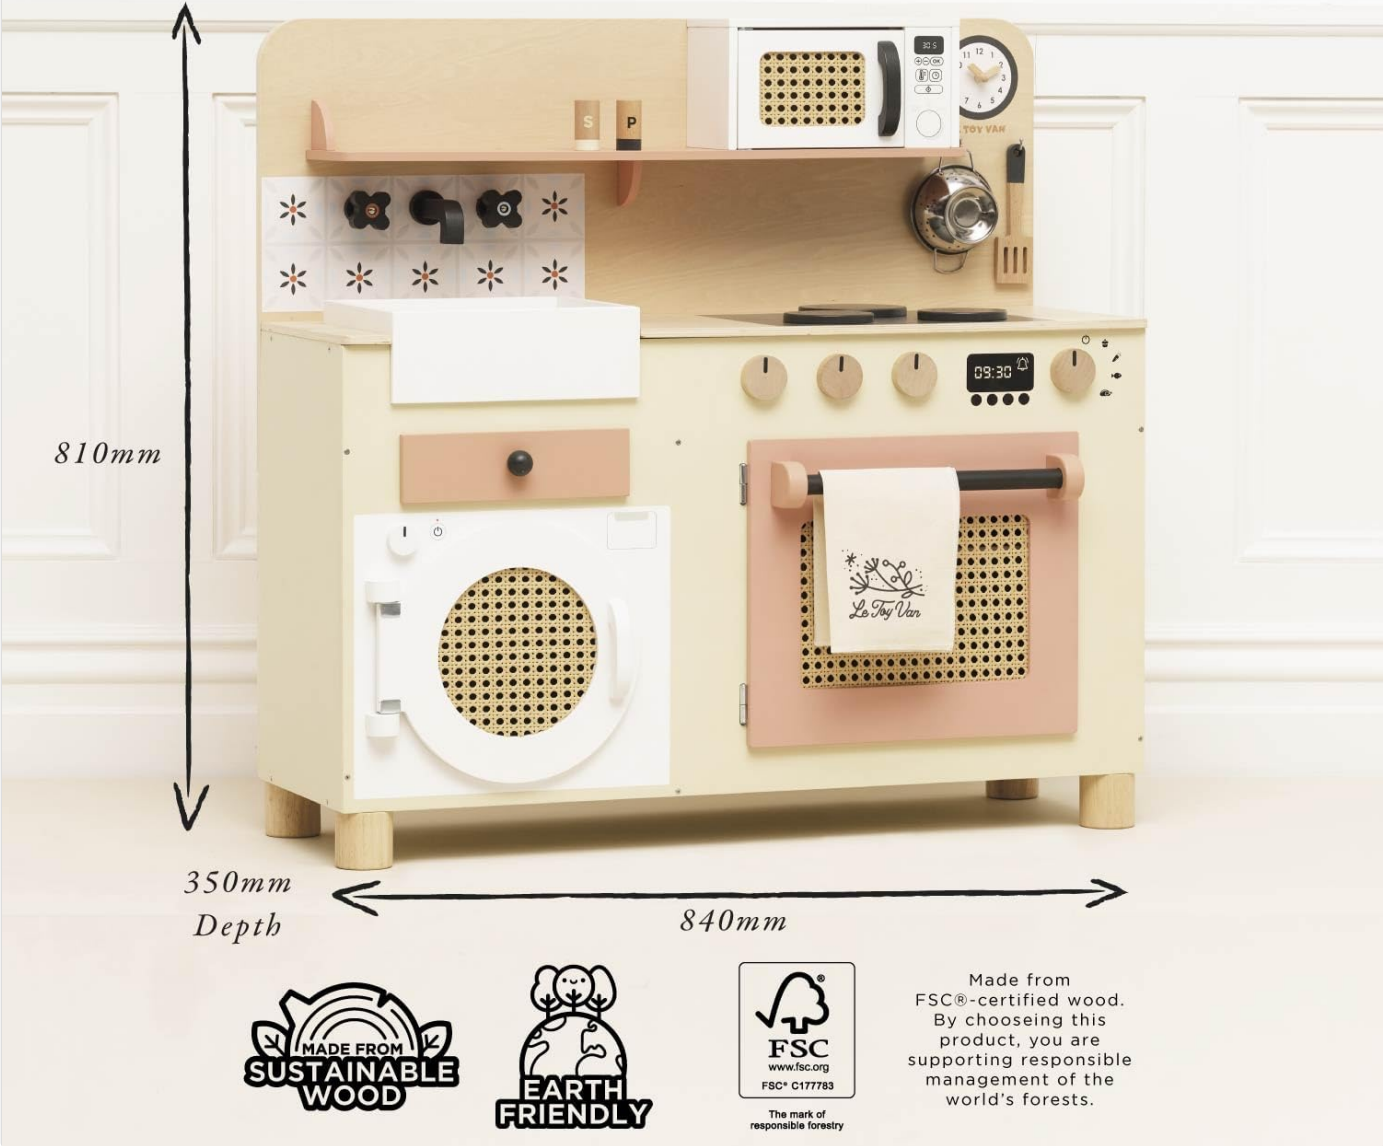


Figure 4: Product Dimensions

## WARRANTY AND SUPPORT

Le Toy Van products are crafted with quality and care. For specific warranty information or if you require assistance with your product, please contact Le Toy Van customer support directly. You can find contact details on the official Le Toy Van website or through your retailer.

For more information about Le Toy Van and their commitment to sustainable practices, visit their official website [Le Toy Van Store](#).