



Manuals.plus /

- › SKMEI /
- › SKMEI Vintage Digital Watch User Manual

SKMEI

SKMEI Vintage Digital Watch User Manual

Model: 1123

PRODUCT OVERVIEW

The SKMEI Model 1123 is a versatile digital watch designed for daily wear and sports activities. It features a durable stainless steel band, a robust zinc alloy case, and a clear digital display with multiple functions.



Front view of the SKMEI Vintage Digital Watch, showcasing its grey digital dial and stainless steel band.

Key Features:

- **Digital Display:** Clear and easy-to-read time, date, and function indicators.
- **Multifunctionality:** Includes dual time display (12/24-hour format), chronograph, alarm, stopwatch, and countdown timer.
- **EL Backlight:** Provides illumination for visibility in low-light conditions.
- **Water Resistance:** Rated for 30 meters (3ATM), suitable for splashes and brief immersion.
- **Durable Construction:** Features a zinc alloy case and stainless steel band for longevity.

EASY-TO-READ Rectangle Display

Quickly access time, date, functions

12/24
Hour Clock



Alarm



Date



Chrono



Visual representation of the watch's easy-to-read rectangular display and its core functions.

SETUP AND INITIAL USE

Before using your watch, familiarize yourself with the button layout and basic operations.



Side view of the watch, highlighting the four control buttons: Light (top left), Mode (bottom left), Start/Stop (top right), and Reset (bottom right).

Button Functions:

- **LIGHT (Top Left):** Activates the EL backlight for a few seconds.
- **MODE (Bottom Left):** Cycles through different modes: Time Display, Alarm Setting, Chronograph (Stopwatch), and Countdown Timer.
- **START/STOP (Top Right):** Used to start/stop the chronograph, adjust values during setting, or activate/deactivate alarm.
- **RESET (Bottom Right):** Used to reset the chronograph, select items during setting, or switch between 12/24-hour format.

Setting Time and Date:

1. From the Time Display mode, press the **MODE** button three times until the seconds begin to flash. This indicates you are in time setting mode.
2. Press the **RESET** button to cycle through the setting options: Seconds → Hours → Minutes → Month → Date →

Day of Week.

3. Use the **START/STOP** button to adjust the flashing value.
4. Once all settings are correct, press the **MODE** button to return to the Time Display mode.

Setting the Alarm:

1. From the Time Display mode, press the **MODE** button twice to enter Alarm Setting mode. The hour digits will flash.
2. Press the **START/STOP** button to adjust the hour.
3. Press the **RESET** button to select the minute digits, then use **START/STOP** to adjust.
4. Press the **MODE** button to exit Alarm Setting mode.
5. To turn the alarm ON/OFF, press and hold the **START/STOP** button while in Alarm Setting mode. An alarm icon will appear/disappear on the display.

Using the Chronograph (Stopwatch):

1. From the Time Display mode, press the **MODE** button once to enter Chronograph mode. The display will show 00:00:00.
2. Press **START/STOP** to begin timing.
3. Press **START/STOP** again to pause timing.
4. Press **RESET** to clear the chronograph to 00:00:00.
5. Press **MODE** to return to Time Display mode.


MAINTENANCE

Proper care will ensure the longevity and performance of your SKMEI watch.

Cleaning:

- Wipe the watch case and band regularly with a soft, dry cloth to remove dust and smudges.
- For stainless steel bands, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals or abrasive materials.

Water Resistance:

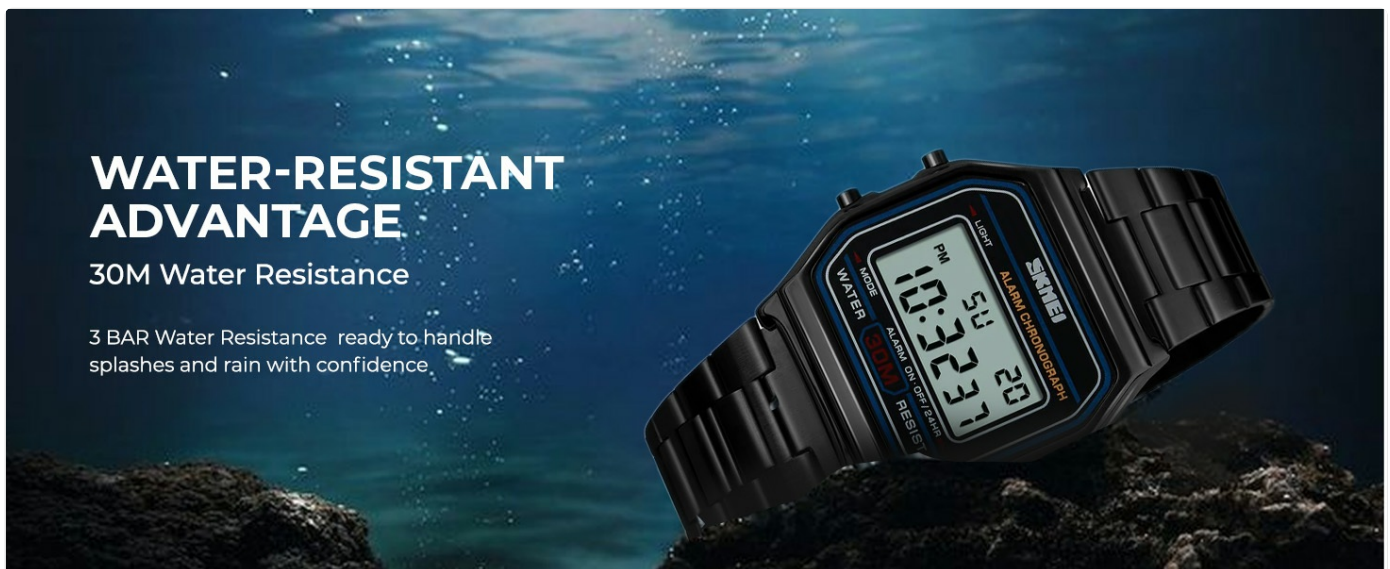

The watch is rated for 30 meters water resistance, suitable for daily splashes and rain.

- This watch is 30M (3ATM) water resistant. This means it is suitable for daily use, splashes, and rain.
- **DO NOT** press any buttons underwater.

- **NOT** suitable for showering, bathing, swimming, diving, or any prolonged water immersion.
- Avoid exposing the watch to extreme temperatures (hot water, saunas) as this can compromise the water seals.

Battery Replacement:

- The watch uses a standard watch battery (1 C battery included).
- When the display dims or functions become erratic, it may be time to replace the battery.
- It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and prevent damage to the internal components.



The back of the watch displays the model number (1123) and water resistance rating (3ATM).

TROUBLESHOOTING

If you encounter issues with your watch, refer to the following common problems and solutions:

- **Display is blank or dim:**
 - The battery may be low. Replace the battery (refer to Maintenance section).

- Ensure no buttons are stuck in a pressed position.
- **Time is incorrect or not advancing:**
 - The watch may need to be reset. Press all four buttons simultaneously for a few seconds, then re-set the time and date.
 - Check if the watch is in a setting mode. Press the MODE button repeatedly until you return to the main time display.
- **Alarm is not sounding:**
 - Ensure the alarm is activated (alarm icon visible on display). Refer to 'Setting the Alarm' section.
 - Check the alarm time setting.
- **Buttons are unresponsive:**
 - The watch may require a soft reset. Remove the battery for 30 seconds and reinsert it. If the issue persists, professional service may be required.

SPECIFICATIONS

Feature	Detail
Model Number	1123
Display Type	Digital
Case Material	Zinc Alloy
Band Material Type	Stainless Steel
Water Resistance Depth	30 Meters (3ATM)
Movement Type	Quartz
Battery	1 C battery (included)
Item Weight	54 Grams
Product Dimensions	25 x 4.9 x 1.5 cm

WARRANTY AND SUPPORT

Your SKMEI watch comes with a limited warranty. Please retain your purchase receipt for warranty claims.

Warranty Information:

- This product is covered by a limited warranty against manufacturing defects.
- The warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.
- For specific warranty terms and conditions, please refer to the warranty card included with your purchase or contact SKMEI customer support.

Customer Support:

For any questions, technical assistance, or warranty inquiries, please contact SKMEI customer support through the official brand website or the retailer where the product was purchased.

Online Support: Visit the official SKMEI website for FAQs and contact options.

Email Support: Refer to your product packaging or the official website for the customer service email address.

