

[Manuals.plus](#) /

> [YIJU](#) /

> YIJU 32GB Pen Voice Recorder (Model ZD60) Instruction Manual

YIJU ZD60

YIJU 32GB Pen Voice Recorder (Model ZD60) Instruction Manual

Brand: YIJU | Model: ZD60

1. PRODUCT OVERVIEW

The YIJU 32GB Pen Voice Recorder is a versatile device combining the functions of a ballpoint pen, a voice recorder, a USB memory stick, and an MP3 player. It features 32GB of internal storage, supporting up to 384 hours of recording, and a 180mAh battery for up to 35 hours of continuous recording. This device is designed for discreet and high-quality audio capture in various environments.



Image: The YIJU Pen Voice Recorder highlighting its 32GB storage for approximately 384 hours of recording and 35 hours of continuous recording from its 180mAh battery.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Voice Recorder Main Unit (1)
- Replacement Ballpoint Pen Refills (6)
- Small Screwdriver (for pen refill replacement) (1)
- Earphones (1)
- Earphone Connection Cable (1)
- USB Cable (1)
- Type-C OTG Conversion Adapter (1)
- Instruction Manual (Japanese) (1)

高音質な録音を実現



無指向性マイク搭載

どんな置き方でも音声をしっかり拾え



DPSノイズキャンセル機能

周囲のノイズや騒音成分を低減し、
よりクリアーな音声を



高音質のWAV形式

音声データを圧縮せず
に生の声に近い高音質
で記録でき



Image: Contents of the YIJU Pen Voice Recorder package, showing the pen, earphones, USB cable, and other accessories.

3. PRODUCT COMPONENTS

Familiarize yourself with the key components of your voice recorder pen:

ボイスレコーダー・操作簡単

オン/録音

操作：電源ボタンを長押し→電源入れ→録音開始

指示ラント：赤点灯→青と赤同時に点滅→赤が3回点滅→消灯

オフ：電源ボタンを長押し→録音保存→電源切れ

指示ラント：青と赤が同時に3回点滅→消灯

再生

操作：イヤホンを接続→電源ボタンを長押し→電源入れ
→録音再生開始

指示ランプ：赤点灯→青と赤同時に点滅→赤が3回点滅→
青ゆっくり点滅

一時停止

録音・再生中に→電源ボタン押し
→録音・再生一時停止

充電中

指示ラント：赤が点灯

充電完了

指示ラント：青が常時点灯



Image: A detailed view of the pen voice recorder, indicating the location of the recording button, microphone, and charging/data port.

4. INITIAL SETUP

Setting Date and Time

To ensure your recording files are correctly timestamped, set the device's date and time:

1. Connect the voice recorder to your computer using the provided USB cable.
2. Locate and double-click the file named **MRECSET.TXT** on the device's storage.
3. Inside the file, find the line containing "TIME".
4. Manually enter the current time and date in the specified format. For example, for July 15, 2024, 11:30 AM, enter **TIME:11:302024/7/15**.
5. Save the **MRECSET.TXT** file. The time setting is now complete.

5. BASIC OPERATION

Power On and Start Recording

1. Long press the recording button.
2. The red and blue indicator lights will flash. The number of flashes indicates the current battery level.
3. The red light will then flash three times and turn off. Recording has now started.

Pause Recording

- During recording, briefly press the power button to pause the recording.

Stop Recording and Power Off

- Long press the power button. The device will automatically save the current recording file and then power off.

Playback

- Connect the included earphones to the voice recorder using the earphone connection cable.
- The device will automatically enter playback mode.
- You can play back recordings, play music, adjust volume, and skip tracks directly using the controls on the earphone cable.

高音質な録音を実現



Image: Visual guide for basic operations including power on/off, recording, playback, and charging status indicators.

6. ADVANCED FEATURES

Voice-Activated Recording (VOR)

The device features Voice-Activated Recording (VOR) mode. When enabled, recording automatically starts when sounds above 30dB are detected and pauses when the sound level drops below 30dB. This feature helps conserve memory and battery life by only recording when audio is present.

Noise Cancellation

Equipped with a built-in DPS noise-canceling chip, the recorder effectively reduces environmental noise and interference, ensuring clear and distinct voice recordings.

180mAh大容量バッテリー

35時間連続録音可能

32GB大容量メモリー

384時間録音保存可能

バッテリー残量確認

電源を入れると青&赤のライトの点滅回数でバッテリー残量確認できます。

25%以下

点滅

1回

25%~50%

点滅

1回

50%~75%

点滅

1回

満充電

点滅

1回





Image: Features for high-quality recording, including an omnidirectional microphone for clear sound capture and DPS noise cancellation technology.

Timestamp Function

After setting the device's date and time (see Section 4), all recorded files will automatically include the recording date and time in their filenames. This simplifies the organization and management of your audio files.

Automatic File Segmentation

You can configure the device to automatically segment long recordings into smaller files. Choose segmentation intervals from 10 minutes up to 4 hours. This feature makes reviewing and managing extensive recordings more convenient.




録音機だけでなく、
ボールペンとして書くこともできます。
ボールペン芯交換ツール付属、
芯の交換がもっと簡単になります。



音声感知なし録音
ボタンを2秒以上押すと、録音が始めます、途中でボタンを押すと一時停止、もう一度押すと録音続けます。ボタン2秒以上押すと録音を保存して、電源も切ります。



音声感知録音
電源を入れてから、音が30dB以上になると録音が始め、音が30dB以下になると録音が停止になります
※音声感知録音の設定について、取扱説明書にご確認ください。

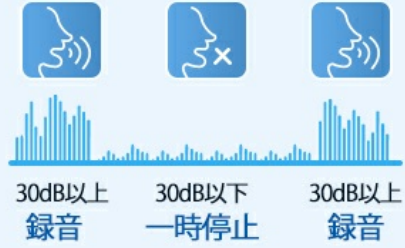

音声レベル	録音状態
30dB以上	録音
30dB以下	一時停止
30dB以上	録音

Image: The timestamp synchronization feature, displaying how recording files are named with date and time for easy management.

7. DATA MANAGEMENT

OTG Compatibility (Android Only)

Use the included Type-C OTG adapter to connect the voice recorder to an OTG-compatible Android smartphone or tablet. This allows you to play back and save recorded data directly on your mobile device.

PC Connection

Connect the voice recorder to your computer using the provided USB cable. You can then manage data, play or delete audio files, and adjust recording settings via your PC. Recorded files are saved in the "RECORD" folder on the device.

File Format

All recording files are saved in **.wav** format.

時刻同期録音機能 録音データ管理ラクラク

 V20230712-115211

V	2023	0712	11	52	11
音声感知録音	年	日付	時	分	秒

 R20230710-165510

R	2023	0710	16	55	10
音声感知なし録音	年	日付	時	分	秒

Image: Various methods for recording playback and data management, including PC connection, OTG connection with an Android smartphone, and direct playback via earphones.

8. CHARGING AND BATTERY STATUS

Charging the Device

- Connect the voice recorder to a USB power source using the provided USB cable.
- During charging, the indicator light will be **red**.
- When charging is complete, the indicator light will turn a steady **blue**.

Battery Level Indication

- When the device is powered on, the battery level can be checked by the number of flashes of the blue and red lights. Refer to the diagram below for details.

Automatic Save on Low Battery

The device is equipped with an automatic save function. If the battery runs low during recording, the current recording file will be automatically saved before the battery completely depletes, preventing data loss.



バッテリー残量確認

電源を入れると、青&赤のライトの点滅回数でバッテリー残量確認できます。

VOR音声感知自動録音

音が30dB以上になると自動で録音を開始します。

ボイスレコーダーを身につけておくだけで、どんなシーンでも録音できます。



ファイル名	
	V202205041111104.WAV
	R20220509121103.WAV
	R20220504122009.WAV
	V20220502121704.WAV
	年 日付 時間 秒

時刻同期録音機能

PCと接続して、時間を設定することができます。

録音した日付と時刻のがファイルの名になるので、録音ファイルの確認や管理が超簡単。

Image: Battery level check using indicator light flashes (1 flash for <25%, 2 for 25-50%, 3 for 50-75%, 4 for 75-100% full charge) and an illustration of VOR (Voice-Activated Recording).

9. SPECIFICATIONS

Feature	Specification
Brand	YIJU
Model Number	ZD60 (lo-235)
Memory Storage Capacity	32 GB
Battery Capacity	180 mAh
Continuous Recording Time	Up to 35 hours
Max Recording File Storage	Approx. 384 hours

Recording Format	WAV
Microphone Type	Omnidirectional, Built-in
Headphone Jack	3.5 mm
Compatible Devices	MP3 Players, Smartphones (Android with OTG), Tablets (Android with OTG), PCs
Hardware Interface	SD Card (internal), USB
Product Dimensions (D x W x H)	14 x 14 x 150 mm

10. TROUBLESHOOTING

- **Device enters playback mode during recording:** If earphones are connected to the voice recorder while it is recording, it will automatically switch to playback mode. To record, ensure that earphones and the earphone connection cable are disconnected from the voice recorder.
- **Pre-existing recording files:** Before shipping, all products undergo a quality inspection which includes a test recording. Therefore, your device may contain a small test recording file upon arrival. This is normal and does not indicate a used product.
- **Button malfunction:** If a button is not functioning correctly, try twisting off the button cap, carefully removing the internal spring, reattaching the spring securely, and then reattaching the button cap.
- **Cannot play WAV files:** If you are unable to play the recorded .wav files with your current media player, please try using alternative music playback software that supports .wav file formats.
- **OTG function not working with iPhone:** The OTG function is only compatible with Android smartphones and tablets that have an OTG-compatible Type-C port. It is not compatible with iPhones.

11. WARRANTY AND SUPPORT

This product comes with a one-year warranty from the date of purchase. If you encounter any issues or have questions regarding the product during this period, please do not hesitate to contact our customer support. We are committed to providing prompt and thorough assistance.



Image: Customer support team ready to assist, emphasizing the one-year warranty and reliable support.

12. IMPORTANT NOTES

- Always read this instruction manual thoroughly before using the product to ensure correct operation.
- The pen is fully functional as a writing instrument. To replace the pen refill, use the provided small screwdriver to unscrew the tip and insert a new refill.
- Avoid exposing the device to extreme temperatures, direct sunlight, or high humidity.
- Do not attempt to disassemble or repair the device yourself, as this may void the warranty and cause damage.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CCH3Z223>

More documents and user manuals: <https://manuals.plus/>