

[Manuals.plus](#) /

› [ALEASHA](#) /

› Aleasha Widespread Bathroom Sink Faucet (Model 2323100RB) Instruction Manual

ALEASHA 2323100RB

Aleasha Widespread Bathroom Sink Faucet Instruction Manual

Model: 2323100RB

1. INTRODUCTION

Thank you for choosing the Aleasha Widespread Bathroom Sink Faucet. This manual provides essential information for the proper installation, operation, and maintenance of your new faucet. Please read these instructions carefully before beginning installation and retain them for future reference.

2. PRODUCT OVERVIEW

The Aleasha Widespread Bathroom Sink Faucet features a durable oil rubbed bronze finish, a ceramic valve for leak-free performance, and a widespread design suitable for 3-hole deck installations. It includes a pop-up drain and lead-free stainless steel hoses.

2.1 Components Included



WHAT ARE IN THE BOX

Image: All components included in the package, such as the faucet spout, hot and cold handles, pop-up drain, and supply hoses.

- Faucet Spout
- Hot and Cold Handles
- Pop-Up Drain Assembly
- Supply Hoses (24-inch, 3/8" compression)
- Mounting Hardware
- Installation Guide
- Gloves

2.2 Product Dimensions



Image: Detailed diagram illustrating the dimensions of the faucet spout, handles, and pop-up drain, including spread and height measurements.

Ensure your sink deck has three holes with a spread between 6 to 16 inches. The maximum deck thickness supported is 1.4 inches (36 mm).

3. SAFETY INFORMATION

- Always turn off the main water supply before beginning any plumbing work.
- Wear appropriate personal protective equipment, such as safety glasses and gloves.
- If you are unsure about any step, consult a qualified plumber.
- Do not overtighten connections, as this can damage components.
- Ensure all connections are secure to prevent leaks.

4. SETUP AND INSTALLATION

This faucet is designed for easy installation. Follow these steps carefully.

4.1 Tools Required (Not Included)

- Adjustable Wrench
- Phillips Head Screwdriver
- Plumber's Putty or Silicone Sealant
- Teflon Tape (included)

4.2 Installation Steps

1. **Prepare the Sink:** Ensure the sink deck is clean and dry. Confirm your sink has three pre-drilled holes suitable for a widespread faucet.
2. **Install Faucet Handles:** Insert the hot and cold handles into the outer holes of the sink deck. Secure them from underneath with the provided washers and nuts. Ensure the handles are oriented correctly (hot on left, cold on right).
3. **Install Faucet Spout:** Place the faucet spout into the center hole. Apply plumber's putty or silicone sealant around the base of the spout on the top side of the sink to create a watertight seal. Secure the spout from underneath with the provided washer and nut.
4. **Connect Water Supply Lines:** Attach the flexible supply hoses to the hot and cold water inlets on the faucet handles and the main water supply valves. Use Teflon tape on threaded connections to prevent leaks. The included hoses are 24 inches long with 3/8" compression fittings.
5. **Install Pop-Up Drain:** Assemble the pop-up drain according to the separate instructions provided with the drain assembly. Ensure a watertight seal between the drain flange and the sink basin using plumber's putty or silicone sealant. Connect the drain tailpiece to your P-trap assembly.
6. **Test for Leaks:** Slowly turn on the main water supply. Check all connections for leaks. Operate the faucet handles to ensure proper water flow and temperature control.

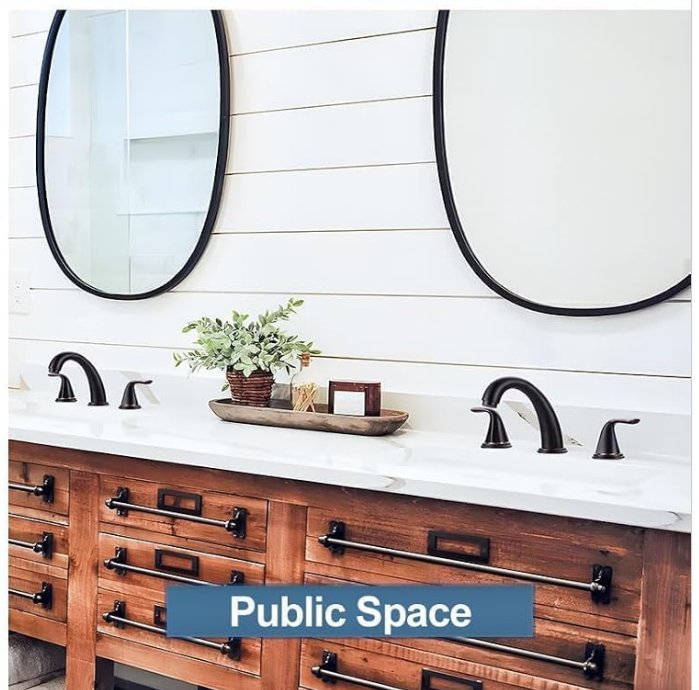
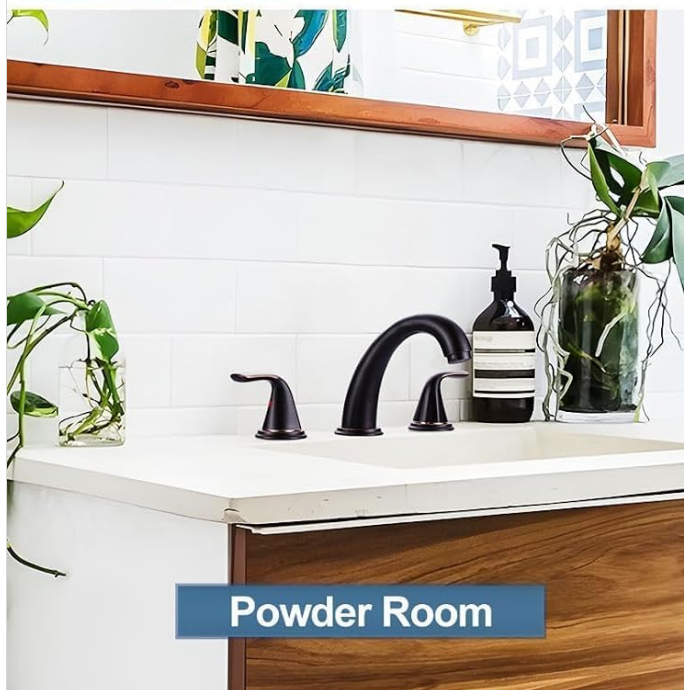
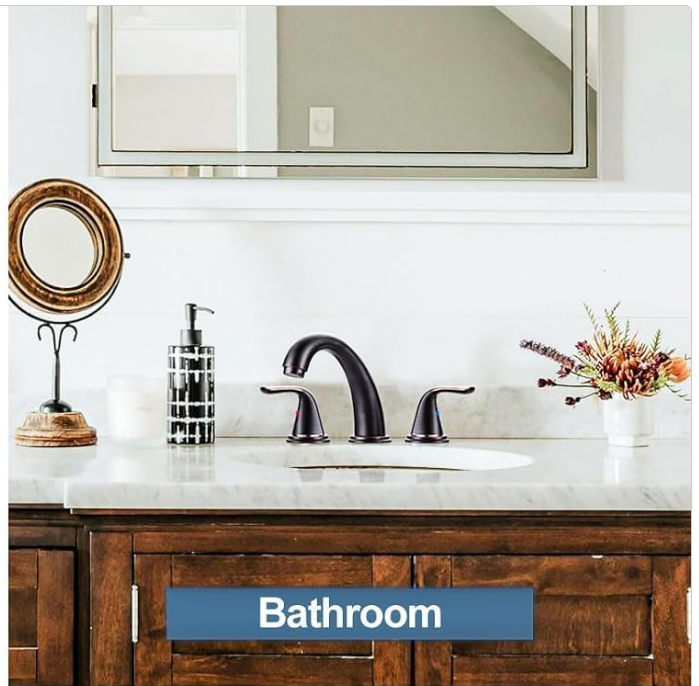


Image: Illustration demonstrating the compatibility of the faucet with a three-hole sink and specifying maximum deck thickness.

5. OPERATING INSTRUCTIONS

Your Aleasha faucet is designed for intuitive use.

5.1 Water Flow and Temperature Control



Image: Visual guide showing the 90-degree rotation of the hot (red dot) and cold (blue dot) handles for precise temperature and flow control.

- The left handle controls hot water, indicated by a red dot.
- The right handle controls cold water, indicated by a blue dot.
- Rotate the handles 90 degrees to open or close the water flow. Adjust both handles to achieve the desired water temperature and flow rate.

5.2 Pop-Up Drain Operation



For Sink With Overflow Hole



Quick Drainage
No Leakage Control Drainage



POP-UP DRAIN

Image: Close-up of the pop-up drain mechanism, highlighting its quick drainage and anti-leakage features, suitable for sinks with overflow holes.

To close the drain and fill the sink, press down on the top of the pop-up drain stopper. To open the drain, press down again.

6. MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your faucet.

6.1 Cleaning the Faucet Finish

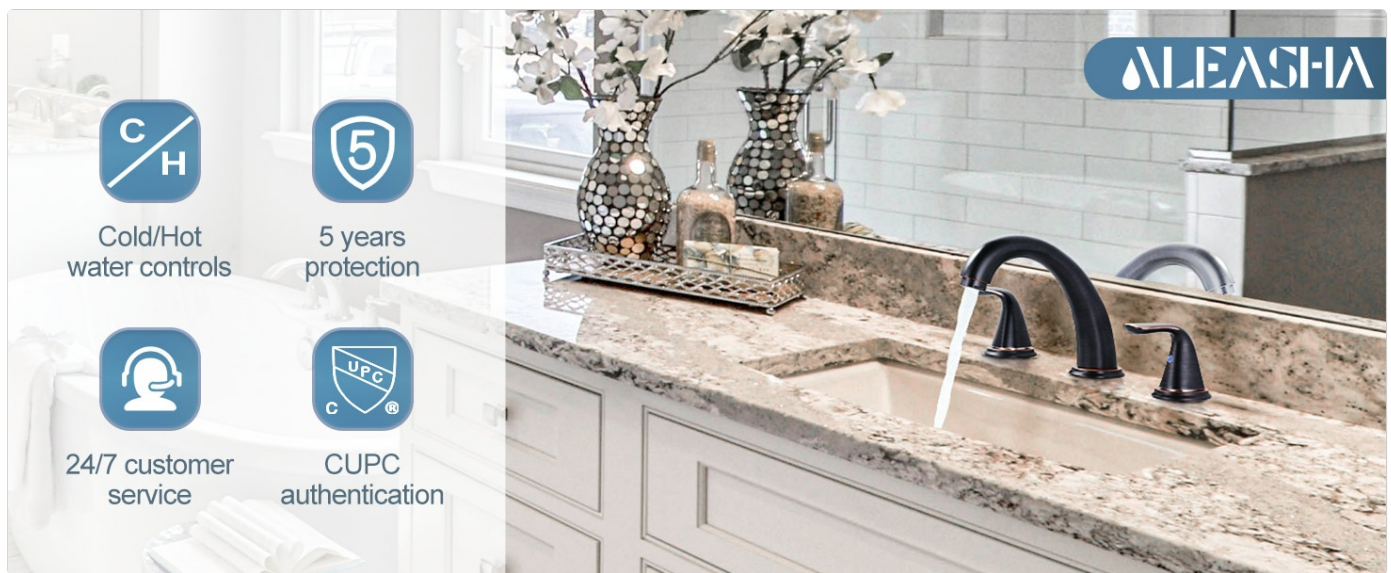


Image: Close-up view of the oil rubbed bronze finish, emphasizing its resistance to fingerprints, water spots, and corrosion.

- Clean the faucet regularly with a soft cloth and mild soap.
- Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the oil rubbed bronze finish.
- Rinse thoroughly with clean water and dry with a soft cloth to prevent water spots.

6.2 Aerator Cleaning



Image: Exploded view showing the individual components of the removable Neoperl aerator, configured for 1.2 and 2.2 GPM flow rates.

- If water flow decreases or becomes irregular, the aerator may be clogged.
- Unscrew the aerator from the end of the spout.
- Rinse any debris from the aerator screen under running water. For stubborn deposits, soak in a vinegar solution.
- Reattach the aerator, ensuring it is securely tightened.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Low Water Flow	Clogged aerator; partially closed supply valves.	Clean the aerator (see Section 6.2); ensure supply valves are fully open.
Leaks at Connections	Loose connections; worn washers; insufficient Teflon tape.	Tighten connections; replace washers if damaged; reapply Teflon tape.

Problem	Possible Cause	Solution
Water Drips from Spout	Worn ceramic valve cartridge.	Contact customer service for a replacement cartridge.

8. SPECIFICATIONS

Feature	Detail
Brand	ALEASHA
Model Name	2323100RB
Finish Type	Oil Rubbed Bronze (Polished)
Material	Bronze, Stainless Steel, Zinc (Handles: Brass, Stainless Steel, Zinc)
Mounting Type	Deck Mount
Hole Count	3
Number of Handles	2
Special Features	Lead Free, Pop Up Drain
Product Dimensions	11.02 x 10.04 x 2.95 inches
Item Weight	3.1 pounds

9. WARRANTY AND SUPPORT

ALEASHA offers a 5-year warranty on this product, covering manufacturing defects and performance issues. The ceramic valve is designed for long-term, leak-free operation.

For customer service, warranty claims, or any questions regarding your faucet, please contact ALEASHA customer support. Refer to the contact information provided on the product packaging or the official ALEASHA website.

We also offer a 30-day free return policy.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question