

[Manuals.plus](#) /

> [WINFLIKE](#) /

> WINFLIKE R230D1A IR Remote Control Instruction Manual

WINFLIKE R230D1A

WINFLIKE R230D1A IR Remote Control Instruction Manual

For RCA LED HDTV Models: J22DE926, J28DE926, J32DE9, J32LV840, J40LV840, J43LV840, J49LV840, J32BE220, J40BE220, J55BE220, J22DE220, J32BE926, J40BE926, J43BE926, J49BE926, J55BE926

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your WINFLIKE R230D1A IR Remote Control. This remote is designed as a direct replacement for various RCA LED HDTV models, offering full functionality without the need for programming.

SETUP

Battery Installation

The WINFLIKE R230D1A remote control requires two (2) AAA batteries for operation. No programming or pairing is necessary; simply install the batteries, and the remote will be ready for use.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Figure 1: Battery compartment of the R230D1A remote control. Insert two AAA batteries according to polarity markings.

Initial Use

Once batteries are installed, the remote is ready to operate your compatible RCA LED HDTV. Point the remote directly at your television and press the desired function button.

OPERATING INSTRUCTIONS

The WINFLIKE R230D1A remote control provides full access to all standard functions of your compatible RCA LED HDTV. Below is a general overview of key buttons and their functions:





Figure 2: Front view of the R230D1A remote control with button layout.

- **Power ():** Turns the television on or off.
- **MUTE:** Mutes or unmutes the television audio.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the television channel.
- **INPUT:** Selects the input source (e.g., HDMI 1, AV).
- **SLEEP:** Activates the sleep timer function.
- **RATIO:** Adjusts the screen aspect ratio.
- **SYSTEM:** Accesses system settings or information.
- **INFO:** Displays on-screen information.
- **MENU:** Opens the television's main menu.
- **Navigation Arrows (▲ ◀ ▼ ▶):** Navigates through menus and options.
- **OK:** Confirms selections in menus.
- **Number Buttons (0-9):** Directly enters channel numbers.
- **SOUND:** Accesses audio settings.
- **GUIDE:** Displays the electronic program guide (if available).
- **CC (Closed Caption):** Toggles closed captions on or off.
- **CLEAR:** Clears entries or exits certain functions.
- **GO BACK:** Returns to the previous screen or channel.

For specific functions and advanced settings, refer to your RCA LED HDTV's original user manual.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe the surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's finish or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh AAA batteries are correctly installed.
 - Check for any obstructions between the remote and the television's IR sensor.
 - Confirm the remote is pointed directly at the television.
- **Specific buttons not working:**
 - Clean the remote's surface, especially around the unresponsive buttons, to remove any debris.
 - Replace the batteries.
- **Television not compatible:**
 - Verify your RCA LED HDTV model number is listed as compatible with the WINFLIKE R230D1A remote control.

If issues persist after following these steps, please contact customer support.

SPECIFICATIONS

Model	R230D1A
Brand	WINFLIKE
Dimensions (L x W x H)	6 x 2 x 0.5 inches
Weight	3 ounces
Batteries Required	2 x AAA (not included)
Connectivity Technology	Infrared (IR)
Compatible Devices	RCA LED HDTVs (specific models listed in introduction)
Special Features	Ergonomic, Lightweight, No Programming Required

WARRANTY AND SUPPORT

Customer Support

For any questions, concerns, or issues regarding your WINFLIKE R230D1A remote control, please contact WINFLIKE INC customer service. We are committed to providing support for our products.

Contact information for WINFLIKE INC can typically be found on the product packaging or through the retailer where the item was purchased.