

Easytry16389

Generic Replacement Remote Control Instruction Manual

For Pioneer AV A/V Audio Video Receivers

1. INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your Generic replacement remote control. This remote is designed to be compatible with various Pioneer AV A/V Audio Video Receiver models. Please read this manual thoroughly before using the remote control.

2. PRODUCT OVERVIEW

This remote control is an infrared (IR) replacement unit. It is designed to function with the following Pioneer AV A/V Audio Video Receiver models:

- XXD3155
- XXD3152
- XXD3132
- XXD3057
- VSX-D512
- VSX-D512-K
- VSX-817
- VSX-817-K
- VSX-817-S
- XXD3148

Note: As a replacement item, this remote control may not offer all functions or features present on the original manufacturer's remote control. Please refer to the layout of the buttons on the remote control itself.



Figure 1: Front view of the remote control, showing various function buttons for audio and video control.

3. SETUP

3.1 Battery Installation

The remote control requires two (2) CR2 batteries for operation. Batteries are not included with the remote control and must be purchased separately.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch (if present) and lift to open.
3. Insert two CR2 batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 2: Back of the remote control with the battery compartment open, illustrating the correct battery placement.

4. OPERATING INSTRUCTIONS

To operate your Pioneer AV receiver using this remote control:

1. Point the remote control directly at the infrared sensor on your Pioneer AV receiver. Ensure there are no obstructions between the remote and the receiver.
2. Press the desired function button (e.g., Power, Volume Up/Down, Input Select, Mute, etc.).
3. Confirm that your receiver responds to the command.

Important: The functionality of specific buttons may vary depending on your exact Pioneer receiver model. Some advanced or unique features of your original receiver remote may not be supported by this replacement unit.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the remote's surface or internal components.

5.2 Battery Replacement

Replace the batteries when the remote control's range decreases significantly or if it stops responding. Always replace both batteries at the same time with new CR2 batteries. Do not mix old and new batteries or different types of batteries.

6. TROUBLESHOOTING

- **Remote not working:**

- Check if the batteries are inserted correctly with the correct polarity.

- Replace old batteries with new ones.
 - Ensure there is a clear line of sight between the remote control and the receiver's IR sensor.
 - Verify that the remote control is pointed directly at the receiver.
- **Limited functionality:**
 - As a replacement remote, some specific functions of your original receiver remote may not be available. This is normal for universal or replacement remotes.
 - Refer to your Pioneer receiver's original manual for specific functions if you suspect a button should work but does not.

7. SPECIFICATIONS

Brand	Generic
Model Number	Easytry16389
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Maximum Range	10 Meters
Batteries Required	2 x CR2 batteries (not included)
Special Feature	Replacement item; may not work with all functions as original.

8. WARRANTY AND SUPPORT

This product comes with a 90-day warranty from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, or unauthorized modifications.

For warranty claims or technical support, please contact the seller directly through your purchase platform. Provide your order number and a detailed description of the issue to facilitate a quicker resolution.