

MUSITREND T408

MUSITREND 9-in-1 Record Player Instruction Manual

Model: T408
Brand: MUSITREND

1. INTRODUCTION

Thank you for purchasing the MUSITREND 9-in-1 Record Player. This versatile audio system combines vintage aesthetics with modern functionality, allowing you to enjoy music from various sources including vinyl records, CDs, cassette tapes, AM/FM radio, Bluetooth-enabled devices, and USB/SD cards. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.

2. WHAT'S IN THE BOX

- Record Player Unit
- User Manual
- Remote Control
- External Speakers (2x)
- 45 RPM Adapter

3. PRODUCT FEATURES & CONTROLS OVERVIEW

The MUSITREND 9-in-1 Record Player offers a comprehensive set of features for your audio enjoyment:

- **9-in-1 Multifunctionality:** Supports Vinyl records, Bluetooth, USB, SD, CD, Cassette play, AM/FM Radio, Cassette/USB/SD Playback, Aux-in, and RCA Line Out.
- **Dual Powerful External Speakers:** Equipped with two 10W external speakers for rich, real, and live vinyl audio.
- **Recording Capability:** Convert Vinyl, Aux-in, CD, and Cassette to USB/SD (MP3 Format). Also record USB/SD, CD, Vinyl, and Aux-in directly to Cassette.
- **3-Speed Belt Drive Turntable:** Plays 7, 10, and 12-inch vinyl discs at 33 1/3, 45, and 78 RPM. Features an auto-stop setting.

- **Remote Control:** Conveniently operate the unit from a distance.



Figure 3.1: Front view of the MUSITREND 9-in-1 Record Player with external speakers.

Multimedia Record Player



Figure 3.2: Icons illustrating the various multimedia functions of the record player, including 3-speed LP, SD/MMC Card, Cassette, CD Player, AM/FM Radio, USB Player, AUX in/RCA out, Bluetooth, Headphone, and Remote Control.

Video 3.1: Official product video demonstrating the various functions of the MUSITREND 9-in-1 Record Player, including vinyl, CD, cassette, radio, USB, SD, and Bluetooth playback.

4. SETUP GUIDE

1. **Unboxing:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the main unit on a stable, flat surface away from direct sunlight, heat sources, and excessive dust or moisture. Ensure adequate ventilation around the unit.
3. **Speaker Connection:** Connect the included external speakers to the speaker output ports on the main unit. Ensure correct polarity (positive to positive, negative to negative).
4. **Power Connection:** Plug the AC power cord into a standard wall outlet. The unit has an on-mode power consumption of 25 watts.
5. **Initial Power On:** Press the Power button on the unit or the remote control to turn on the device.

5. OPERATING INSTRUCTIONS

5.1. Vinyl Record Playback

1. Lift the dust cover.
2. Place a vinyl record on the turntable platter.
3. Select the appropriate speed (33 $\frac{1}{3}$, 45, or 78 RPM) using the speed selector switch located near the platter. Use the 45 RPM adapter for 7-inch records.
4. Release the tone arm lock.
5. Gently lift the tone arm using the cueing lever and position it over the desired track of the record.
6. Lower the tone arm slowly onto the record using the cueing lever. Playback will begin.
7. At the end of the record, the auto-stop function will stop the platter (if enabled). Lift the tone arm and return it to its rest.



Figure 5.1: Detailed view of the 3-speed record player components, including the 45 RPM adapter, auto-stop control, 3-speed selector, and ruby stylus.

Video 5.1: Official product video demonstrating the operation of the turntable, including placing a record, setting the speed, and using the tone arm.

5.2. CD Playback

1. Press the FUNCTION SELECT button repeatedly until