

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Vormooi](#) /

› [Vormooi V65 64GB Voice Recorder Instruction Manual](#)

## Vormooi V65

# Vormooi V65 64GB Voice Recorder User Manual

Model: V65

[Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

## 1. SETUP

### 1.1 Package Contents

Ensure all items are present in the package:

- Vormooi V65 Voice Recorder
- USB-C Charging Cable
- USB-C to USB-A Adapter
- 3.5mm Audio Cable (for headphones)
- Wrist Lanyard

### 1.2 Initial Charging

Before first use, fully charge the device. Connect the provided USB-C cable to the recorder's USB-C port and the other end to a power adapter (not included) or a computer's USB port. The device features a 300mAh rechargeable battery.

*Note: A full charge takes approximately 1.5 hours and provides up to 35 hours of continuous recording (default settings) or up to 55 hours.*

### 1.3 Powering On/Off

To power on the device, slide the power switch to the 'On' position. To power off, slide the switch to 'Off'.

### 1.4 Setting Date and Time

It is recommended to set the correct date and time for accurate file naming and organization. Access the settings menu using the 'MENU' button and navigate to the 'Time Settings' option. Follow the on-screen prompts to adjust the date and time.

## 1.5 Internal Memory

The Vormooi V65 comes with 64GB of internal memory. Please note that a portion of this memory is used by the system software, resulting in a slightly lower usable capacity than the advertised 64GB.

### 64GB Multi-functional Voice Recorder

-  Metal body. Not plastic!
-  Basically all operations can be done on the recorder
-  A perfect gift for students, teachers, writers and bloggers, anyone who loves to record



The display shows the available and total internal memory. A small portion is reserved for the system.

## 2. OPERATION

### 2.1 One-Click Recording

The Vormooi V65 features a dedicated recording button for quick access. To start recording, simply slide the record button upwards. The device will begin recording immediately, even if it is powered off. To stop and save the recording, slide the button downwards.

## Quick Recording at Shutdown



The dedicated slide button allows for quick recording initiation and saving.

## Independent Recording Button Design

No need to open the voice recorder, just push the button to record



The independent recording button allows for immediate recording without powering on the device first.

## 2.2 Automatic Saving and File Naming

Recordings are automatically saved when the record button is slid downwards. Files are named based on the date and time of recording for easy identification.



Recordings are automatically saved and named with the date and time.

## 2.3 Voice Activated Recording (V.O.R.)

The device supports voice-activated recording. When enabled, the recorder will automatically start recording when sound is detected and pause when there is no sound, conserving battery and memory. To enable or disable V.O.R., navigate to the settings menu using the 'MENU' button.

## 2.4 Playback

After recording, you can listen to files directly through the built-in speaker. For a better listening experience, connect the included headphones to the 3.5mm audio jack.



Connect headphones for private listening or transfer files to a computer.

## 2.5 Display and Buttons

The 1.44-inch LCD display shows essential information such as battery level, recording duration, and menu options. The multi-functional buttons allow for easy navigation and setting adjustments, including time, voice activation, and more.

## 2.6 Advanced Features

- **A-B Repeat:** Allows you to loop a specific section of an audio file.
- **Variable Speed Playback:** Adjust the playback speed of recordings.
- **Timed Recording:** Schedule recordings to start and stop at specific times.
- **Password Protection:** Set a 4-digit password to protect your recorded data. Access this feature through the settings menu.

## 2.7 Connecting to a Computer

To transfer files, connect the recorder to your computer using the USB-C cable and adapter. The device will appear as a removable storage device. You can then drag and drop files between the recorder and your computer. The recorder supports MP3 and WAV audio formats.



Connect the recorder to your computer using the provided USB-C cable and adapter for file transfer.



The recorder supports WAV and MP3 audio formats.

## 3. MAINTENANCE

---

### 3.1 Cleaning

Wipe the device with a soft, dry cloth. Do not use liquid cleaners or solvents, as they may damage the device.

### 3.2 Battery Care

To prolong battery life, avoid exposing the device to extreme temperatures. If storing for an extended period, charge the battery to approximately 50% before storage and recharge every few months.

### 3.3 Storage

Store the recorder in a cool, dry place away from direct sunlight and moisture.

## 4. TROUBLESHOOTING

---

### 4.1 General Issues

- **Unexpected Recordings on First Use:** It is possible for a recording to be accidentally saved during manufacturing or packaging. These can be safely deleted.
- **Actual Storage Space Less Than Advertised:** This is normal. System software occupies a portion of the internal memory.
- **Record Button Accidental Activation:** The record button is designed for quick access. Be mindful of its position to prevent unintended recordings, especially when carrying the device in a pocket.
- **Audio Setting Too Loud:** If the default audio output is too loud, adjust the volume settings through the device's menu.

### 4.2 Recording Quality

To reduce background noise and improve recording quality:

- Turn off voice activation (V.O.R.) if not needed.
- Place the recorder on a stable surface to avoid friction noise.

- Keep the recorder away from noise sources like air conditioning, typing, or running computers.
- Ensure the speaker's voice is at least 20cm away from the microphone to prevent popping sounds.



The matrix microphone pickup is designed for clear audio capture.

#### 4.3 Playback and File Access

- **Cannot Play a File:** Ensure the file format is supported (MP3, WAV, FLAC, APE, OGG, WMA). If the format is unsupported, convert the file using computer software.
- **Cannot Find Recording in Voice Activated Mode:** First, try switching the interface to music playback and then back to recording playback. If the issue persists, connect the device to a computer to check for disk errors or missing files.

#### 4.4 Computer Connectivity

- **Computer Not Recognizing Recorder:** If your computer does not initially recognize the recorder when plugged into a USB-C port, try using a USB-A port with the provided adapter. Sometimes, connecting to a USB-A port first can resolve recognition issues for subsequent USB-C connections.

### 5. SPECIFICATIONS

<b>Brand</b>	Vormooi
<b>Model Number</b>	V65
<b>Memory Storage Capacity</b>	64 GB
<b>Hardware Interface</b>	USB Type C
<b>Compatible Devices</b>	Personal Computer
<b>Special Features</b>	Professional, USB C charge, Voice Activated, with screen
<b>Display Technology</b>	LCD
<b>Screen Size</b>	1.44 Inches
<b>Supported Audio Formats</b>	APE, FLAC, MP3, OGG, WAV, WMA
<b>Microphone Form Factor</b>	Built-In
<b>Power Source Type</b>	Battery Powered
<b>Battery Average Life</b>	50 Hours (playback), 35-55 Hours (recording)
<b>Battery Type</b>	1 Lithium Ion battery (included)
<b>Total USB Ports</b>	1
<b>Headphones Jack</b>	3.5 millimeters
<b>Product Dimensions</b>	10.01 x 3.56 x 0.89 cm
<b>Item Weight</b>	67 Grams



Physical dimensions and weight of the Vormooi V65 Voice Recorder.

## 6. WARRANTY AND SUPPORT

### 6.1 Customer Service

For any questions or issues regarding the Vormooi V65 Voice Recorder, please contact our support team. You can typically find contact information through your purchase platform or by visiting the official Vormooi store online.

When contacting support, please provide your order number and a clear description of the issue for prompt assistance.

## **6.2 Warranty Information**

Vormooi products are covered by a standard manufacturer's warranty. Please refer to the warranty card included with your product or contact customer service for detailed warranty terms and conditions.